

YESHOMY YH-TS23-214LED-WT

YESHOMY LED Corner Fireplace TV Stand with Mood Lighting User Manual

Model: YH-TS23-214LED-WT | Brand: YESHOMY

1. INTRODUCTION AND OVERVIEW

Thank you for choosing the YESHOMY LED Corner Fireplace TV Stand. This versatile furniture piece is designed to optimize space in your living area while providing both entertainment support and ambient heating. It features an 18-inch electric fireplace with adjustable mood lighting, ample storage, and a sturdy construction. This manual provides essential information for safe assembly, operation, and maintenance of your new TV stand.



Image 1.1: The YESHOMY LED Corner Fireplace TV Stand, showcasing its design and integrated fireplace.

2. SAFETY INFORMATION

Please read and understand all safety warnings and instructions before using this product. Failure to follow these instructions may result in electric shock, fire, property damage, or personal injury.

- Always ensure proper ventilation when using the fireplace.
- Keep the product away from flammable materials.
- Do not block the ventilation openings of the fireplace.
- Keep the product out of reach of children and pets.
- Always follow the assembly instructions carefully to avoid injury.
- Do not operate the fireplace if the power cord is damaged or frayed.
- Unplug the fireplace from the power outlet when not in use or during cleaning.

3. PACKAGE CONTENTS

Verify that all components are present and undamaged before beginning assembly. The TV console and electric fireplace are shipped in separate boxes and may arrive at different times.

- TV Stand components (wood panels, hardware)
- Electric Fireplace insert
- Remote control for fireplace
- Assembly Instruction Manual



Image 3.1: Visual representation of the TV stand and fireplace being shipped in two separate packages.

4. ASSEMBLY INSTRUCTIONS

The YESHOMY LED Corner Fireplace TV Stand is designed for easy assembly. A detailed instruction manual with diagrams and a package of screws are included with your product. Please follow the step-by-step guide provided in the dedicated assembly manual for proper construction.

General Assembly Tips:

- Lay out all parts and hardware before starting.
- Use a soft surface to prevent scratching the furniture pieces.
- Ensure all connections are secure but do not overtighten screws.
- The electric fireplace insert is typically installed as one of the final steps.

5. OPERATING INSTRUCTIONS

5.1 Electric Fireplace Operation

The integrated 18-inch electric fireplace offers both aesthetic flame effects and a low-heat mode for warmth. It can be operated using the control panel on the unit or the included remote control.



Image 5.1: The electric fireplace showing its 3D flame effect and control options.

Controls:

- **Power Button:** Turns the fireplace on or off.
- **Flame Button:** Adjusts the brightness or style of the 3D flame effect (multiple levels available).
- **Heat Button:** Activates or deactivates the low-heat mode. The heat output can warm feet in a small space without significantly raising room temperature.
- **Temperature Control:** Adjusts the desired temperature setting (e.g., 60-82°F / 99°F).
- **Timer Function:** Sets an automatic shut-off time for the fireplace (e.g., 0.5-9.0 hours or 7-day timer).

5.2 LED Mood Lighting

The TV stand features 14-level adjustable LED mood lighting to enhance the ambiance of your room. This lighting is separate from the fireplace flame effect.

18" 3D Flame Effect Fireplace

Enjoy the ambiance with or without safe, low-level heat—perfect for warming feet in a small space TV stand.



Image 5.2: The TV stand displaying its 14-color LED mood lighting options.

Adjusting Mood Lighting:

Refer to the specific controls on the unit or the remote control for adjusting the color and brightness of the LED mood lighting. Options typically include a range of colors and intensity levels to suit various preferences.

6. MAINTENANCE

6.1 Cleaning

- Exterior:** Wipe the surfaces of the TV stand with a soft, damp cloth. Avoid harsh chemicals or abrasive cleaners that could damage the finish.
- Fireplace Insert:** Ensure the fireplace is unplugged and cool before cleaning. Gently wipe the glass and exterior with a soft, lint-free cloth. Do not spray liquids directly onto the unit.

6.2 General Care

- Periodically check all screws and connections to ensure they remain tight.
- Avoid placing hot items directly on the wooden surfaces without protective coasters.

- Keep the unit away from direct sunlight and excessive moisture to prevent warping or discoloration.

7. TROUBLESHOOTING

If you encounter any issues with your YESHOMY LED Corner Fireplace TV Stand, please refer to the following common troubleshooting steps:

- **No Power:** Ensure the power cord is securely plugged into a working electrical outlet. Check the circuit breaker.
- **Fireplace Not Heating:** Verify that the heat function is activated on the control panel or remote. Ensure ventilation openings are not blocked.
- **Flame Effect Not Working:** Check if the flame effect is turned on and adjust its brightness settings.
- **Remote Control Not Responding:** Replace the batteries in the remote control. Ensure there are no obstructions between the remote and the fireplace sensor.
- **Unstable Unit:** Recheck all assembly connections and tighten any loose screws. Ensure the unit is placed on a flat, level surface.

For further assistance, please contact YESHOMY customer support.

8. SPECIFICATIONS

Feature	Detail
Brand	YESHOMY
Model Name	Corner Fireplace TV Stand
Item Model Number	YH-TS23-214LED-WT
Product Dimensions	20.1"D x 47.2"W x 31.6"H
Material	Wood
Color	White & Rustic
Item Weight	89 Pounds
Recommended TV Size	Up to 55 inches
Fireplace Type	18" Electric Fireplace with 3D Flame Effect
Lighting Feature	14-level Adjustable LED Mood Lighting
Storage Options	2 cabinets, 1 open shelf
Mounting Type	Floor Mount
Assembly Required	Yes

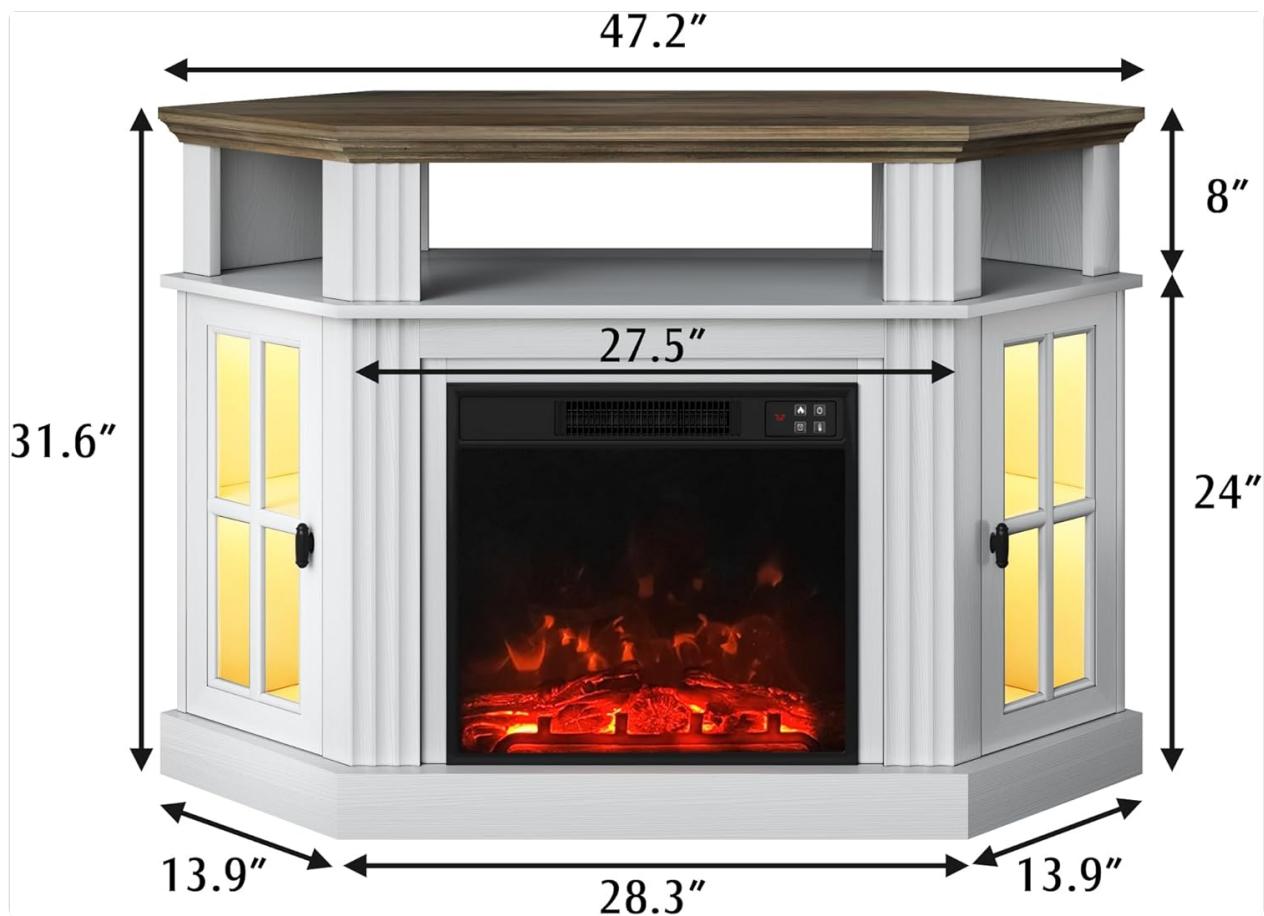


Image 8.1: Detailed dimensions of the TV stand.



Image 8.2: TV placement options for the stand, accommodating various TV types.

9. STORAGE FEATURES

The TV stand is designed with multiple storage options to help organize your media devices and other items.

- **Two Cabinets:** Located on either side of the fireplace, these cabinets feature glass-front showcase doors, ideal for protecting fragile items or displaying decorative pieces.
- **Open Storage Shelf:** An open shelf above the fireplace provides convenient access for game consoles,

DVDs, or other media accessories.

COMPATIBLE WITH 3 TV PLACEMENT TYPES



Image 9.1: Overview of the TV stand's storage capabilities.



Glass-Front Showcase Doors

Protect your treasures in style.

Open-Concept Shelving

Easy access to your essentials.



Image 9.2: Detail of the glass-front cabinets and open shelving.

10. WARRANTY AND SUPPORT

For specific warranty information and details regarding customer support, please refer to the documentation included with your product or visit the official YESHOMY website. Keep your purchase receipt for warranty claims.