



Manuals.plus /

› Danson Décor /

› Danson Decor 1.98M Pre-Lit Green PVC Pine Tree User Manual

Danson Décor 1.98M Pre-Lit Green PVC Pine Tree (2.0M)

Danson Decor 1.98M Pre-Lit Green PVC Pine Tree User Manual

MODEL: 1.98M PRE-LIT GREEN PVC PINE TREE (2.0M)

1. INTRODUCTION

This manual provides instructions for the assembly, operation, maintenance, and troubleshooting of your Danson Decor 1.98M Pre-Lit Green PVC Pine Tree. This artificial Christmas tree features 250 dual-color LED lights with 10 functions and 800 realistic PVC pine tips, supported by a durable metal base. Please read this manual thoroughly before assembly and operation to ensure safe and proper use.

2. SAFETY INFORMATION

- Keep all parts away from children and pets during assembly.
- Ensure the tree is placed on a flat, stable surface to prevent tipping.
- Do not overload electrical outlets. Connect the tree directly to a wall outlet or a surge protector.
- Do not place the tree near heat sources such as fireplaces, heaters, or candles.
- Inspect the power cord and lights for any damage before each use. Do not use if damaged.
- Unplug the tree from the power source when not in use or before performing any maintenance.
- This product is intended for indoor use.

3. PACKAGE CONTENTS

Verify that all components are present before beginning assembly:

- Tree sections (typically 2-3 sections, labeled A, B, C from top to bottom)

- Metal tree stand
- Eye bolts for securing the stand
- Power adapter with foot pedal switch
- Instruction Manual

4. SETUP INSTRUCTIONS

Follow these steps to assemble your pre-lit Christmas tree:

1. **Assemble the Tree Stand:** Unfold the metal tree stand and insert the eye bolts into the holes on the stand. Tighten them slightly to prepare for the tree base.
2. **Insert the Bottom Section:** Carefully insert the bottom tree section (usually labeled 'C' or the largest section) into the assembled tree stand. Tighten the eye bolts firmly to secure the tree section in place.
3. **Connect Middle and Top Sections:** Insert the middle tree section (labeled 'B') into the top of the bottom section. Ensure the electrical connectors between sections are securely plugged together. Then, insert the top tree section (labeled 'A') into the middle section, connecting its electrical wires.
4. **Shape the Branches:** Starting from the bottom, gently pull apart and spread the branches, working your way up the tree. Fluff each branch tip to give the tree a full and natural appearance. Ensure the pre-strung lights are not tangled and are evenly distributed.
5. **Connect to Power:** Plug the tree's power cord into the foot pedal switch, then plug the foot pedal switch into a standard electrical outlet.



1,2 m
4 ft/pi



2 m
6,5 ft/pi



FOOT PEDAL SWITCH PLUG-IN
INTERRUPTEUR À PIED À BRANCHER

Figure 4.1: Tree dimensions and features. The tree is approximately 2 meters (6.5 feet) tall and 1.2 meters (4 feet) wide at the base. It features LED lights, 250 lights, a foot pedal switch, and is plug-in powered.

METAL BASE
BASE EN MÉTAL



800 TIPS
POINTES



Figure 4.2: Details of the metal base and 800 PVC tips, highlighting the tree's stability and full appearance.

Your browser does not support the video tag.

Video 4.3: This video demonstrates the assembly process of a similar pre-lit artificial Christmas tree, including unboxing, connecting sections, and fluffing branches. It provides a visual guide to setting up your tree.

5. OPERATING INSTRUCTIONS

Your Danson Decor Christmas tree features 250 dual-color LED lights with 10 different lighting functions, controlled by a convenient foot pedal switch.

- **Power On/Off:** Press the foot pedal once to turn the lights on. Press it again to turn them off.
- **Change Light Functions:** With the lights on, repeatedly press the foot pedal to cycle through the 10 available lighting functions. These functions include various combinations of warm white and multi-color lights, as well as different flashing and fading patterns.
- **Dual-Color Options:** The tree allows you to easily switch between a warm white glow and vibrant multi-color lights, or a combination of both, to suit your desired ambiance.



Figure 5.1: Illustration of the tree's lighting options: unlit, warm white, and multi-color, demonstrating the dual-color LED functionality.

Your browser does not support the video tag.

Video 5.2: This short video demonstrates the various light functions and color changes of a pre-lit Christmas tree, showcasing the different modes available.

6. MAINTENANCE

- **Cleaning:** To clean the tree, gently wipe the branches with a soft, dry cloth. Do not use harsh chemicals or abrasive cleaners.
- **Light Bulb Replacement:** This tree uses LED lights designed for long life. If a bulb fails, it typically does not affect other lights. Refer to the manufacturer's instructions for specific bulb replacement if necessary.
- **Storage:** Before storing, ensure the tree is completely unplugged and dry. Gently compress the branches and disassemble the tree sections in reverse order of assembly. Store the tree and its components in a cool, dry place, preferably in its original packaging or a dedicated tree storage bag, away from direct sunlight and extreme temperatures.

7. TROUBLESHOOTING

If you encounter any issues with your Christmas tree, refer to the following table:

Problem	Possible Cause	Solution
Lights do not turn on.	Power cord not properly connected; outlet not working; foot pedal switch off.	Ensure all sections are connected and the power cord is securely plugged into the foot pedal and a working outlet. Press the foot pedal to turn on.
Some lights are out.	Loose bulb; damaged wire.	Check for any loose bulbs and gently push them into their sockets. If a section of lights is out, ensure the electrical connection between tree sections is secure.
Tree is unstable.	Stand not properly assembled; eye bolts loose.	Ensure the metal stand is fully unfolded and the eye bolts are tightened securely around the tree pole.
Branches appear sparse.	Branches not fully fluffed.	Spend time carefully separating and shaping each branch tip to achieve a full appearance.

8. SPECIFICATIONS

Feature	Detail
Brand	Danson Décor
Model	1.98M Pre-Lit Green PVC Pine Tree (2.0M)
Height	1.98 meters (approximately 6.5 feet)
Material	PVC (Polyethylene)
Number of Tips	800
Lights Type	LED, Dual-Colour (Warm White & Multi-Color)
Number of Lights	250
Light Functions	10
Base Type	Durable Metal Stand
Control	Foot Pedal Switch
Item Weight	5 kg
Product Dimensions (Packaged)	95 x 20 x 20 cm

9. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the product packaging or contact Danson Décor customer service directly. Keep your purchase receipt as proof of purchase.