

## Qraxond C02

# Qraxond Interactive Cat Toy Model C02 Instruction Manual

Model: C02

## INTRODUCTION

The Qraxond Interactive Cat Toy Model C02 is designed to provide engaging play for indoor cats. It features dual motors for random rotation of a fluttering butterfly and a plush tail, simulating a hide-and-seek game. The toy is rechargeable and includes touch-sensitive activation with adjustable speed modes.



Figure 1: Overview of the Qraxond Interactive Cat Toy with multiple play modes.

## SAFETY INFORMATION

- This product is intended for pet use only. Keep out of reach of children.
- Inspect the toy regularly for damage. Discontinue use if any part becomes loose or broken to prevent choking hazards.
- Ensure the toy is placed on a flat, stable surface during operation.
- Use only the provided USB cable for charging. Do not use a power adapter exceeding 5V.
- Do not immerse the main unit in water. The cover cloth is washable, but the electronic components are not.

## PACKAGE CONTENTS

Verify that all items are present in the package:

- Interactive hide-and-seek cat toy main unit ×1
- Plush tail wand attachment ×1
- USB charging cable ×1
- Instruction manual ×1

## SETUP

### Assembly

1. **Install the Plush Tail Wand:** Locate the opening on the cover cloth. Insert the plush tail wand firmly into the plastic protrusion until you hear a "click." This ensures it is securely locked in place.
2. **Install the Fluttering Butterfly:** Align and insert the steel wire base of the butterfly accessory into the main unit's center groove at the correct angle.

## Easy to Install, Use & Disassemble



- 1** Insert firmly Plush Tail Swing Rod into main unit's plastic protrusion – until a "click"



- 2** Align and insert Steel Wire Butterfly's plastic base into main unit's groove at correct angle



- 3** Press the left (flying butterfly) or right (colorful tail) silicone switch to start happy time



- 1** Unscrew circular plastic piece on main unit front (CCW), remove cover cloth top opening



- 2** Turn the product over to the back, repeat the operation of step 1



- 3** Separate the main unit and the cover cloth, the cover cloth can be cleaned.

Figure 2: Step-by-step guide for installing the plush tail wand and fluttering butterfly.

## OPERATING INSTRUCTIONS

### Power On/Off and Mode Selection

The main unit features two buttons: one for the butterfly (left) and one for the plush tail (right).

- **To Activate:** Press either the left or right silicone switch to start the toy.
- **Speed Modes:** Each button allows you to cycle through three speed settings:
  - **Steady (Blue Light):** For calm cats.
  - **Active (Purple Light):** For high-energy cats.
  - **Random (Yellow Light):** For active cats, offering varied play.
- **Touch-Sensitive Activation:** The toy features smart touch-sensor technology. Simply tap the device to initiate a 5-minute automatic play session. After this, it enters a 1.5-hour rest period (all indicator lights flash). Following the rest period, it moves to standby mode (purple light flashes every 5 seconds). Tap again to reactivate. This cycle prevents overstimulation and conserves power.
- **Bird Chirping Sound:** The built-in speaker emits realistic bird chirps to attract your cat's attention. This feature is integrated into the play modes.



Figure 3: Control panel with mode indicators.



Figure 4: Explanation of the touch-sensing auto-on feature and play cycle.

## CHARGING THE BATTERY

The toy is equipped with a built-in 1200mAh rechargeable battery.

1. **Locate the Charging Port:** Gently lift the silicone cover located on the power button area of the main unit. This will reveal the Type-C charging port.
2. **Connect the Charger:** Insert the included USB charging cable into the Type-C port. Connect the other end to a 5V USB power adapter (not included).
3. **Charging Indicator:** The indicator light will show charging status (e.g., red for charging, green for fully charged).
4. **Charging Time:** A full charge takes approximately 2.5 hours and provides up to 3 days of playtime, depending on usage.



Figure 5: Steps for charging the toy.

## MAINTENANCE

### Cleaning the Cover Cloth

The cover cloth is washable for hygiene. To clean, you must first disassemble the toy:

1. **Remove Accessories:** First, pull out the plush tail wand. Then, carefully pull out the steel wire butterfly accessory from the main unit.
2. **Unscrew Fixed Rings (Front):** Unscrew the circular plastic piece (fixed ring) on the main unit's front counter-clockwise. Remove the cover cloth from the top opening.
3. **Unscrew Fixed Rings (Back):** Flip the main unit over. Unscrew the other fixed ring on the back.
4. **Separate Main Unit and Cover:** Disengage the center of the cover cloth from the three stoppers on the main unit and remove the cover cloth.
5. **Wash and Dry:** The cover cloth can be hand-washed or machine-washed on a gentle cycle. Allow it to air dry completely before reassembly.
6. **Reassembly:** Follow the disassembly steps in reverse to reassemble the toy.

# Easy to Install, Use & Disassemble



Figure 6: Disassembly process for cleaning the cover.

## TROUBLESHOOTING

| Problem                            | Solution                                                                                                                                                                          |
|------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Plush tail wand keeps falling out. | Ensure the plush tail wand is pushed firmly into the plastic protrusion until you hear a "click" to secure it.                                                                    |
| Toy does not turn on or respond.   | Check if the battery is charged. Connect the USB cable and charge for 2.5 hours. Ensure the silicone cover over the charging port is properly closed after charging.              |
| Toy stops playing frequently.      | The toy has a built-in 5-minute play session followed by a 1.5-hour rest period to prevent overstimulation and save power. Tap the device to reactivate it after the rest period. |

## SPECIFICATIONS

- **Model Number:** C02
- **Brand:** Qraxond
- **Product Dimensions:** 14 x 7.8 x 14.2 cm
- **Item Weight:** 336 g
- **Material:** Plush + Plastic
- **Battery:** 1200mAh Nonstandard Battery (included)
- **Charging Time:** Approximately 2.5 hours
- **Playtime per Charge:** Up to 3 days (depending on usage)
- **Indoor/Outdoor Usage:** Indoor

## WARRANTY AND SUPPORT

### Warranty Information

This Qraxond product comes with a **1-Year Warranty** from the date of purchase. This warranty covers manufacturing defects and malfunctions under normal use. It does not cover damage caused by misuse, accidents, or unauthorized modifications.

### Customer Support

For any quality issues, technical assistance, or warranty claims, please contact Qraxond customer support via email. We are committed to your complete satisfaction.

#### Manufacturer Contact Information:

Business Name: Shanghai Qiping Technology Co., Ltd.

Business Address: Building 2, No. 181 Songyu Road, Tinglin Town (Jingliang Economic Zone), Jinshan District, Shanghai City, Shanghai, Postal Code: 201505, China

### ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

#### Name

#### Email

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

#### Question

#### Details

Submit question