

## Braun TD5030

# Braun TwinCook 5 TD5030 Air Fryer Instruction Manual

Model: TD5030 | Brand: Braun

## 1. IMPORTANT SAFETY INSTRUCTIONS

Please read all instructions carefully before using the appliance. Retain this manual for future reference.

- Always ensure the appliance is unplugged from the power outlet before cleaning or when not in use.
- Do not immerse the main unit, cord, or plug in water or other liquids to prevent electric shock.
- Supervise children closely when the appliance is in use.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- Keep the appliance and its cord out of reach of children.
- Do not let the cord hang over the edge of a table or counter, or touch hot surfaces.
- Do not place the appliance on or near a hot gas or electric burner, or in a heated oven.
- Always place the appliance on a stable, level, heat-resistant surface.
- Ensure adequate ventilation around the appliance during use. Maintain a minimum distance of 10 cm from walls and other appliances.
- Hot air is released through the air outlet vents. Keep your hands and face at a safe distance from the vents.
- Do not cover the air inlet or outlet vents while the appliance is operating.
- The baskets and internal accessories become hot during use. Always use oven mitts or the handles provided.
- This appliance is for household use only. Do not use it for commercial purposes.
- The ceramic coating is PFAS-free.

## 2. PRODUCT OVERVIEW

The Braun TwinCook 5 TD5030 is a 10-liter dual-basket air fryer designed for efficient and healthy cooking. It features RealAir Technology for even heat distribution and a user-friendly touch control panel.

### Key Components:

- **Main Unit:** Houses the heating elements and control panel.

- **Dual Baskets (2 x 5L):** Removable cooking baskets with ceramic, PFAS-free coating.
- **Control Panel:** Digital touch screen for setting temperature, time, and selecting programs.
- **Air Inlet/Outlet Vents:** For air circulation during operation.



Figure 2.1: Top-down view of the Braun TwinCook 5 TD5030 air fryer with baskets open.

This image displays the Braun TwinCook 5 TD5030 air fryer from a top-down perspective, with both 5-liter cooking baskets pulled out. The digital control panel is visible at the top, showing various settings. The internal grates of the baskets are clearly visible.

### 3. SETUP AND FIRST USE

---

#### Unpacking:

1. Remove all packaging materials, stickers, and labels from the appliance.
2. Check that all components are present and undamaged.

#### Cleaning Before First Use:

1. Wash the cooking baskets and any removable accessories (like crisper plates) in hot, soapy water or in a dishwasher. The ceramic coating is dishwasher safe.
2. Wipe the inside and outside of the main unit with a damp cloth.
3. Ensure all parts are thoroughly dry before use.



Figure 3.1: Preparing food in the air fryer basket.

This image shows a person carefully placing vegetables into one of the air fryer's cooking baskets, demonstrating the preparation step before cooking.

#### **Placement:**

Place the air fryer on a stable, heat-resistant surface, ensuring at least 10 cm of clear space around the appliance for proper ventilation.

## **4. OPERATING INSTRUCTIONS**

---

#### **Basic Operation:**

1. Plug the appliance into a grounded wall outlet. The control panel will illuminate.
2. Pull out the cooking baskets. Place ingredients into the baskets. Do not overfill.
3. Slide the baskets back into the appliance until they click into place.
4. Select your desired cooking mode (e.g., Air Fry, Roast, Bake) or one of the 8 preset programs using the touch controls.
5. Adjust the temperature (80-200°C) and time as needed.
6. Press the Start/Pause button to begin cooking.



Figure 4.1: Using the touch control panel.

This image provides a close-up view of a hand operating the digital touch control panel of the air fryer, highlighting the ease of setting cooking parameters.

#### **Dual-Basket Features:**

- **Sync Finish:** Allows two different foods with different cooking times and temperatures to finish cooking simultaneously. Set each basket's program, then activate Sync Finish. The air fryer will automatically adjust the start times.
- **Sync Cook:** Applies the same cooking settings (temperature and time) to both baskets, ideal for cooking larger quantities of the same food.



Figure 4.2: Dual baskets in use with different foods.

This image shows the air fryer in operation, with both baskets pulled out. One basket contains cooked chicken drumsticks, and the other contains cooked mixed vegetables, demonstrating the dual-zone cooking capability.

## 5. MAINTENANCE AND CLEANING

---

### General Cleaning:

1. Always unplug the air fryer and allow it to cool completely before cleaning.
2. Wipe the exterior of the appliance with a damp cloth. Do not use abrasive cleaners.
3. Clean the interior of the appliance with a damp cloth and mild detergent if necessary.

### Basket and Accessories Cleaning:

The cooking baskets and crisper plates feature a PFAS-free ceramic coating, making them easy to clean.

- They can be washed by hand with warm, soapy water and a non-abrasive sponge.
- Alternatively, they are dishwasher safe for convenient cleaning.



Figure 5.1: Dishwasher-safe baskets.

This image shows the removable cooking baskets being placed into a dishwasher, illustrating their dishwasher-safe design for easy cleaning.

#### Storage:

Store the appliance in a cool, dry place after ensuring all parts are clean and dry.

## 6. TROUBLESHOOTING

Problem	Possible Cause	Solution
Appliance does not turn on.	Not plugged in, power outlet issue, or main unit fault.	Ensure the power cord is securely plugged into a working outlet. Check the circuit breaker. If the problem persists, contact customer support.
Food is not cooked evenly.	Baskets overloaded, insufficient shaking/flipping, or incorrect temperature/time.	Do not overfill baskets. Shake or flip food halfway through cooking. Adjust temperature and time according to recipe or food type.
White smoke coming from the appliance.	Grease residue from previous use, or high-fat food cooking.	Clean baskets and crisper plates thoroughly after each use. For high-fat foods, drain excess fat from the basket during cooking.
Food is not crispy.	Too much moisture in food, not enough oil, or incorrect settings.	Pat food dry before air frying. Lightly coat with oil. Increase cooking time or temperature slightly.

## 7. SPECIFICATIONS

- **Brand:** Braun
- **Model:** TD5030
- **Capacity:** 10 Liters (2 x 5L baskets)
- **Wattage:** 2450 W
- **Voltage:** 240 V
- **Temperature Range:** 80-200°C
- **Material:** Ceramic (PFAS-free coating)
- **Special Features:** RealAir Technology, 8 automatic programs, Touch Control, Dishwasher Safe baskets.
- **Product Dimensions:** 44 x 39 x 32 cm
- **Item Weight:** 10.82 kg

## 8. WARRANTY AND SUPPORT

---

For warranty information, please refer to the warranty card included with your product or visit the official Braun website. Keep your proof of purchase for any warranty claims.

If you encounter any issues not covered in this manual or require further assistance, please contact Braun customer support. Contact details can typically be found on the Braun website or on the product packaging.