

VINABTY V3 Pro

VINABTY V3 Pro Remote Control Instruction Manual

For vSeeBox V2, V3, and V5 Pro Android TV Stream Boxes

1. INTRODUCTION

This manual provides instructions for the VINABTY V3 Pro infrared remote control. This remote is designed as a replacement and compatible with vSeeBox V2, V3, and V5 Pro Android TV Stream Boxes. It operates using infrared technology, requiring no complex programming or setup for basic functions. Its ergonomic design ensures comfortable handling and sensitive button response.

Upgraded Smart Chip, Stable Performance

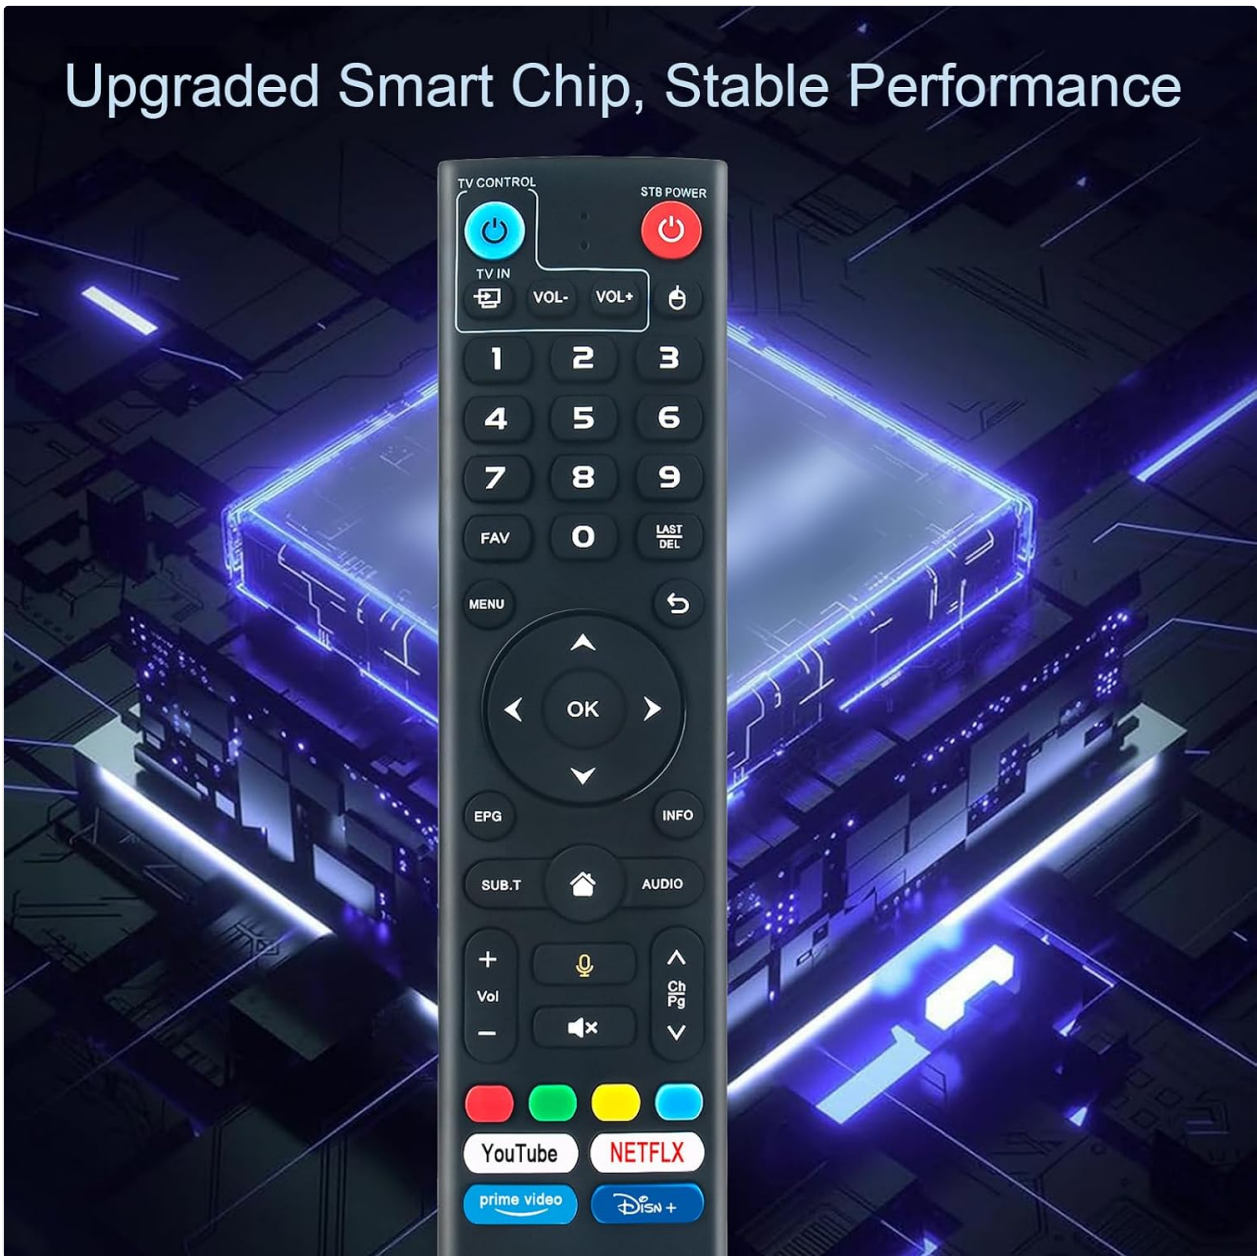 


Image: The VINABTY V3 Pro remote control, highlighting its upgraded smart chip for stable performance.

2. SETUP AND BATTERY INSTALLATION

The VINABTY V3 Pro remote control requires two AAA batteries (not included) for operation. For basic control of compatible vSeeBox models, no additional programming is needed; simply insert the batteries and point the remote towards your device.


2.1 Battery Installation

1. Open the battery compartment cover located on the back of the remote control.
2. Insert two AAA batteries, ensuring the correct polarity (+ and -) as indicated inside the compartment.
3. Close the battery compartment cover securely.

2.2 Programming TV/STB/VCR/DVD Keys (Optional)

This remote control offers the ability to program specific keys to control other devices like your TV, STB, VCR, or DVD player. Follow these steps to program the keys:

How to program  /  /  /
 keys

1. Press and hold  for 5 seconds. The LED goes from blinking to solid and STB RCU enters learning mode.
2. Press the key to be programmed on this RCU. LED begins blinking slowly. The key is ready to accept programming.
3. Aim the TV RCU towards the front of this RCU (distance less than 3cm). Press the button on the TV RCU. If the STB RCU is programmed correctly, the LED will flash 3 times.
4. Repeat steps 2-3 for other keys.
5. Exit learning mode by pressing any other button on this RCU. LED turns off.



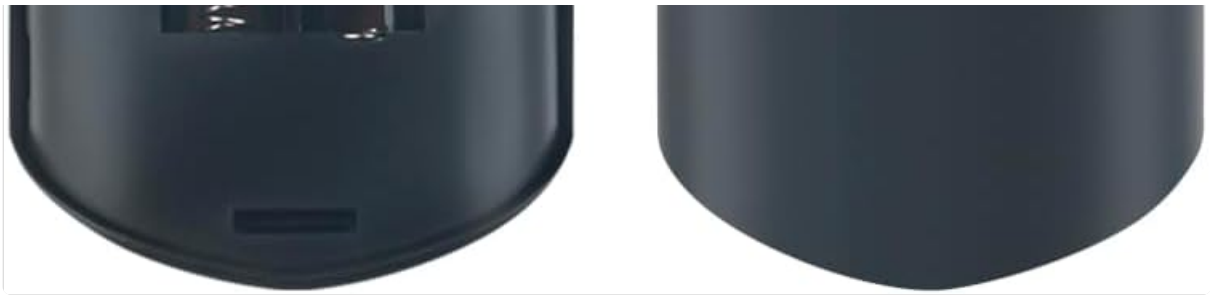 


Image: The back of the VINABTY V3 Pro remote control, illustrating the battery compartment and printed programming instructions.

1. Press and hold the desired device key (e.g., TV, STB, VCR, DVD) for 5 seconds. The LED will begin blinking, then turn solid, indicating the remote is in programming mode.
2. Press the key on the VINABTY remote that you wish to program. The LED will start blinking.
3. Aim your original TV remote control towards the front of the VINABTY remote (approximately 3cm apart). Press the corresponding button on your original TV remote. If programmed correctly, the LED on the VINABTY remote will blink three times.
4. Repeat steps 2-3 for other keys you wish to program.
5. Exit programming mode by pressing any other button on the VINABTY remote. The LED will turn off.

3. OPERATING THE REMOTE CONTROL

The VINABTY V3 Pro remote control features 25 buttons designed for intuitive navigation and control of your vSeeBox device. It utilizes infrared technology, providing a precise control range of up to 10 meters (33 feet).



Long distance precise control

Strongest signal by Infrared technology, further transmission for multi-angle induction. Precisely control far from 10 meters/33 feet.

Image: The VINABTY V3 Pro remote control shown in use with a television, demonstrating its long-distance precise control capability.

3.1 Key Functions Overview

- **Power (TV Control / STB Power):** Turns the TV or vSeeBox on/off.
- **VOL+/-:** Adjusts the volume.
- **Number Keys (0-9):** For direct channel input or numerical selections.
- **Navigation Pad (Up, Down, Left, Right, OK):** For menu navigation and selection.
- **MENU:** Accesses the main menu.
- **FAV:** Accesses favorite channels or content.
- **LAST/DEL:** Returns to the previous channel or deletes input.
- **Return/Back:** Navigates back in menus or content.
- **EPG:** Electronic Program Guide.
- **INFO:** Displays information about current content.
- **SUB.T:** Subtitle control.
- **Home:** Returns to the home screen.
- **AUDIO:** Audio track selection.

- **Mute:** Mutes/unmutes audio.
- **Ch Pg Up/Down:** Changes channels or pages.
- **App Shortcut Buttons (YouTube, Netflix, Prime Video, Disney+):** Direct access to streaming applications.

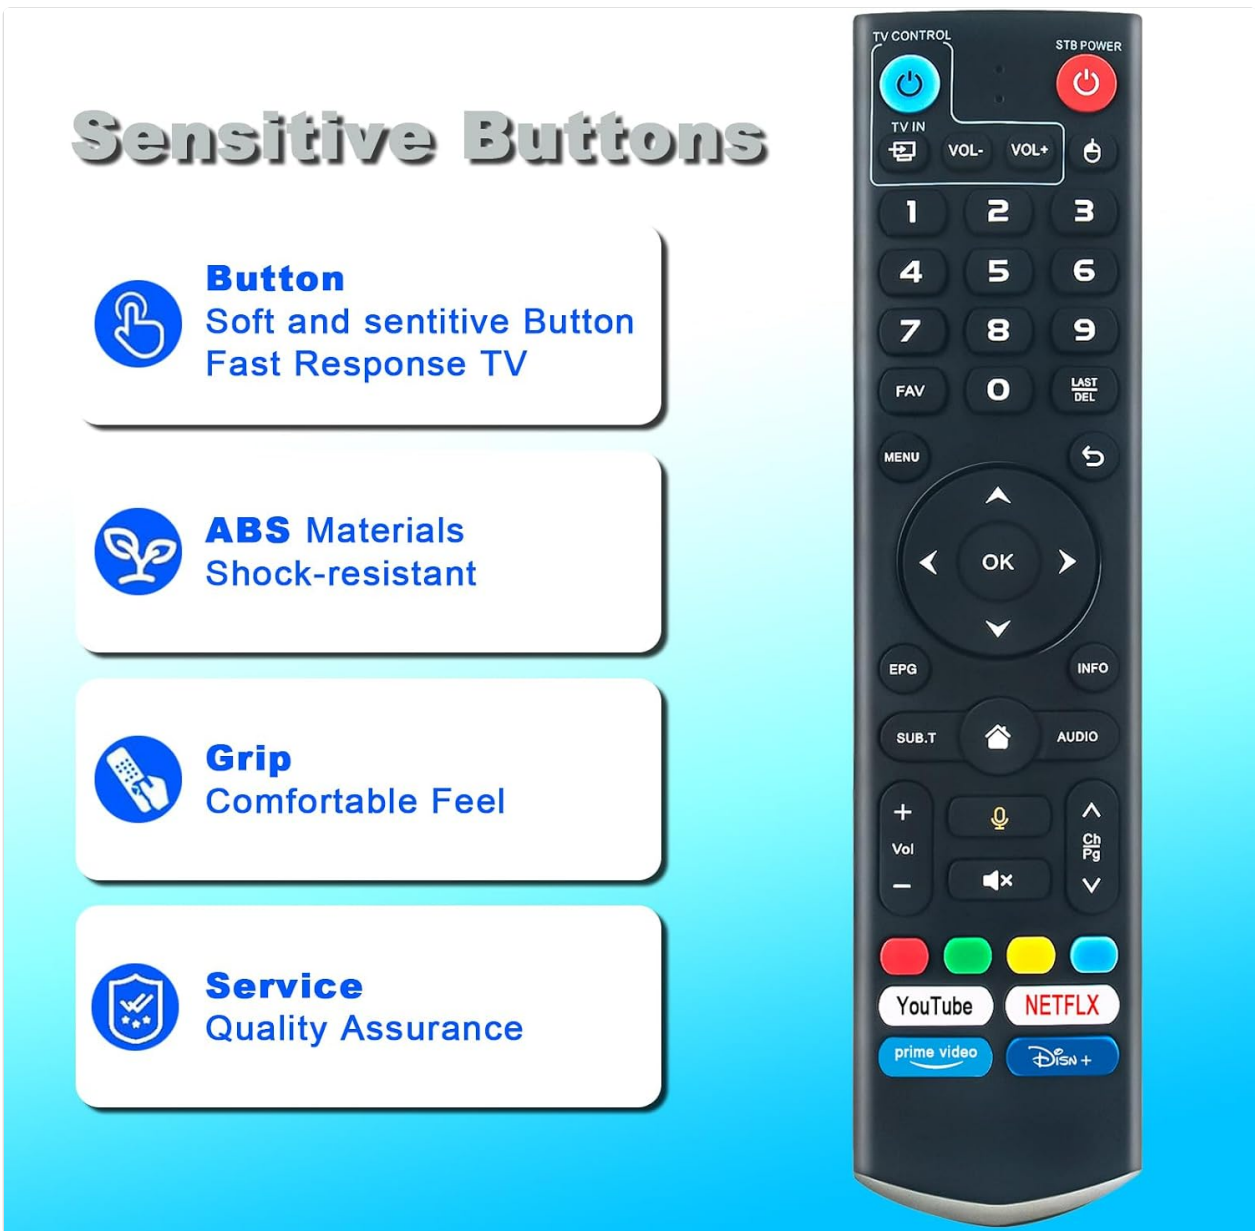 


Image: The VINABTY V3 Pro remote control, highlighting its sensitive buttons, durable ABS material, comfortable grip, and quality assurance.

4. MAINTENANCE

Proper care and maintenance will ensure the longevity and optimal performance of your VINABTY V3 Pro remote control.

4.1 Cleaning

- Wipe the remote control with a soft, dry cloth.
- For stubborn dirt, lightly dampen the cloth with water or a mild, non-abrasive cleaner. Avoid excessive moisture.
- Do not use harsh chemicals, solvents, or abrasive cleaning agents, as these can damage the remote's surface and button labels.

4.2 Battery Replacement

Replace batteries when the remote's response becomes sluggish or it stops functioning. Always replace both batteries simultaneously with new AAA batteries. Do not mix old and new batteries, or different types of batteries.

4.3 Storage

If the remote control will not be used for an extended period, remove the batteries to prevent leakage, which can damage the internal components.

5. TROUBLESHOOTING

If you encounter issues with your VINABTY V3 Pro remote control, refer to the following common troubleshooting steps:

- **Remote not responding:**
 - Check if the batteries are correctly inserted with the proper polarity.
 - Replace old batteries with new ones.
 - Ensure there is a clear line of sight between the remote control and the vSeeBox device. Obstructions can block the infrared signal.
 - Make sure you are within the effective operating range (up to 10 meters).
- **Specific buttons not working:**
 - Clean the remote control, especially around the affected buttons, to remove any dirt or debris that might be obstructing them.
 - If the button was programmed for another device (TV, STB, etc.), ensure the remote is in the correct mode (e.g., TV mode for TV functions).
- **Intermittent control:**
 - This could indicate low battery power. Replace the batteries.
 - Ensure no strong light sources (like direct sunlight or bright fluorescent lights) are interfering with the infrared signal.

6. SPECIFICATIONS

Feature	Detail
Brand	VINABTY
Model Name	V3 Pro (Compatible with V2/V3/V5 Pro)
Connectivity Technology	Infrared
Number of Buttons	25
Compatible Devices	vSeeBox V2, V3, V5 Pro
Maximum Range	10 Meters (33 feet)

Material	ABS (Acrylonitrile Butadiene Styrene)
Weight	60 Grams
Dimensions (L x W x H)	18L x 4l x 1H centimeters (approx. 7.09 x 1.57 x 0.39 inches)





Image: The VINABTY V3 Pro remote control displaying its physical dimensions: 4.8 cm (1.89 in) width and 20.2 cm (7.95 in) length.

7. SUPPORT

For any questions or issues regarding your VINABTY V3 Pro remote control, please contact the seller or manufacturer. They are committed to providing a satisfactory solution within 24 hours for any problems you may encounter.