



Manuals.plus /

› Olvy /

› Olvy Electric Kettle 1.7L Instruction Manual

Olvy 58594510045533

Olvy Electric Kettle 1.7L Instruction Manual

Model: 58594510045533

1. IMPORTANT SAFETY INSTRUCTIONS

Please read all instructions carefully before using your Olvy Electric Kettle. Retain this manual for future reference.

- Do not immerse the kettle, power base, cord, or plug in water or other liquids.
- Ensure the kettle is placed on a stable, flat, heat-resistant surface, away from the edge of the countertop.
- Do not operate the kettle if the cord or plug is damaged, or if the kettle malfunctions or has been damaged in any way.
- Always ensure the lid is securely closed before operating the kettle.
- Do not fill above the maximum fill line or below the minimum fill line.
- Exercise caution when pouring hot water.
- The kettle's exterior is cool-to-touch, but steam escaping from the spout or lid can be hot.
- Unplug the kettle from the outlet when not in use and before cleaning.
- This appliance is for household use only.

2. PRODUCT OVERVIEW

The Olvy Electric Kettle is designed for efficient and precise water heating. It features a 1.7-liter capacity, 2200W power, and a double-wall stainless steel construction for safety and insulation.



Figure 2.1: Olvy Electric Kettle highlighting key features such as live temperature display, child-safe design, 360-degree rotatable base, and double insulation.

Key Features:

- **Precise Temperature Control:** Select from 40°C, 70°C, 80°C, 90°C, or 100°C for various beverages and needs.
- **Keep Warm Function:** Maintains the selected temperature for up to 2 hours.
- **Fast Boiling:** 2200W power boils 1.7 liters of water in minutes.
- **Double Wall Design:** Stainless steel interior with a cool-touch exterior for safety and improved insulation.
- **Safety Features:** Automatic shut-off, boil-dry protection, and a heat-resistant handle.
- **Convenience:** Removable anti-limescale filter, 360° rotating power base, and a clear water level indicator.
- **Smart LCD Touchscreen:** Intuitive display for easy operation and temperature selection.
- **BPA-Free:** Ensures water quality and safety.



Figure 2.2: The kettle's cool-touch exterior and boil-dry protection enhance user safety.

3. SETUP

3.1 Unpacking

1. Carefully remove the kettle and all accessories from the packaging.
2. Dispose of all packaging materials responsibly.
3. Inspect the kettle for any signs of damage. Do not use if damaged.

3.2 Initial Cleaning (Before First Use)

1. Fill the kettle with clean water up to the maximum fill line.
2. Boil the water at 100°C (refer to Section 4.2 for operating instructions).
3. Discard the boiled water.
4. Repeat this process 2-3 times to ensure the kettle is thoroughly cleaned and free of any manufacturing residues.

3.3 Placement

- Place the power base on a dry, flat, and stable surface.
- Ensure the power cord is not dangling or in a position where it can be tripped over.
- Keep the kettle away from heat sources, direct sunlight, and moisture.

4. OPERATING INSTRUCTIONS

4.1 Filling the Kettle

1. Remove the kettle from its power base.
2. Open the lid.
3. Fill the kettle with fresh, cold water. Do not fill below the minimum (MIN) mark or above the maximum (MAX) mark indicated on the water level indicator.
4. Close the lid securely.
5. Place the kettle back onto its power base.

4.2 Selecting Temperature and Boiling



Figure 4.1: The smart LCD touchscreen display allows for easy temperature selection and operation.

1. Plug the power base into a suitable electrical outlet. The display will illuminate.
2. On the touchscreen display, select your desired temperature: 40°C, 70°C, 80°C, 90°C, or 100°C. You can also use the '+' and '-' buttons to fine-tune the temperature up to 100°C.
3. Press the power button () to start the heating process. The display will show the current water temperature as it heats.
4. Once the selected temperature is reached, the kettle will automatically shut off.

Always the right temperature

 **40°C / 70°C / 80°C / 90°C**

Too hot – 100°C





Too cold – 25°C



 **Or set the temperature yourself up to 100°C**

Figure 4.2: Optimal temperatures for various uses, from baby formula to boiling water for tea.

4.3 Using the Keep Warm Function

1. After selecting your desired temperature and starting the heating process, press the 'Keep Warm' button (often indicated by 'SSS' or a similar icon) on the touchscreen.
2. The kettle will heat the water to the selected temperature and then maintain it for up to 2 hours.
3. To deactivate the 'Keep Warm' function, press the button again or remove the kettle from the base.



Figure 4.3: The kettle's keep-warm function maintains temperature for extended periods.

5. MAINTENANCE

5.1 Cleaning the Exterior

- Always unplug the kettle and allow it to cool completely before cleaning.
- Wipe the exterior of the kettle with a soft, damp cloth.
- Do not use abrasive cleaners or scouring pads, as they may scratch the surface.
- Never immerse the kettle or its power base in water.

5.2 Descaling

Mineral deposits (limescale) can build up inside the kettle, especially in hard water areas. Regular descaling helps maintain performance and prolong the kettle's lifespan.

1. Fill the kettle with a mixture of one part white vinegar and two parts water, or use a commercial descaling solution according to its instructions.
2. Boil the solution (at 100°C) and let it stand for at least 30 minutes, or longer if the scale is heavy.
3. Pour out the solution and rinse the kettle thoroughly with fresh water several times.

4. For stubborn deposits, gently scrub the interior with a non-abrasive brush or sponge.
5. The anti-limescale filter can be removed for cleaning. Rinse it under running water and reinsert it correctly.

5.3 Storage

When not in use, ensure the kettle is clean, dry, and unplugged. Store it in a cool, dry place.

6. TROUBLESHOOTING

If you encounter issues with your Olvy Electric Kettle, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Kettle does not turn on.	No power supply. Kettle not properly seated on base.	Check if the plug is securely in the outlet. Ensure the kettle is correctly placed on the power base.
Water is not heating.	Lid not closed. Boil-dry protection activated.	Ensure the lid is fully closed. If boil-dry protection activated, remove kettle, let it cool, then refill and restart.
Water has an unusual taste.	New kettle residue. Mineral deposits.	Perform initial cleaning steps (Section 3.2). Descale the kettle (Section 5.2).
Kettle switches off too soon.	Excessive limescale buildup.	Descale the kettle thoroughly (Section 5.2).

7. SPECIFICATIONS

Feature	Specification
Brand	Olvy
Model Number	58594510045533
Capacity	1.7 Liters
Wattage	2200 Watts
Color	White
Product Dimensions (L x W x H)	6.3" x 4.72" x 8.66"
Material	Double Wall Stainless Steel
Temperature Settings	40°C, 70°C, 80°C, 90°C, 100°C (adjustable)
Keep Warm Function	Up to 2 hours

Always enough for everyone



Figure 7.1: Kettle dimensions and 1.7L capacity, suitable for approximately 8 cups.

8. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the warranty card included with your product or contact Olvy customer service through the retailer where the product was purchased. Please have your model number (58594510045533) and purchase date available when contacting support.