

NOMA 251-1012-8

NOMA Outdoor C6 LED Christmas Lights (Model 251-1012-8) - User Manual

INTRODUCTION

Thank you for choosing NOMA Outdoor C6 LED Christmas Lights. This manual provides essential information for the safe and effective installation, operation, and maintenance of your new lighting product. Please read all instructions carefully before use and retain this manual for future reference. These energy-efficient LED string lights feature 70 blue and pure white C6 bulbs, designed for both indoor and outdoor holiday decoration. The string measures 23 feet 8 inches in length and includes a twinkling special feature.

SAFETY INFORMATION

WARNING: To reduce the risk of fire and electric shock:

- Do not install on trees having needles, leaves, or branch coverings of metal or materials that look like metal.
- Do not mount or support strings in a manner that can cut or damage wire insulation.
- Do not connect more than 45 sets of these lights together to one outlet.
- Always unplug the lights when not in use or before replacing bulbs or fuses.
- Ensure all connections are secure and protected from moisture when used outdoors.
- Use only with 120V power supply.

PACKAGE CONTENTS

Your NOMA Outdoor C6 LED Christmas Lights package includes:

- 1 x NOMA Outdoor C6 LED String Lights (70 Blue/Pure White bulbs, 23 ft 8 inches)
- 1 x Spare Fuse
- 2 x Spare Bulbs



Image: The NOMA Outdoor C6 LED Christmas Lights product box, displaying key features and bulb count.

SETUP

Follow these steps to set up your NOMA LED Christmas Lights:

1. **Unpack:** Carefully remove the light string from its packaging. Untangle the string gently to avoid damaging the wires or bulbs.
2. **Inspect:** Before plugging in, inspect the entire light string for any signs of damage, such as frayed wires, cracked bulbs, or loose connections. Do not use if damaged.
3. **Placement:** Determine your desired display location. These lights are suitable for outdoor use on trees, banisters, windows, doors, fences, pathways, and rooflines. Ensure the chosen location is within reach of a power outlet.
4. **Mounting:** Secure the light string using appropriate clips or ties. Avoid stapling or nailing through the wire insulation. Ensure bulbs are facing the desired direction for optimal illumination.
5. **Connecting Multiple Sets:** If you need a longer display, you can connect up to 45 sets of these lights end-to-end. Locate the male plug at one end and the female receptacle at the other. Align and firmly push the plugs together. Ensure the connection is tight to prevent moisture ingress, especially for outdoor use.
6. **Power Connection:** Plug the light string into a standard 120V electrical outlet.

OPERATING INSTRUCTIONS

Your NOMA Outdoor C6 LED Christmas Lights are designed for simple operation:

- **Power On/Off:** Plug the light string into a power outlet to turn it on. Unplug it to turn it off.
- **Twinkling Feature:** These lights feature a built-in twinkling effect, providing a dynamic and festive display.

Your browser does not support the video tag.

Video: An example of blue Christmas lights in an outdoor setting, demonstrating their visual effect.

Your browser does not support the video tag.

Video: A demonstration of C6 cold white LED string lights, showcasing their appearance for Christmas decoration.

MAINTENANCE

Proper maintenance ensures the longevity and performance of your lights:

- **Bulb Replacement:** If a bulb burns out, replace it promptly with a spare bulb of the same type and voltage. Unplug the string before replacing. Gently twist the old bulb out and insert the new one.
- **Fuse Replacement:** If the entire string fails to light, check the fuse located in the plug. Unplug the string, slide open the fuse compartment, and replace the blown fuse with the spare provided.
- **Cleaning:** Wipe bulbs and wires with a soft, dry cloth. Do not use harsh chemicals or abrasive cleaners.
- **Storage:** When not in use, carefully coil the light string and store it in a cool, dry place, away from direct sunlight and extreme temperatures. Keep it in its original packaging or a protective container to prevent tangling and damage.

TROUBLESHOOTING

If your NOMA LED Christmas Lights are not functioning as expected, refer to the following common issues and solutions:

- **Lights Not Turning On:**
 - Check if the plug is securely inserted into a working 120V outlet.
 - Inspect the fuse in the plug and replace if blown (refer to Maintenance section).
 - Check for any loose or damaged bulbs. Replace any faulty bulbs.
- **Partial String Not Lighting:**
 - Locate and replace any burnt-out or loose bulbs in the affected section.
 - Check for any breaks or cuts in the wiring. If damage is found, discontinue use and replace the string.
- **Lights Flickering (other than twinkling effect):**
 - Ensure all bulb connections are tight.
 - Check the power source for stability.

If troubleshooting steps do not resolve the issue, please contact customer support.

SPECIFICATIONS

Feature	Detail
Brand	NOMA
Model Number	251-1012-8
Bulb Type	C6 LED
Number of Lights	70
Light Color	Blue, Pure White
Length	23 ft 8 inches (7.2 m)
Lighted Length	23 ft (7 m)
Approx. Space Between Bulbs	4 inches (10.2 cm)
Total Wattage	4.8 W
Indoor/Outdoor Usage	Outdoor
Special Feature	Twinkling, Energy Efficient
Power Source	Corded Electric
Material	Plastic
Manufacturer	NOMA
ASIN	B0FSGR4P3K

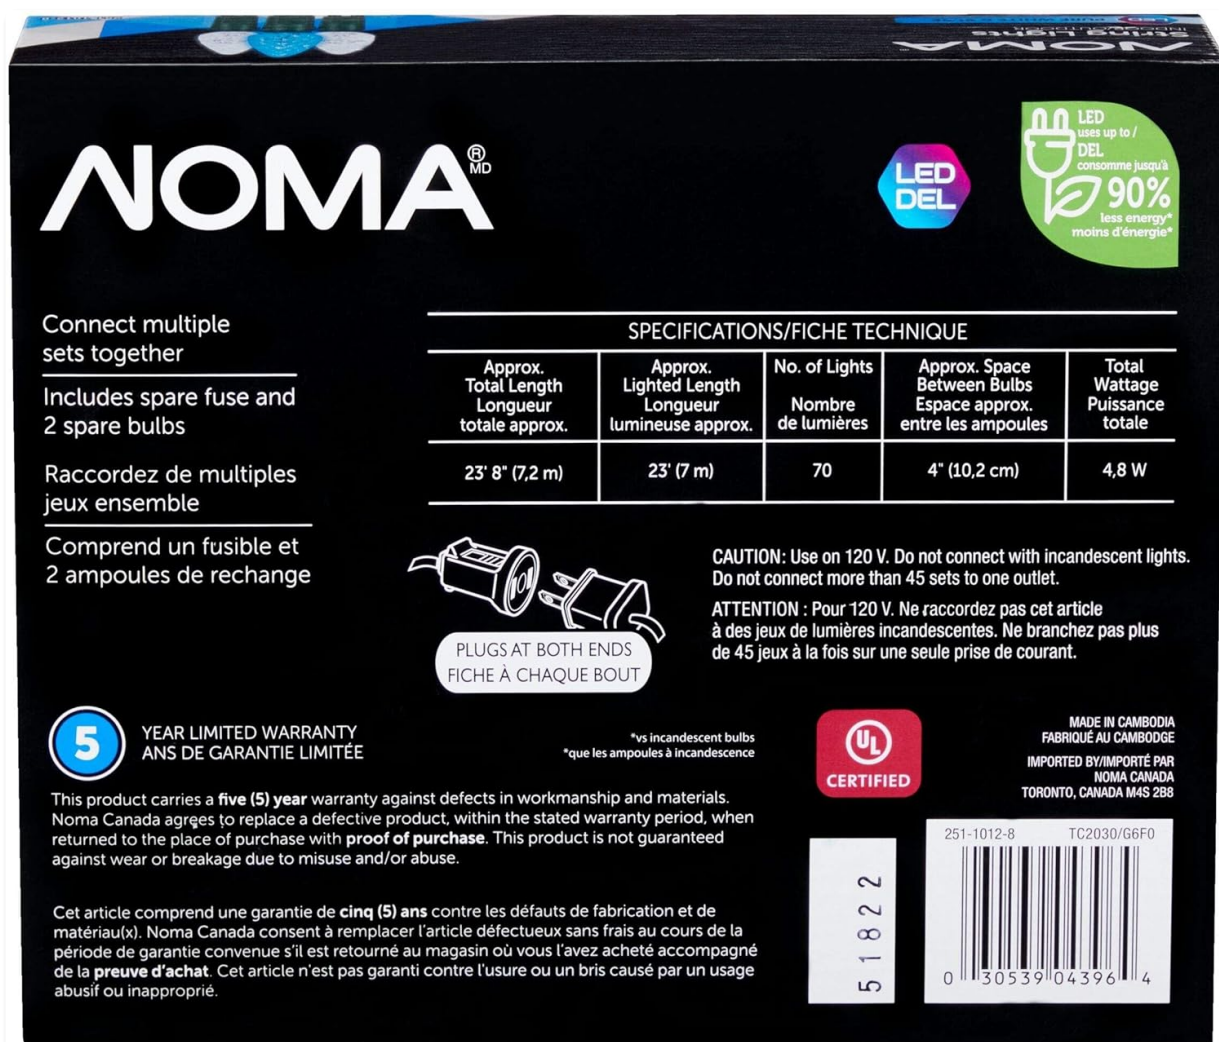 




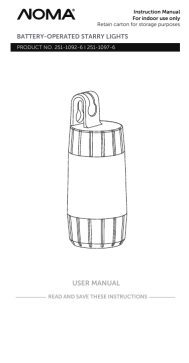 
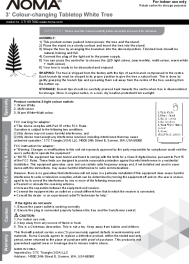 

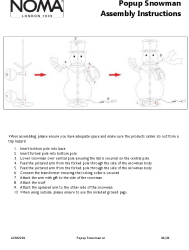 
Image: The back of the product box, detailing specifications and warnings.

WARRANTY

This product is covered by a **5 Year Limited Warranty** against defects in workmanship and materials. NOMA Canada agrees to replace a defective product, within the stated warranty period, when returned to the place of purchase with proof of purchase. This product is not guaranteed against wear or breakage due to misuse and/or abuse.

SUPPORT

For further assistance or inquiries regarding your NOMA Outdoor C6 LED Christmas Lights, please refer to the contact information provided on the product packaging or visit the official NOMA Canada website.

	<p>NOMA Advanced Christmas Voice Command String Lights User Guide</p> <p>User guide for NOMA Advanced Christmas Voice Command String Lights, covering app setup, smart home assistant pairing (Google Home, Amazon Echo), and basic operation for indoor and outdoor use.</p>
	<p>NOMA Advanced Christmas String Lights User Guide: Setup, App Control & Voice Commands</p> <p>Comprehensive user guide for NOMA Advanced Voice Command Christmas String Lights. Learn how to set up, control via the NOMA app, and integrate with Google Home and Amazon Alexa for smart holiday lighting.</p>
	<p>NOMA Battery-Operated Starry Lights User Manual & Safety Guide</p> <p>Comprehensive user manual and safety instructions for NOMA Battery-Operated Starry Lights (Models 251-1092-6 and 251-1097-6). Learn about installation, operation, battery replacement, and safety precautions for indoor use.</p>
	<p>NOMA 3' Colour-changing Tabletop White Tree Instruction Manual (CT11517082)</p> <p>User manual for the NOMA 3-foot Colour-changing Tabletop White Tree (model CT11517082). Provides assembly, shaping, storage instructions, FCC compliance details, and warranty information for indoor use.</p>
	<p>NOMA 251-1061-0 Light Show String Lights Instruction Manual</p> <p>Official instruction manual for NOMA 251-1061-0 Light Show String Lights. Includes setup, functions, warnings, care instructions, troubleshooting, and warranty information for indoor use.</p>
	<p>NOMA Popup Snowman Assembly Instructions and Safety Guide</p> <p>Comprehensive assembly instructions, safety warnings, and usage guidelines for the NOMA Popup Snowman (LGNM201). Ensure safe and proper setup for your seasonal decoration.</p>