



[Manuals.plus](#) /

> [iDance](#) /

> iDance DJ Mixer Set Remix DJ2 Instruction Manual

**iDance 4894367025013**

# iDance DJ Mixer Set Remix DJ2

## INSTRUCTION MANUAL

### Introduction

---

Thank you for purchasing the iDance DJ Mixer Set Remix DJ2. This manual provides essential information for the safe and optimal use of your new DJ mixer. Please read these instructions carefully before operating the device and retain them for future reference.

### Product Overview

---

The iDance DJ Mixer Set Remix DJ2 is an all-in-one DJ system designed for creating and mixing music. It features integrated light and sound effects, a beatmaker, and various connectivity options for a dynamic audio experience.



**Figure 1:** The iDance DJ Mixer Set Remix DJ2. This image displays the main unit with its central beatmaker pad section, two illuminated turntable-style areas, and control knobs on the right side.

### Key Components:

- **Beatmaker Pad Section:** Central area with multiple illuminated pads for triggering samples and beats.
- **Turntable-Style Areas:** Two circular areas with integrated lights, simulating DJ turntables.
- **Control Knobs and Buttons:** For adjusting volume, effects, and playback.
- **Connectivity Ports:** For power, audio input/output, and microphone.

### Setup

---

1. **Unpacking:** Carefully remove all components from the packaging. Ensure all parts are present. The package includes the DJ mixer unit and a wired microphone.



Figure 2: Product packaging for the iDance DJ Mixer Set Remix DJ2. The box shows the product, its features, and included accessories like a wired microphone.

2. **Power Connection:** Connect the provided power adapter to the DC IN port on the rear of the unit and then to a suitable power outlet.
3. **Audio Connections:**
  - **AUX Input:** Connect external audio sources (e.g., smartphone, tablet) to the AUX IN port using a 3.5mm audio cable.
  - **Microphone:** Plug the wired microphone into the MIC IN port.
  - **Headphones:** For private monitoring, connect headphones to the HEADPHONES OUT port.
4. **Placement:** Place the unit on a stable, flat surface, ensuring adequate ventilation around the device.

## Operating Instructions

1. **Power On/Off:** Press the POWER button to turn the unit on. The integrated lights will illuminate. Press again to turn off.
2. **Volume Control:** Use the MASTER VOLUME knob to adjust the overall output volume. Individual channel volumes may also be available.
3. **Beatmaker Pads:** The central pad section features 36 sound pads. Press these pads to trigger various samples, drum sounds, and effects. Refer to the on-screen display (if applicable) or included quick guide for pad assignments.
4. **Loop Playback:** The unit includes 18 built-in loops. Use the designated LOOP buttons to select and activate loops.
5. **DJ Effects:** Utilize the effect knobs and buttons (e.g., ECHO, REVERB) to apply real-time audio effects to your mix.
6. **Microphone Usage:** Speak into the connected microphone. Adjust the MIC VOLUME knob for appropriate vocal levels. Some models may include voice changer effects.
7. **Bluetooth Connectivity:** Activate Bluetooth on your external device and search for 'iDance Remix DJ2'. Pair

the devices to stream audio wirelessly.

8. **Light Effects:** The integrated lights on the turntable-style areas and pads will react to the music and effects. Some models may offer customizable light patterns.

## Maintenance

---

- **Cleaning:** Use a soft, dry cloth to clean the surface of the unit. Do not use abrasive cleaners, waxes, or solvents.
- **Storage:** When not in use, store the unit in a cool, dry place away from direct sunlight and extreme temperatures.
- **Power Cord:** Always unplug the power cord by gripping the plug, not the cable.

## Troubleshooting

---

Problem	Possible Cause	Solution
No power	Power adapter not connected; Power outlet faulty	Ensure power adapter is securely connected; Try a different power outlet.
No sound output	Volume too low; Incorrect audio source selected; Cables loose	Increase MASTER VOLUME; Check AUX/Bluetooth source selection; Ensure all audio cables are securely connected.
Microphone not working	Microphone not connected; MIC VOLUME too low	Ensure microphone is fully plugged in; Increase MIC VOLUME.
Bluetooth not pairing	Device too far; Bluetooth not enabled on external device	Move external device closer; Ensure Bluetooth is enabled and discoverable on your device.

## Specifications

---

- **Model Number:** 4894367025013
- **Product Dimensions:** 60 x 15 x 26 cm
- **Manufacturer:** iDance
- **Country of Origin:** Germany
- **Included Components:** 1 x DJ Mixer Set, 1 x Wired Microphone
- **Number of Items:** 1

## Safety Information

---

**WARNING: Not suitable for children under 3 years due to small parts and potential choking hazards. Adult supervision is recommended for all users.**

- Do not expose the unit to water or excessive moisture.
- Avoid placing the unit near heat sources or in direct sunlight.
- Do not attempt to disassemble or modify the unit. Refer all servicing to qualified personnel.

## Warranty and Support

---

iDance products are manufactured to high-quality standards. For warranty information, technical support, or service inquiries, please refer to the warranty card included with your product or visit the official iDance website. Please

have your model number (4894367025013) and purchase details ready when contacting support.