

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [EPOMAKER](#) /

› [EPOMAKER X Aula G7 Pro Wireless Gaming Headset Instruction Manual](#)

EPOMAKER G7 Pro

EPOMAKER X Aula G7 Pro Wireless Gaming Headset Instruction Manual

Model: G7 Pro | Brand: EPOMAKER

1. INTRODUCTION

The EPOMAKER X Aula G7 Pro is a versatile wireless gaming headset designed for an immersive audio experience across multiple platforms. Featuring dual-mode connectivity (2.4GHz and Bluetooth 5.3), 7.1 surround sound, a long-lasting battery, and a noise-canceling microphone, it provides clear communication and precise audio cues for gaming and multimedia use.

2. PACKAGE CONTENTS

Ensure all items are present in the box:

- EPOMAKER X Aula G7 Pro Headset
- USB Wireless Dongle
- USB Charging Cable
- User Manual

3. PRODUCT OVERVIEW

Familiarize yourself with the headset's components and controls.



The EPOMAKER X Aula G7 Pro Wireless Gaming Headset in its white color variant, showcasing its sleek design and detachable microphone.



G7 PRO

Wireless Gaming Headset



C-Media
Chip



FPS Game
Sound Effect



EQ
Adjustment



7.1 Surround
Sound



Noise
Cancellation



Wireless Low-
Latency

An overview of the headset's advanced features, including its C-Media chip for professional-grade sound, 7.1 surround sound capability, noise cancellation, and low-latency wireless performance.



<20ms

Ultra-Low Latency



2.4GHz

Stable & Lag-Free



80+ Hour

1000 mAh

Close-up of the left earcup, detailing the volume roller, 2.4G/Bluetooth mode switch, power button, and USB-C charging port for easy access and control.

EASY TO OPERATE

Master in Seconds



Intuitive Switch
Easy To Operate



Detachable Headset
Plug And Play



USB-C Port
Stable Input

Highlights the headset's user-friendly operation with an intuitive switch for modes, a detachable microphone for versatility, and a stable USB-C port for charging and wired connection.

40MM DYNAMIC DRIVER UNIT

Accurate Positioning



An internal view of the 40mm dynamic driver unit, designed for accurate audio positioning and immersive sound experiences in gaming.

4. SETUP

4.1. 2.4GHz Wireless Connection (PC, PS5/PS4, Switch)

1. Plug the USB Wireless Dongle into an available USB port on your desired device.
2. Power on the headset by pressing and holding the power button.
3. Slide the mode switch on the headset to the '2.4G' position.
4. The headset should automatically pair with the dongle. An indicator light will confirm connection.

4.2. Bluetooth 5.3 Connection (PC, Switch, Mobile Devices)

1. Power on the headset by pressing and holding the power button.
2. Slide the mode switch on the headset to the 'BT' (Bluetooth) position.
3. Enable Bluetooth on your compatible device (PC, Switch, smartphone, tablet).
4. Search for available Bluetooth devices and select "EPOMAKER G7 Pro" to pair. An indicator light will confirm successful pairing.

4.3. 3.5mm Wired Connection (PC, PS5/PS4, Switch, Mobile Devices)

1. Connect one end of the 3.5mm audio cable to the headset's 3.5mm jack.
2. Connect the other end of the 3.5mm audio cable to the audio output port of your desired device.
3. No power is required for wired mode, but some features like RGB lighting may not function.



Diagram illustrating the headset's tri-mode connection options: 2.4G wireless mode, Bluetooth 5.4, and 3.5mm wired connection, compatible with various devices including PCs, PlayStations, and Nintendo Switch.

5. OPERATING INSTRUCTIONS

5.1. Power On/Off

- Press and hold the power button (located on the left earcup) for approximately 3 seconds to power on or off the headset.

5.2. Volume Control

- Use the volume roller/dial (located on the left earcup) to adjust the audio output level. Scroll up to increase volume, scroll down to decrease.

5.3. Microphone Mute/Unmute

- The headset features a detachable noise-canceling microphone. Plug it into the dedicated port when needed.
- Use the microphone mute switch/button (located near the microphone port) to quickly mute or unmute your voice input.

5.4. RGB Lighting Control

- Double-press the multi-function button (often integrated with the power button or a dedicated button) to toggle the RGB lighting effects on or off.

5.5. Sound Mode Switching

- Quadruple-press the multi-function button to switch between preset game and music audio settings, optimizing sound for different content.

6. CHARGING

The EPOMAKER X Aula G7 Pro headset boasts an impressive 80+ hour battery life on a full charge.

1. Connect the provided USB Charging Cable to the USB-C port on the headset.
2. Plug the other end of the USB Charging Cable into a compatible USB power source (e.g., computer USB port, wall adapter).
3. The headset's indicator light will show the charging status (e.g., solid red while charging, off or solid blue when fully charged).

ALL DAY COMFORT



Friendly and Breathable Comfort



360° Suspended Earmuffs



High-Elasticity Alloy Headband



High-Breathability Fiber Earmuffs

Illustration of the headset's comfort-focused design, featuring friendly and breathable earcups, a high-elasticity alloy headband, and 360-degree suspended earmuffs for extended wear.

360° ALL-AROUND FIT


Do As You Wish



A user wearing the headset, illustrating its adaptive ergonomics and comfortable fit that conforms to facial contours, providing immersive sound isolation.

C-MEDIA

Professional-Grade Sound Card Chip

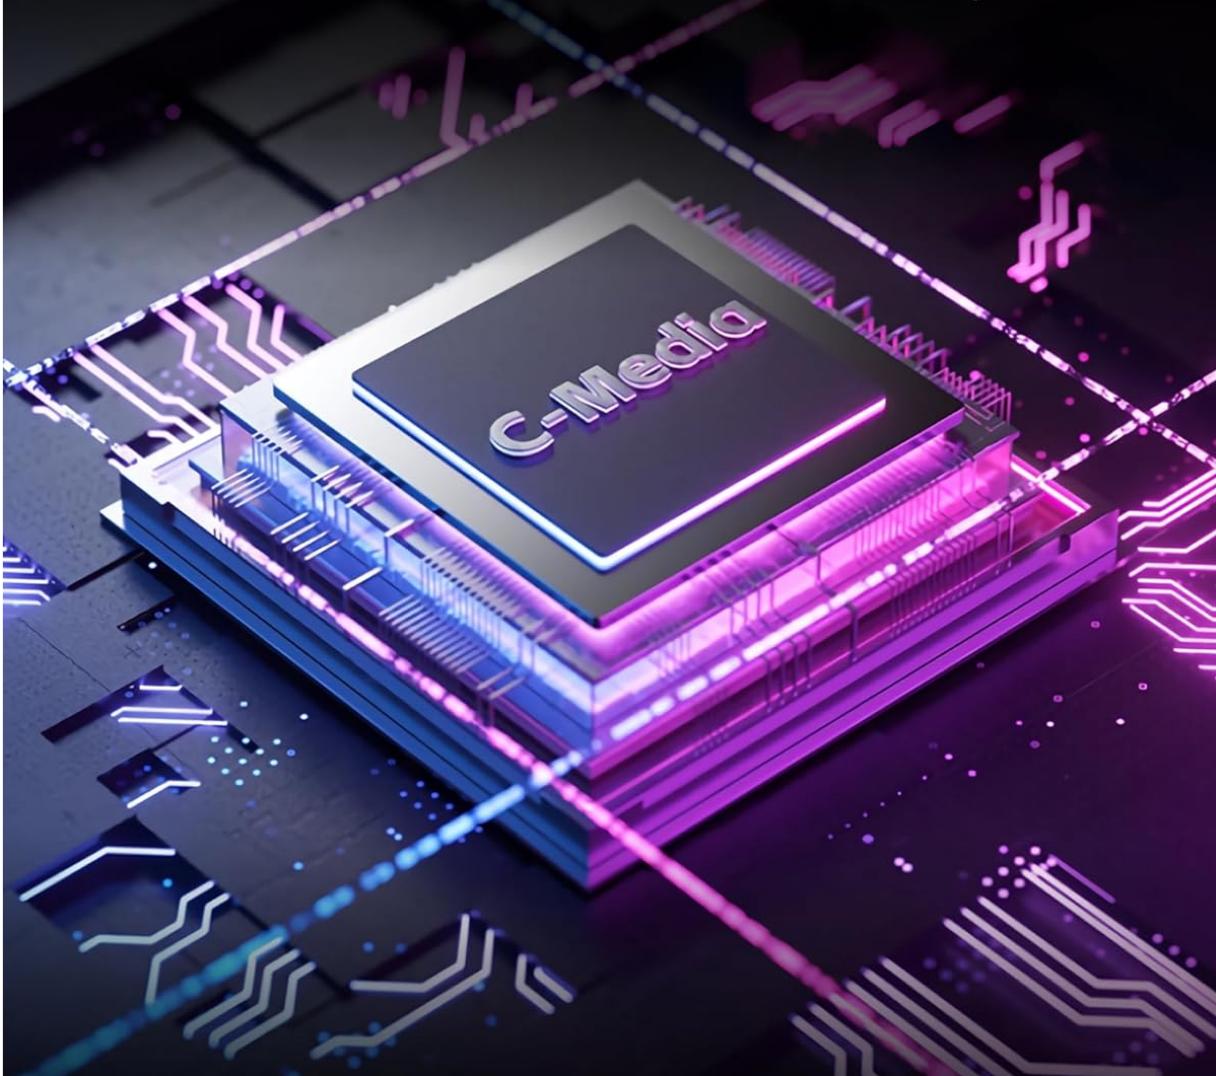

High

Performance

Low

Power Consumption

360°

Spatial Surround

A visual representation of the professional-grade C-Media sound card chip, emphasizing its high performance, low power consumption, and 360-degree spatial surround capabilities.

7. MAINTENANCE

- Cleaning:** Use a soft, dry cloth to clean the headset. For earcups, gently wipe with a slightly damp cloth if necessary. Avoid harsh chemicals.
- Storage:** Store the headset in a cool, dry place away from direct sunlight and extreme temperatures.
- Handling:** Avoid dropping the headset or exposing it to excessive force, which could damage internal components.

8. TROUBLESHOOTING

8.1. No Sound/Low Volume

- Ensure the headset is powered on and correctly connected (2.4GHz dongle, Bluetooth, or 3.5mm cable).
- Check the volume level on both the headset and your connected device.
- Verify that the headset is not muted.

8.2. Pairing Issues (Wireless Modes)

- Make sure the headset is in the correct mode (2.4G or BT) for your connection type.
- Restart both the headset and the connected device.
- For Bluetooth, ensure the headset is in pairing mode and visible to your device.

8.3. Microphone Not Working

- Ensure the detachable microphone is securely plugged into the headset.
- Check if the microphone mute switch/button is disengaged (unmuted).
- Verify microphone settings on your connected device.

8.4. Battery Not Charging

- Ensure the USB Charging Cable is properly connected to both the headset and a working power source.
- Try a different USB port or charging adapter.

9. SPECIFICATIONS

Model Name	G7 Pro
Connectivity Technology	BT 5.3, Wireless (2.4GHz)
Headphones Jack	3.5 Millimeter
Audio Driver Type	40mm Dynamic Driver
Sound Features	7.1 Surround Sound
Noise Control	Passive Noise Cancellation
Microphone	Noise Canceling Microphone (Detachable)
Battery Life	80+ Hours
Item Weight	12 Ounces
Compatible Devices	PC, PlayStation 4, PlayStation 5, Switch
Special Features	RGB Lighting, Ultra-Low Latency

10. WARRANTY AND SUPPORT

For warranty information, technical support, or any product-related inquiries, please contact EPOMAKER customer service through their official website or the retailer where the product was purchased. Please retain your proof of purchase for warranty claims.

