



Manuals.plus /

› SCHLEICH /

› SCHLEICH ELDRADOR CREATURES BattleCave Shadow Tiger 42739 Instruction Manual

SCHLEICH 42739

SCHLEICH ELDRADOR CREATURES BattleCave Shadow Tiger 42739 Instruction Manual

Model: 42739 | Brand: SCHLEICH

INTRODUCTION

Welcome to the world of ELDRADOR CREATURES! This manual provides essential information for the assembly, operation, and care of your SCHLEICH BattleCave Shadow Tiger playset. Please read these instructions carefully before use to ensure safe and optimal enjoyment of the product.



Image: The complete BattleCave Shadow Tiger playset, featuring the black and purple cave structure, a movable saw arm, a removable gate, and the Shadow Tiger figure.

SETUP AND ASSEMBLY

The BattleCave Shadow Tiger playset requires minimal assembly. Follow these steps to prepare your playset for action:

1. **Unpack Components:** Carefully remove all parts from the packaging. Verify that all 27 pieces are present, including the BattleCave structure, the Shadow Tiger figure, the saw arm, the saw blade, and the gate.
2. **Assemble the BattleCave Structure:** Connect the individual black and purple cave pieces to form the main BattleCave. Ensure all connections are secure. Refer to the image below for an example of a connecting piece.



Image: A close-up view of a black plastic connecting piece, typical for assembling the BattleCave structure.

3. **Attach the Saw Arm:** Locate the gray saw arm component. Attach it to the designated connection point on the top of the BattleCave structure. The arm should be able to pivot.



Image: A detailed view of the gray and purple saw arm mechanism, showing its connection points and design.

4. **Install the Saw Blade:** Secure the purple saw blade onto the end of the saw arm. Ensure it is firmly attached for proper operation.



Image: A close-up of the purple and black circular saw blade, highlighting its jagged edges and central attachment

point.

5. **Position the Gate:** Insert the black grid-like gate into the front opening of the BattleCave. It should be able to slide or be removed to simulate trapping figures.
6. **Place the Shadow Tiger:** Position the Shadow Tiger figure within or around the BattleCave as desired.

OPERATING THE BATTLECAVE FEATURES

The BattleCave is designed with interactive elements to enhance play. Here's how to operate them:

- **Movable Saw Arm:** The saw arm attached to the top of the BattleCave can be manually pivoted and positioned. This allows for dynamic play scenarios.
- **Launching Saw Blade:** The saw blade can be launched from the saw arm. To do this, load the blade onto the arm and activate the launching mechanism (typically a spring-loaded button or lever on the arm itself). Ensure the area is clear before launching.
- **Trap Door:** The BattleCave features a trap door mechanism. This can be activated to simulate trapping figures inside the cave. The exact activation method may vary slightly but usually involves a lever or a push-down section on the cave floor.
- **Removable Gate:** The front gate can be removed or reinserted to control access to the BattleCave, allowing for capture and escape scenarios.



Image: The BattleCave with the saw arm positioned above, showing the saw blade in a blurred motion, indicating its dynamic movement.

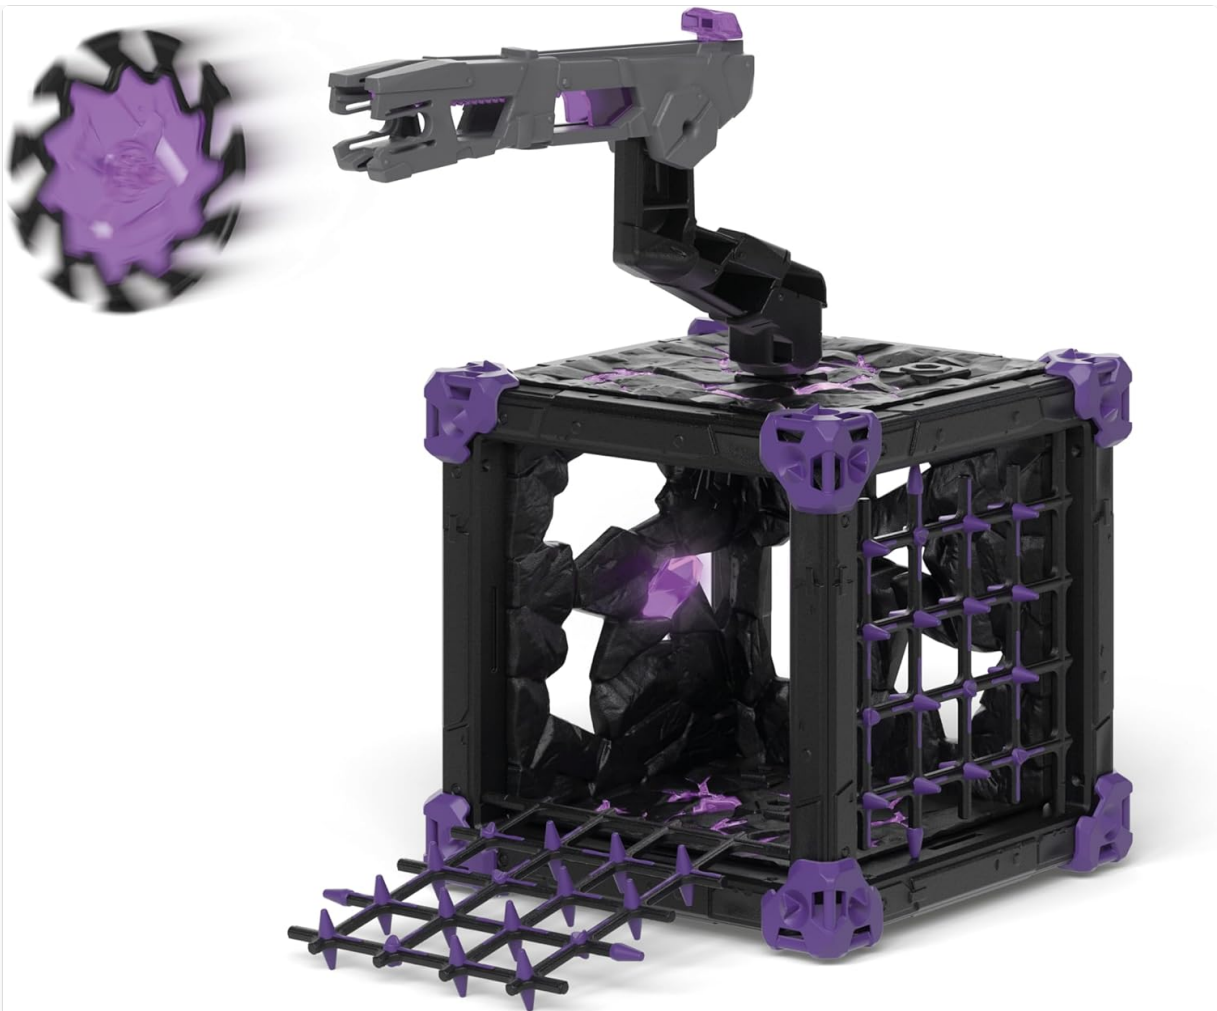


Image: The BattleCave with the saw arm extended and the saw blade detached, appearing to be launched away from the playset.

CARE AND MAINTENANCE

To ensure the longevity of your SCHLEICH BattleCave Shadow Tiger playset, follow these simple care instructions:

- **Cleaning:** Wipe figures and playset components with a damp cloth. Avoid harsh chemicals or abrasive cleaners, as these can damage the paint and material.
- **Storage:** Store the playset in a cool, dry place away from direct sunlight and extreme temperatures to prevent material degradation and color fading.
- **Handling:** Handle all components with care. Avoid excessive force when assembling or operating movable parts to prevent breakage.

TROUBLESHOOTING

If you encounter any issues with your BattleCave Shadow Tiger playset, refer to the following common solutions:

- **Parts Not Fitting:** Ensure you are using the correct parts for each connection. Refer to the visual guides (if provided in physical manual) or product images for correct orientation. Do not force parts together.
- **Saw Blade Not Launching:** Check if the saw blade is correctly seated on the launching mechanism. Ensure the mechanism is fully reset before attempting to launch.

- **Movable Parts Stiff:** If any movable parts feel stiff, gently work them back and forth. Avoid applying lubricants, as these may damage the plastic.
- **Missing Components:** If any components are missing upon unboxing, please contact SCHLEICH customer support with your proof of purchase.

SPECIFICATIONS

| Feature | Detail |
|--------------------------------|--|
| Brand | SCHLEICH |
| Model Number | 42739 |
| Product Dimensions (L x W x H) | 28.1 x 16.5 x 34.2 cm |
| Item Weight | 816 g |
| Material Type | Polyvinyl Chloride (PVC) |
| Number of Pieces | 27 |
| Recommended Age | 7 - 12 years |
| Assembly Required | No (<i>Note: While product specifications state 'No', visual evidence and common toy assembly suggest minor assembly for initial setup.</i>) |
| Batteries Required | No |

WARRANTY AND SUPPORT

For warranty information, product support, or to inquire about replacement parts, please visit the official SCHLEICH website or contact their customer service department. Keep your proof of purchase for any warranty claims.

SCHLEICH Official Website: www.schleich-s.com