

[manuals.plus](#) /› [SENIX](#) /› [SENIX STE15-M 15-Amp 21-inch Electric Snow Blower User Manual](#)

SENIX STE15-M

SENIX STE15-M 15-Amp 21-inch Electric Snow Blower User Manual

Model: STE15-M

1. IMPORTANT SAFETY INFORMATION

Read and understand all safety warnings and instructions before operating this electric snow blower. Failure to follow these instructions may result in electric shock, fire, and/or serious injury.

- **Personal Safety:** Always wear appropriate personal protective equipment, including safety glasses, hearing protection, and non-slip footwear. Do not operate the snow blower while barefoot or wearing open sandals.
- **Area Preparation:** Clear the area to be snow-blown of all objects such as rocks, broken glass, nails, wire, or string, which can be thrown by the auger.
- **Electrical Safety:** Ensure the power cord and extension cord are in good condition and rated for outdoor use. Do not operate in wet conditions or allow water to come into contact with electrical components. Always disconnect power before performing any adjustments or maintenance.
- **Operation:** Always use caution when operating the snow blower, especially in low visibility conditions. Be aware of your surroundings and keep a safe distance from people and objects. Never direct discharge towards people or property.
- **Maintenance:** Always follow the manufacturer's instructions for safe operation and maintenance. Keep all guards and safety devices in place and in working order.

2. PRODUCT OVERVIEW

The SENIX STE15-M is a high-efficiency 15-Amp electric snow blower designed for clearing mid-sized driveways, walkways, decks, and patios. It offers powerful snow removal without the need for gas or oil, featuring a 21-inch clearing width, 12-inch clearing depth, and a 180-degree rotating chute.



Figure 2.1: SENIX STE15-M Electric Snow Blower, front view with LED lights illuminated.

This corded electric snow blower is equipped with a powerful 15-amp motor capable of moving up to 880 lbs of snow per minute, throwing it up to 33 feet away. Its compact design and 7-inch rear wheels enhance maneuverability, while the built-in LED light bar improves visibility during low-light operation.

3. COMPONENTS AND FEATURES

Familiarize yourself with the key components of your SENIX STE15-M snow blower:

- **15-Amp Motor:** Provides powerful and consistent performance for snow removal.
- **21-inch Clearing Width:** Allows for efficient clearing of larger areas in fewer passes.
- **12-inch Clearing Depth:** Handles moderate to deep snow accumulations.
- **180-degree Rotating Chute:** Enables precise control over snow discharge direction.
- **Adjustable Snow Throw Height:** Control the vertical angle of snow discharge.
- **LED Light Bar:** Enhances visibility for operation in low-light conditions.
- **Dual Safety Switch:** Ensures safe startup and prevents accidental operation.
- **Foldable Handle:** Facilitates compact storage and transport.

- **7-inch Rear Wheels:** Improves maneuverability across various surfaces.



Figure 3.1: Overview of SENIX STE15-M key features including throwing distance, foldable handle, height adjustment, rotating chute, clearing width/depth, and 2-blade auger.

33 FT THROWING DISTANCE



Figure 3.2: The adjustable snow chute allows for quick throw angle (180-degree rotation) and height adjustment.



Figure 3.3: The dual safety switch mechanism requires pressing the lock-off button (Step 1) and then engaging the switch lever (Step 2) for safe startup.

4. SETUP

4.1 Assembly

Your snow blower may require minor assembly, typically involving attaching the handle and snow chute. Refer to the separate assembly guide included in your product packaging for detailed instructions. Ensure all fasteners are securely tightened before use.

4.2 Power Connection

The SENIX STE15-M is a corded electric unit. It requires a standard 120V AC outlet and an outdoor-rated extension cord (not included). The attached power cord is 13 inches long. Use an extension cord suitable for outdoor use and rated for the snow blower's 15-amp draw. Ensure the extension cord is free from damage and properly connected to prevent power loss or electrical hazards.

- Always use a grounded extension cord.
- Do not use an extension cord longer than 100 feet to avoid voltage drop.

- Keep the extension cord clear of the clearing path and away from the auger.

5. OPERATING INSTRUCTIONS

5.1 Starting the Snow Blower

1. Ensure the snow blower is on a level surface and clear of any obstructions.
2. Connect the snow blower's power cord to a suitable outdoor-rated extension cord, and then plug the extension cord into a grounded 120V AC outlet.
3. To start, press and hold the **Lock-off Button** (Step 1 in Figure 3.3).
4. While holding the lock-off button, squeeze the **Switch Lever** (Step 2 in Figure 3.3) towards the handle. The motor will start.
5. Release the lock-off button once the motor is running. The snow blower will continue to operate as long as the switch lever is held.
6. To stop the snow blower, release the switch lever.

5.2 Clearing Snow

Push the snow blower forward at a comfortable pace. Avoid forcing the unit into deep or heavy snow, as this can overload the motor. For very deep snow, clear a partial width first, then return to clear the remaining snow.



Figure 5.1: The SENIX STE15-M can throw snow up to 33 feet, allowing for efficient clearing of large areas.

5.3 Adjusting the Chute

The snow chute can be adjusted to control the direction and height of the snow discharge:

- **Direction:** Use the chute rotation crank to rotate the chute up to 180 degrees, directing snow away from cleared areas or obstacles.
- **Height:** Use the chute deflector lever to adjust the angle of the snow deflector, controlling how high or low the snow is thrown.

5.4 Using the LED Lights

The integrated LED light bar automatically illuminates when the snow blower is powered on, providing improved visibility during early morning, late evening, or overcast conditions.



Figure 5.2: The built-in LED light bar provides illumination for enhanced visibility during operation in low-light conditions.

6. MAINTENANCE

6.1 After Each Use

- **Disconnect Power:** Always unplug the snow blower from the power source before cleaning or performing any maintenance.
- **Clean the Unit:** Remove any snow, ice, or debris from the auger housing, chute, and exterior surfaces. Use a plastic scraper or brush; never use your hands.
- **Inspect:** Check for any loose fasteners, damaged parts, or signs of wear. Address any issues before the next use.

6.2 Storage

For long-term storage, especially during off-season:

- Thoroughly clean and dry the entire unit.
- The handle can be folded for compact storage. Loosen the handle knobs, fold the handle down, and retighten the knobs to secure it in the folded position.
- Store the snow blower in a dry, protected area, away from direct sunlight and extreme temperatures.



Figure 6.1: The foldable handle allows the snow blower to be stored compactly, reducing its height from 38 inches to 17 inches.

7. TROUBLESHOOTING

This section addresses common issues you might encounter with your SENIX STE15-M snow blower. For problems not listed here, or if solutions do not resolve the issue, contact customer support.

Problem	Possible Cause	Solution
Snow blower does not start.	Not plugged in or loose connection.	Ensure power cord and extension cord are securely plugged into a live outlet.
	Safety switch not engaged correctly.	Press the lock-off button before squeezing the switch lever.
	Circuit breaker tripped.	Check your household circuit breaker and reset if necessary.
Snow is not clearing effectively or auger is jammed.	Overloading the unit with too much snow. Debris caught in the auger.	Reduce the clearing width or speed. Immediately disconnect power. Use a non-metallic tool to clear any debris from the auger housing. Never use hands.
Reduced snow throwing distance.	Wet, heavy snow. Chute or auger housing partially clogged.	This is normal for wet snow; clear in smaller passes. Disconnect power. Clear any blockages from the chute and auger housing.

8. SPECIFICATIONS

Feature	Detail
Model Number	STE15-M
Brand	SENIX
Power Source	Corded Electric (AC)
Motor	15-Amp
Clearing Width	21 inches
Clearing Depth	12 inches
Max Throwing Distance	33 feet
Max Clearing Capacity	880 lbs/min
Chute Rotation	180 degrees
Product Dimensions (L x W x H)	63.5 x 45.72 x 53.34 cm
Certification	ETL Certified

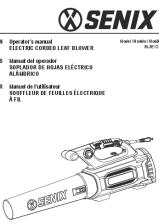
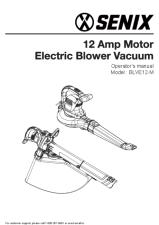
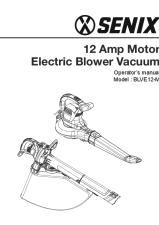
9. WARRANTY AND SUPPORT

The SENIX STE15-M Electric Snow Blower comes with a **3-Year limited warranty**. Please retain your proof of purchase for warranty claims.

For technical assistance, warranty service, or to order replacement parts, please contact SENIX customer support. Refer to the contact information provided in your product packaging or visit the official SENIX website.

Manufacturer: SENIX

Related Documents - STE15-M

	<p>SENIX BLAE12-M Electric Corded Leaf Blower Operator's Manual</p> <p>Comprehensive operator's manual for the SENIX BLAE12-M electric corded leaf blower, covering safety instructions, specifications, assembly, operation, maintenance, troubleshooting, and warranty information.</p>
	<p>SENIX BLVE12-M 12 Amp Electric Blower Vacuum Operator's Manual</p> <p>Official operator's manual for the SENIX BLVE12-M 12 Amp Electric Blower Vacuum. Includes assembly, operation, safety, maintenance, and troubleshooting instructions.</p>
	<p>SENIX BLVE12-M 12 Amp Electric Blower Vacuum Operator's Manual</p> <p>Operator's manual for the SENIX BLVE12-M 12 Amp Electric Blower Vacuum. Provides detailed instructions on safety, assembly, operation, maintenance, troubleshooting, and warranty information for the product.</p>
	<p>SENIX STX2-M 18" Cordless Snow Blower Instruction Manual</p> <p>Comprehensive instruction manual for the SENIX STX2-M 18-inch cordless snow blower. Covers safety, assembly, operation, maintenance, and troubleshooting for efficient snow removal.</p>
	<p>SENIX STX2-L 13" Cordless Snow Shovel Instruction Manual</p> <p>This instruction manual provides detailed safety, assembly, operation, maintenance, and troubleshooting information for the SENIX STX2-L 13" Cordless Snow Shovel. Learn how to safely use and maintain your snow shovel.</p>



[SENIX STX2-M1 21" Cordless Snow Blower Instruction Manual](#)

Comprehensive instruction manual for the SENIX STX2-M1 21" Cordless Snow Blower, covering safety, assembly, operation, maintenance, and troubleshooting. Learn how to safely and effectively use your SENIX snow blower.