

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Fanvace](#) /
- › [Fanvace 96GB MP3 Player with Bluetooth and Camera User Manual](#)

## Fanvace 36P

# Fanvace 96GB MP3 Player with Bluetooth and Camera User Manual

Model: 36P | Brand: Fanvace

[Setup](#)

[Operating  
Instructions](#)

[Maintenance  
Warranty &  
Support](#)

[Troubleshooting](#)

[Specifications](#)

## 1. SETUP

### 1.1 Package Contents

Verify that all items are present in the package:

- 1 x Fanvace MP3 Player
- 1 x 64GB SD card
- 1 x USB C Cable
- 1 x Wired Earphones
- 1 x Screen Protector
- 1 x Protective Case
- 1 x User Manual

## Packing List

Music Player  
USB C Cable  
Wired Earphones  
Screen Protector  
Protective Case  
User Manual



64GB SD card



Image: Contents of the Fanvace MP3 Player package, including the player, SD card, USB-C cable, earphones, screen protector, protective case, and user manual.

### 1.2 Charging the Device

Before first use, fully charge the MP3 player. Connect the provided USB-C cable to the device and a compatible power adapter (5V-1A or 5V-2A recommended). Avoid using fast chargers to prevent potential damage.

## Experience the ultimate visual impact

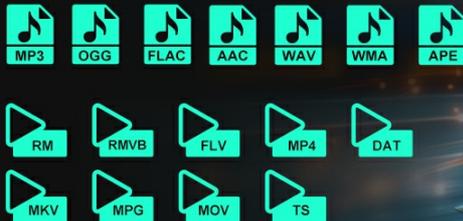


Image: Diagram illustrating the 2000mAh battery capacity and estimated usage times (60 hours standby, 20 hours music, 6 hours video, 3-4 hours charging).

### 1.3 Inserting the SD Card

The device comes with a 64GB SD card pre-installed. If you need to insert or replace an SD card, locate the SD card slot on the side of the player. Gently push the card into the slot until it clicks into place. To remove, push the card again until it ejects slightly, then pull it out.

## Long Lasting 2000mAh Battery

Built-in 2000mAh Battery with low-power solutions ensure your continuous music in outdoors and exercise.



60Hrs



20Hrs



6Hrs



3-4Hrs



\*Based on 50% volume & screen off. Typical MP3 players last only 8 hours.

Image: Visual representation of the 96GB storage (32GB ROM + 64GB SD card) and the expandable SD card slot supporting up to 512GB.

## 2. OPERATING INSTRUCTIONS

### 2.1 Power On/Off

- **Power On:** Press and hold the power button located on the side of the device until the screen lights up.
- **Power Off:** Press and hold the power button, then select "Power off" from the options that appear on the screen.
- **Screen Lock/Unlock:** Briefly press the power button to lock or unlock the screen.

### 2.2 Navigating the Android 13 OS

The Fanvace MP3 Player runs on Android 13, providing a familiar smartphone-like interface. Use the 4-inch touchscreen to navigate through apps, menus, and settings. Swipe gestures and taps are used for interaction.

## Android 13 OS and MTK 8-Core Processor

The MP3 player delivers a smooth and responsive user experience. Multitask with ease, run demanding apps, and enjoy lag-free navigation.

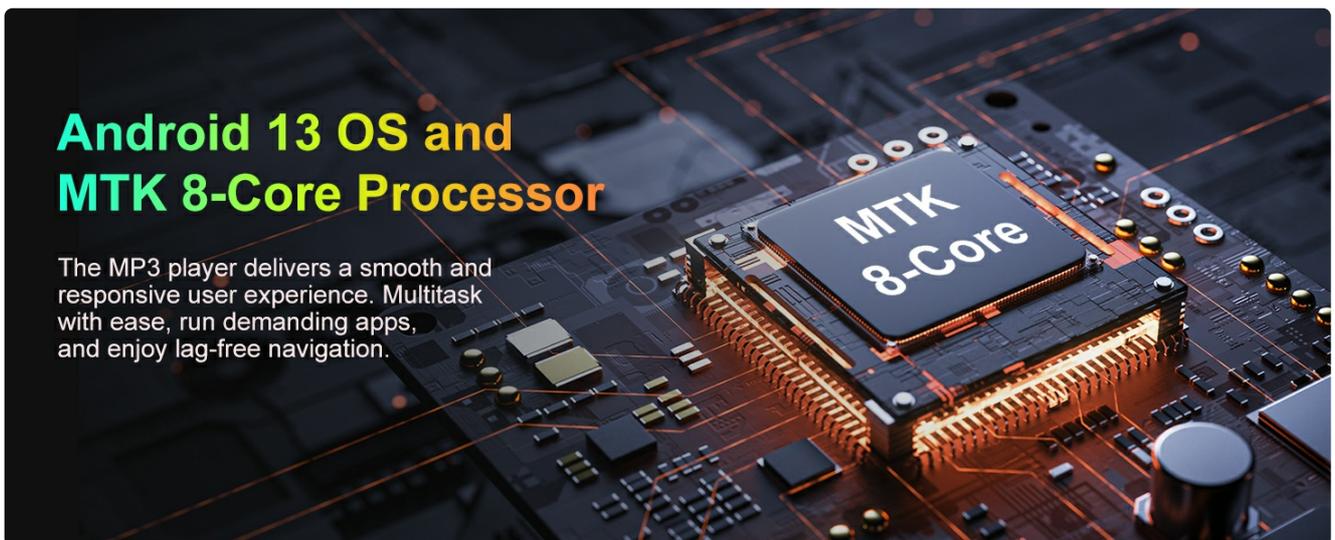


Image: The Fanvace MP3 Player displaying its Android 13 operating system interface with various pre-installed applications like Spotify, Amazon Music, and the Play Store.

### 2.3 Music Playback

Access your music library through the pre-installed music player app or other streaming applications. The device supports various audio formats including MP3, WAV, FLAC, APE, OGG, M4A, AAC, and WMA, delivering HiFi

lossless sound quality.



Image: The MP3 player displaying a music playback screen, highlighting its compatibility with various audio formats like MP3, OGG, FLAC, AAC, WMA, WAV, and APE.

## 2.4 Bluetooth Connectivity

To connect to Bluetooth headphones, speakers, or other devices:

1. Go to *Settings > Connected devices > Bluetooth*.
2. Toggle Bluetooth ON.
3. Ensure your Bluetooth accessory is in pairing mode.
4. Select your device from the list of available devices to pair.

The device features Bluetooth 5.0 for stable and fast two-way audio transmission.



Image: The MP3 player screen showing Bluetooth settings, with an icon indicating connection to headphones, speakers, and car audio systems via Bluetooth 5.0.

## 2.5 Wi-Fi Functionality

Connect to Wi-Fi networks to download apps, stream music/videos online, and browse the web. Go to *Settings > Network & internet > Wi-Fi*, select your network, and enter the password.

## 2.6 Camera Usage

The MP3 player includes a 13-megapixel HD rear camera and a 5-megapixel front camera. Open the Camera app to capture photos and videos. Tap the screen to focus and press the shutter button to take a picture.



Image: Detailed view of the MP3 player's camera features, showing the 5MP front camera, 13MP rear camera, and flash lamp.

## 2.7 Video Playback

The 4-inch full-touchscreen supports direct playback of various video formats including RM, RMVB, FLV, MP4, DAT, MKV, MPG, MOV, and TS without conversion. Use the pre-installed video player or download a preferred app from the Play Store.

Your browser does not support the video tag.

Video: An official product video demonstrating the features of the Fanvace 96GB MP3 Player, including its camera, Android 13 OS, Bluetooth connectivity, and battery life.

## 3. MAINTENANCE

### 3.1 Cleaning

Use a soft, dry, lint-free cloth to clean the device. Avoid using abrasive cleaners, solvents, or aerosol sprays directly on the player. For the screen, a screen cleaner designed for electronics can be used with a microfiber cloth.

### 3.2 Software Updates

Periodically check for software updates to ensure optimal performance and access to the latest features. Connect to Wi-Fi and go to *Settings > System > System update*.

### 3.3 Battery Care

To prolong battery life, avoid exposing the device to extreme temperatures. Fully charge the device before long periods of inactivity. If the device will not be used for an extended time, charge it to about 50% before storing.

## 4. TROUBLESHOOTING

### 4.1 Common Issues and Solutions

Issue	Solution
-------	----------

Issue	Solution
<b>Device does not power on.</b>	Ensure the battery is charged. Connect the device to a charger for at least 30 minutes. If it still doesn't turn on, try holding the power button for 10-15 seconds for a forced restart.
<b>Bluetooth device fails to pair.</b>	Ensure both the MP3 player and the Bluetooth device are in pairing mode and within range. Turn Bluetooth off and on again on both devices. Forget the device in settings and try pairing again.
<b>Short battery life.</b>	Reduce screen brightness, close unused background apps, and disable Wi-Fi/Bluetooth when not in use. Avoid extreme temperatures.
<b>Cannot connect to Wi-Fi.</b>	Ensure the Wi-Fi network is active and you have the correct password. Try restarting the MP3 player and the Wi-Fi router.
<b>Device freezes or is unresponsive.</b>	Press and hold the power button for approximately 10-15 seconds to force a restart. If the issue persists, consider a factory reset ( <i>Note: This will erase all data</i> ).

## 5. SPECIFICATIONS

Feature	Detail
<b>Model Number</b>	36P
<b>Operating System</b>	Android 13
<b>Processor</b>	MTK 8-core
<b>RAM</b>	4GB
<b>Internal Storage (ROM)</b>	32GB
<b>Expandable Storage</b>	Up to 512GB via Micro SD card (64GB card included)
<b>Screen Size</b>	4 inches
<b>Rear Camera</b>	13 Megapixels
<b>Front Camera</b>	5 Megapixels
<b>Bluetooth Version</b>	5.0
<b>Wi-Fi</b>	Supported
<b>Battery Capacity</b>	2000mAh
<b>Supported Audio Formats</b>	MP3, WAV, FLAC, APE, OGG, M4A, AAC, WMA
<b>Supported Video Formats</b>	RM, RMVB, FLV, MP4, DAT, MKV, MPG, MOV, TS
<b>Item Weight</b>	10.8 ounces
<b>Package Dimensions</b>	6.69 x 5.75 x 0.87 inches

## 6. WARRANTY AND SUPPORT

Fanvace provides 12 hours of customer service for any issues or questions you may encounter during the use of your MP3 player. Please refer to the contact information provided in your package or on the official Fanvace website for assistance.

For additional support and product information, please visit the product page on Amazon: [Fanvace 96GB MP3 Player on Amazon](#).