Manuals+

Q & A | Deep Search | Upload

manuals.plus /

- → GSEICE /
- GSEICE HS3L Slushie Machine Instruction Manual

GSEICE HS3L

GSEICE HS3L Slushie Machine Instruction Manual

Brand: GSEICE | Model: HS3L

1. Introduction

Thank you for choosing the GSEICE HS3L Slushie Machine. This appliance is designed to effortlessly create a variety of frozen beverages, including slushies, milkshakes, frappes, and frozen juices, right in your home. With its large 101oz capacity and user-friendly features, you can enjoy delicious frozen treats for family gatherings and parties.

Key features include a proprietary 360° Rotational Cooling system that transforms liquids into slush without the need for ice cubes, 5 preset modes for different drink types, a real-time temperature display for precise control, and a portable handle for convenient movement. The machine also offers an easy-to-clean design with a rinse function and detachable components.

2. SAFETY INSTRUCTIONS

- Read all instructions before use and retain for future reference.
- Ensure the appliance is placed on a stable, level, and dry surface.
- Do not immerse the main unit in water or other liquids. Clean only as instructed in the 'Cleaning & Maintenance' section.
- Use only liquids in the slushie tank. Do not add ice, solid ingredients (even fruit), or hot liquids as this can damage the machine.
- · Keep the appliance out of reach of children.
- Ensure proper ventilation around the machine during operation.
- Unplug the machine from the power outlet when not in use, before cleaning, or during assembly/disassembly.

3. PRODUCT COMPONENTS

The GSEICE HS3L Slushie Machine includes the following main components:

Slushie Machine Main Unit

- Transparent Beverage Vessel (101oz capacity)
- Stirring Paddle/Auger
- · Dispensing Handle
- · Digital Control Panel with Display
- · Portable Carrying Handle
- Drip Tray

4. SETUP

- 1. **Unpacking:** Carefully remove all components from the packaging.
- 2. **Initial Placement:** Place the main unit on a stable, level, and dry countertop. Ensure there is adequate space around the machine for ventilation.
- 3. **Refrigerant Settling:** Before plugging in the unit for the first time, allow it to sit upright for at least 2 hours. This allows the refrigerant to settle, ensuring optimal performance.
- 4. **Pre-Use Cleaning:** Before first use, clean all detachable parts (beverage vessel, stirring paddle, dispenser components) with warm, soapy water. Rinse thoroughly and dry.

5. OPERATING INSTRUCTIONS

5.1. Basic Operation Steps

- Add Liquid: Open the lid of the transparent beverage vessel and pour your desired liquid into it. Ensure
 the liquid level is between the MIN and MAX fill lines (24oz to 101oz). Remember, only liquids should be
 added
- 2. **Select Mode:** Turn on the machine using the power button on the digital control panel. Select your desired preset mode from the 5 available options: Slush, Spiked Slush, Frappe, Milkshake, or Frozen Juice.
- 3. **Adjust Temperature (Optional):** The real-time temperature display allows you to monitor the freezing process. In preset mode, you can manually adjust the set temperature by 0.1°F increments to achieve your preferred consistency.
- 4. **Start Freezing:** Press the 'Play' button to begin the freezing process. The machine's 360° Rotational Cooling system will start to work, transforming the liquid into slush. This process typically takes 15-60 minutes, depending on the liquid content and desired consistency.
- 5. **Dispense:** Once the machine indicates 'End' or beeps, your frozen beverage is ready. Pull the dispensing handle forward to release the drink into your cup.



Figure 1: Simple 3-Step Operation for Frozen Drinks. Pour liquid, select mode, and dispense.



Figure 2: Intelligent Display Screen with 5 Preset Modes for various frozen beverages.

5.2. Official Product Video

Video 1: Official GSEICE HS3L Slushie Machine demonstration. This video provides a visual guide to the machine's features and operation, including adding ingredients, selecting modes, and dispensing frozen drinks.

6. CLEANING & MAINTENANCE

Regular cleaning ensures the longevity and hygiene of your GSEICE HS3L Slushie Machine.

6.1. Rinse Function

- After dispensing all beverages, add warm water (and a small amount of mild detergent, if desired) to the vessel.
- Select the 'Rinse' mode on the control panel. The machine will agitate the water to clean the internal components.
- Dispense the water through the tap. Repeat if necessary until the water runs clear.

6.2. Disassembly for Thorough Cleaning

• To disassemble the water tank, press the portable handle backwards to unlock it.

- Carefully remove the transparent beverage vessel, stirring paddle, and dispensing components.
- Wash all detachable parts with warm, soapy water. Rinse thoroughly and dry completely before reassembling.
- Note: The machine is **not dishwasher safe**. Hand wash only.
- Wipe the main unit with a damp cloth. Do not use abrasive cleaners.



Figure 3: Easy Cleaning and Disassembly Process for the Slushie Machine.

7. TROUBLESHOOTING

If you encounter any issues with your GSEICE HS3L Slushie Machine, please refer to the following common troubleshooting tips:

- **Machine Not Turning On:** Ensure the power cord is securely plugged into a working outlet. Check if the power button is illuminated.
- Liquid Not Freezing: Verify that only liquids are used and no ice or solid ingredients were added.

 Ensure the selected temperature is appropriate for the desired frozen consistency. The sugar content of the liquid can affect freezing; liquids with very low sugar content may not freeze properly.
- Unusual Noise During Operation: Check if the stirring paddle is correctly installed and not obstructed. Ensure the liquid level is within the MIN/MAX lines.

- **Dispenser Not Working:** Ensure the dispensing handle is fully pulled forward. Check for any blockages in the dispenser spout.
- Error Codes: If an error code appears on the display, refer to the full user manual for specific instructions or contact customer support.

For further assistance, please consult the complete user manual or contact GSEICE customer support.

8. Specifications

Specification	Detail
Brand	GSEICE
Model Number	HS3L
Capacity	101oz (approx. 3 liters)
Material	Plastic
Color	Yellow
Dishwasher Safe	No
First Available	September 25, 2025

9. WARRANTY & SUPPORT

Your GSEICE HS3L Slushie Machine comes with a standard manufacturer's warranty covering defects in materials and workmanship. For specific warranty details, including duration and coverage, please refer to the warranty card included in your product packaging or contact GSEICE customer support.

For technical support, troubleshooting assistance, or to inquire about replacement parts, please contact GSEICE customer service through the contact information provided in your product documentation or on the official GSEICE website. Our dedicated support team is available to assist you with any questions or concerns.

Related Documents - HS3L



GSEICE Slushy Machine Instructions

Step-by-step guide for operating the GSEICE Slushy Machine, including material proportions, precautionary notes, and mode selection for slush and frozen drinks.



GSEICE Commercial Ice Machine User Manual

This manual provides important safety instructions, parts descriptions, operation guidelines, maintenance procedures, and troubleshooting tips for GSEICE Commercial Ice Machines.