



[Manuals.plus](#) /

> [ZONKO](#) /

> ZONKO 11-inch Android 15 Tablet Instruction Manual

ZONKO B0FSKXYFF1

ZONKO 11-inch Android 15 Tablet User Manual

Model: B0FSKXYFF1

1. INTRODUCTION

This manual provides essential information for setting up, operating, maintaining, and troubleshooting your ZONKO 11-inch Android 15 Tablet. Please read this guide thoroughly to ensure proper use and to maximize your device's performance and longevity.

2. PACKAGE CONTENTS

Verify that all items listed below are included in your package:

- 1 x ZONKO 11-inch Android 15 Tablet
- 1 x Tablet Case
- 1 x Bluetooth Keyboard
- 1 x Wireless Mouse
- 1 x Touch Pen
- 1 x Screen Protector (1 installed, 1 spare)
- 1 x OTG Adapter
- 1 x Type-C Cable
- 1 x Charger
- 1 x SIM/SD Card Tray Eject Pin
- 1 x User Manual

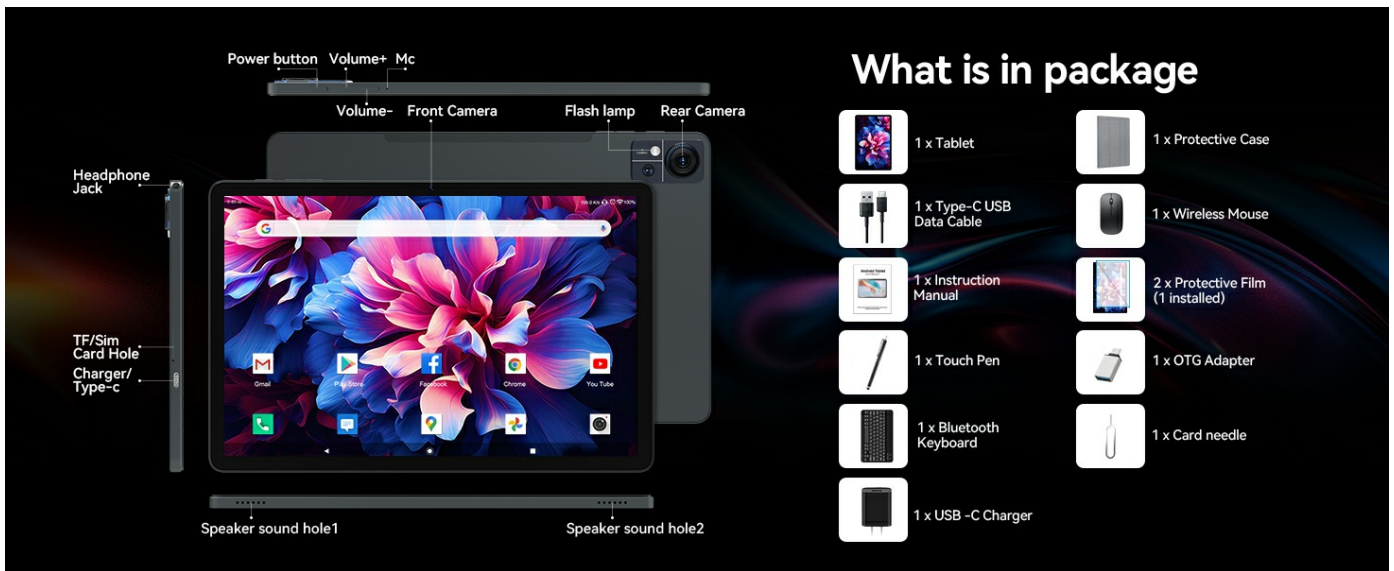 


Figure 2.1: Tablet components and included accessories.

3. DEVICE OVERVIEW

Familiarize yourself with the physical features and ports of your ZONKO tablet.

3.1. Tablet Layout

The tablet features an 11-inch Incell display, dual cameras, and various ports for connectivity.

More Smarter & Secure—Android 15

(8+8)16GB RAM+128GB ROM+1TB SD Exapnd
Video | Music | Books | Games Enjoy what you like as much as you like



128GB ROM



16GB RAM
(8+8 Expand)



MAX 1TB
micro SD Card

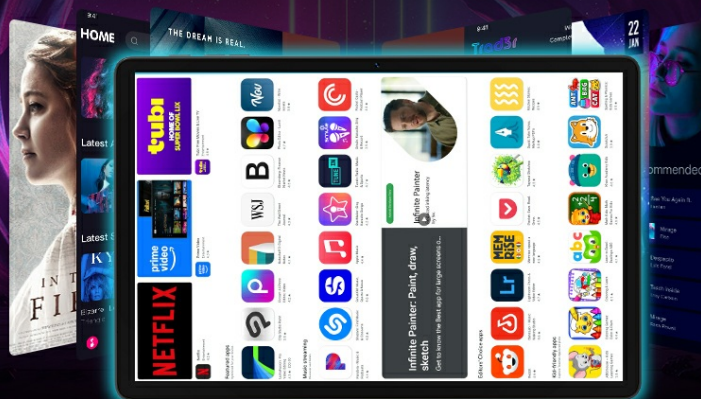 


Figure 3.1: Front view of the ZONKO 11-inch Android 15 Tablet.

16GB(8+8 Virtual) RAM+128GB ROM
With large storage capacity

8GB
RAM

8GB
Expand RAM



128GB
ROM

1TB TF
Download more

Figure 3.2: Back view of the ZONKO 11-inch Android 15 Tablet.

3.2. Ports and Buttons

- **Power Button:** Located on the side, used to power on/off or wake/sleep the device.
- **Volume Buttons:** Adjust audio volume.
- **USB Type-C Port:** For charging and data transfer.
- **Headphone Jack:** For connecting wired headphones.
- **TF/SIM Card Slot:** For inserting a microSD card (up to 1TB) or a SIM card (for LTE models, check compatibility).
- **Front Camera:** For video calls and selfies.
- **Rear Camera:** For taking photos and videos.



Figure 3.3: SIM and SD card slot location.

4. SETUP

4.1. Initial Charging

1. Connect the provided Type-C cable to the tablet's charging port.
2. Plug the charger into a power outlet.
3. Allow the tablet to charge fully before first use. The battery indicator on the screen will show charging status.

The tablet is equipped with an 8000mAh battery, providing approximately 9 hours of average use on a full charge.



Figure 4.1: Tablet charging indication.

4.2. Powering On/Off

- **To Power On:** Press and hold the Power button until the ZONKO logo appears.
- **To Power Off:** Press and hold the Power button until the power options appear on the screen, then select "Power off."
- **To Sleep/Wake:** Briefly press the Power button.

4.3. Initial Android 15 Setup

Upon first power-on, follow the on-screen prompts to complete the initial setup:

- Select your language.
- Connect to a Wi-Fi network.
- Sign in with your Google account or create a new one.
- Review and accept terms and conditions.
- Set up screen lock (PIN, pattern, password).

4.4. Inserting a MicroSD Card or SIM Card

To expand storage or use cellular data (if applicable):

1. Locate the SIM/SD card tray on the side of the tablet.
2. Insert the provided eject pin into the small hole next to the tray to open it.
3. Place the microSD card (gold contacts facing down) or SIM card into the designated slot(s) on the tray.
4. Carefully push the tray back into the tablet until it clicks into place.

4.5. Connecting Accessories

Your tablet comes with a Bluetooth keyboard, wireless mouse, and touch pen. Follow these steps to connect them:

4.5.1. Bluetooth Keyboard and Wireless Mouse

1. Ensure the keyboard and mouse are charged and powered on.
2. On your tablet, go to **Settings > Connected devices > Bluetooth**.
3. Turn on Bluetooth and select "Pair new device."
4. Select the keyboard or mouse from the list of available devices and follow any on-screen pairing instructions.

Octa core AI Enhancement MTK8786

Next-Gen Power to Handle All Tasks



 
AI Enhancement
12nm MTK8786 Processo



CPU: 2xA75+6xA55
@2.00Hz @1.8GHZ



GPU: ARM Mali-G52 MC2
@750MHZ

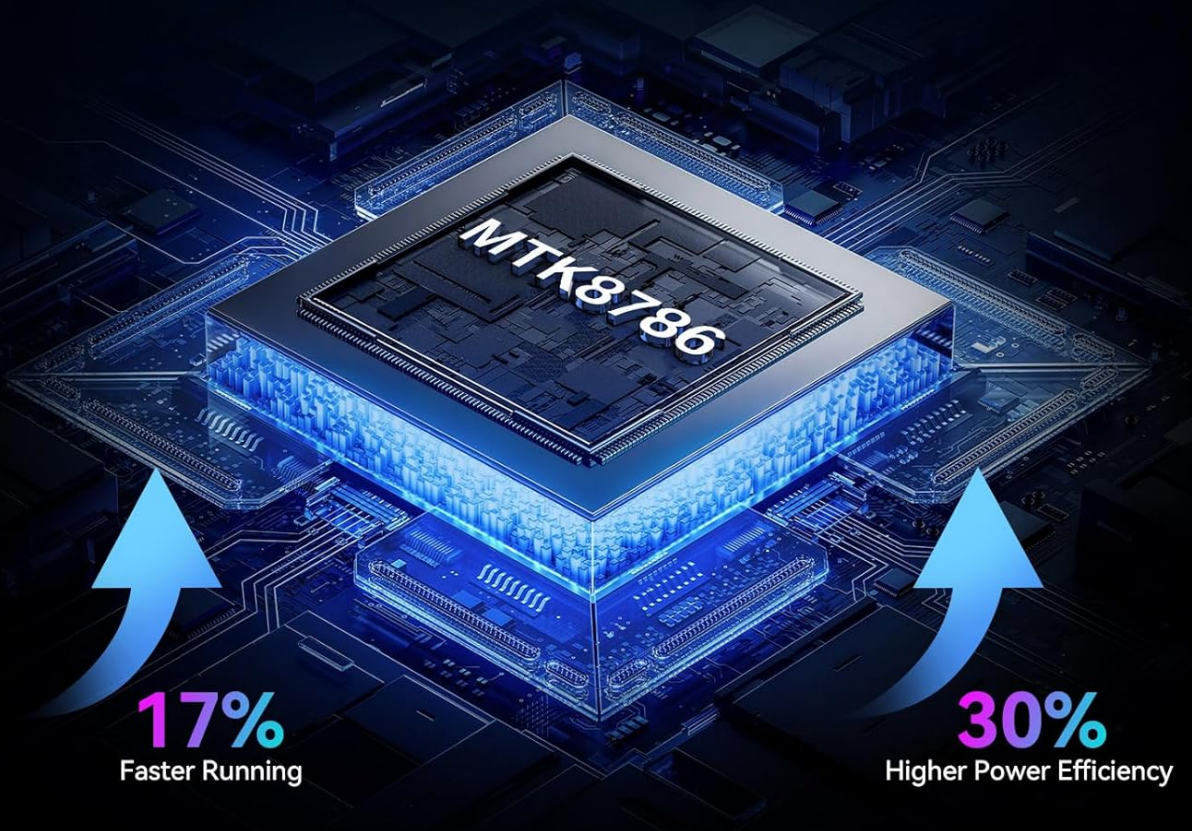

17%
Faster Running

30%
Higher Power Efficiency

Figure 4.2: Tablet with connected keyboard and mouse.

4.5.2. Touch Pen

The touch pen typically does not require pairing and can be used directly on the screen for navigation and input.

Captures the traces of time and keeps memories as vivid as ever

Rear camera: 8MP Front camera: 13MP



Figure 4.3: Using the touch pen with the tablet.

5. OPERATING

5.1. Basic Navigation (Android 15)

Your tablet runs on Android 15, offering an intuitive user experience.

- **Home Screen:** Swipe left or right to access different home screen panels.
- **App Drawer:** Swipe up from the bottom of the screen to view all installed applications.
- **Notifications & Quick Settings:** Swipe down from the top of the screen to access notifications and quick settings toggles.
- **Multitasking:** Swipe up and hold from the bottom of the screen to view recent apps.



Figure 5.1: Android 15 interface displaying various applications.

5.2. Wi-Fi Connectivity

To connect to a Wi-Fi network:

1. Go to **Settings > Network & internet > Wi-Fi**.
2. Turn on Wi-Fi.
3. Select your desired network from the list and enter the password if prompted.

The tablet supports 2.4GHz and 5G dual-band Wi-Fi for stable and fast internet access.

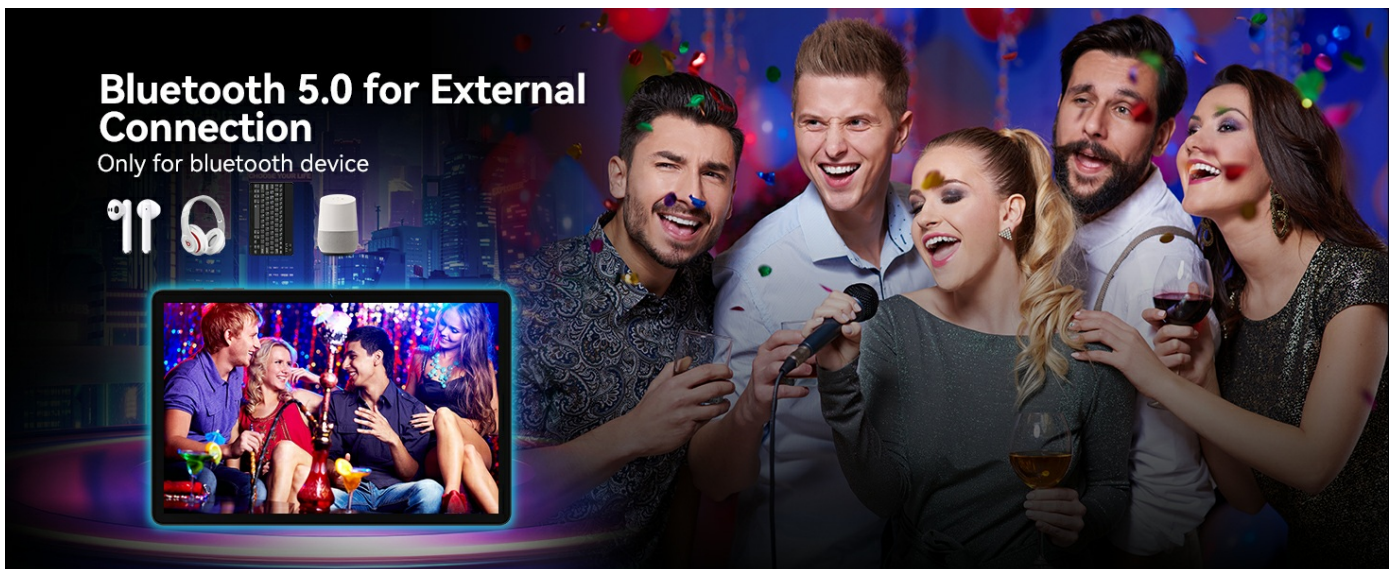 


Figure 5.2: Wi-Fi and Bluetooth connection indicators.

5.3. Bluetooth Connectivity

To connect to Bluetooth devices (e.g., headphones, speakers):

1. Go to **Settings > Connected devices > Bluetooth**.
2. Turn on Bluetooth.
3. Ensure your Bluetooth device is in pairing mode.
4. Select the device from the list and follow any on-screen pairing instructions.

5.4. Using the Cameras

The tablet features a 21MP rear camera and a 13MP front camera.

1. Open the Camera app.
2. Tap the camera switch icon to toggle between front and rear cameras.
3. Tap the shutter button to take a photo or start/stop video recording.

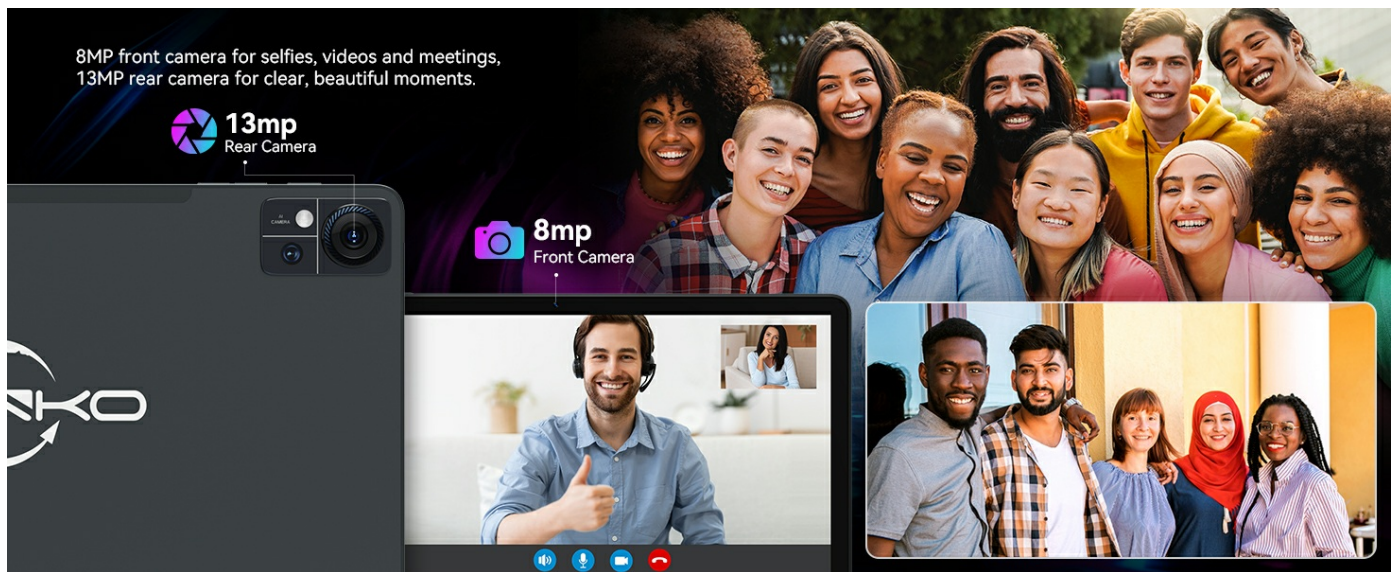 


Figure 5.3: Tablet camera in use, showing both front and rear camera capabilities.

5.5. Storage Management

Your tablet comes with 128GB of internal storage and supports up to 1TB microSD card expansion. It also has 16GB RAM (8GB physical + 8GB virtual) for smooth operation.

- To check storage: Go to **Settings > Storage**.
- To manage files: Use the pre-installed Files app or download a file manager from the Google Play Store.

5.6. GPS Functionality

The built-in GPS allows for navigation and location-based services.

- Ensure Location services are enabled in **Settings > Location**.
- Use pre-installed map applications or download others from the Google Play Store.

5.7. Google Play Store

As a GMS certified device, you can download and install a wide variety of applications from the Google Play Store.

1. Open the **Play Store** app.
2. Search for apps, games, movies, or books.
3. Tap "Install" to download and install your chosen content.

6. MAINTENANCE

6.1. Battery Care

- Avoid exposing the tablet to extreme temperatures.
- Do not let the battery drain completely regularly. Charge it when the battery level is low.
- Use only the provided charger and cable to prevent damage.

6.2. Cleaning the Device

- Use a soft, lint-free cloth to clean the screen and body of the tablet.
- For stubborn smudges, slightly dampen the cloth with water or a screen cleaner designed for electronics.
- Avoid using harsh chemicals or abrasive materials.

6.3. Software Updates

Regularly check for and install software updates to ensure optimal performance and security.

1. Go to **Settings > System > System update**.
2. Follow the on-screen instructions to download and install any available updates.

7. TROUBLESHOOTING

If you encounter issues with your tablet, refer to the following common solutions:

Problem	Solution
Tablet does not power on.	Ensure the tablet is charged. Connect it to the charger for at least 30 minutes, then try powering on again.
Wi-Fi connection issues.	Restart your Wi-Fi router and the tablet. Check if other devices can connect to the Wi-Fi. Ensure you have entered the correct password.
Apps are crashing or freezing.	Close the problematic app and reopen it. Clear the app's cache in Settings > Apps > [App Name] > Storage & cache . Restart the tablet.
Tablet is slow or unresponsive.	Close unnecessary background apps. Clear cached data. Consider performing a factory reset (back up your data first).
Accessories (keyboard/mouse) not connecting.	Ensure accessories are charged and in pairing mode. Re-pair them via Bluetooth settings.

If the issue persists, please refer to the Warranty & Support section for further assistance.

8. SPECIFICATIONS

Detailed technical specifications for the ZONKO 11-inch Android 15 Tablet (Model B0FSKXYFF1).

Feature	Specification
Model Number	B0FSKXYFF1
Operating System	Android 15
Processor	MTK 8786 Octa-Core
RAM	16GB (8GB physical + 8GB virtual)
Internal Storage	128GB ROM
Expandable Storage	Up to 1TB via TF (microSD) card
Screen Size	11 Inches

Feature	Specification
Screen Resolution	1280 x 800 pixels
Rear Camera	21 MP
Front Camera	13 MP
Battery Capacity	8000mAh
Average Battery Life	9 Hours
Wireless Connectivity	2.4GHz/5G Dual-Band Wi-Fi (802.11ac, b, g, n)
Bluetooth	Bluetooth 5.0
GPS	Built-in GPS
Dimensions (LxWxH)	11 x 6 x 0.1 inches
Item Weight	3.16 pounds
Color	Gray

9. WARRANTY & SUPPORT

For warranty information or technical support, please contact the seller or ZONKO customer service directly. The user manual included in your package may contain specific contact details or warranty terms.

You can also refer to the "Attention" note in the product description which states: "Attention: Following pictures have detailed instruction of how to use those accessories or you can contact our seller for more help."