

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

> [MAXSHOT](#) /

> [MAXSHOT V1 Electric Scooter User Manual](#)

MAXSHOT V1

MAXSHOT V1 Electric Scooter User Manual

Model: V1

1. INTRODUCTION

Thank you for choosing the MAXSHOT V1 Electric Scooter. This manual contains important information regarding the safe assembly, operation, and maintenance of your scooter. Please read this manual thoroughly before your first ride to ensure optimal performance and safety. Keep this manual for future reference.

2. SAFETY INFORMATION

Riding an electric scooter carries inherent risks. Always prioritize safety. Failure to follow the instructions in this manual may result in serious injury or property damage.

General Safety Guidelines:

- Always wear a helmet and other protective gear (knee pads, elbow pads) while riding.
- Do not ride under the influence of alcohol or drugs.
- Observe all local traffic laws and regulations.
- Avoid riding in heavy traffic, at night, or in poor weather conditions (rain, snow, ice).
- Maintain a safe distance from other vehicles and pedestrians.
- Do not perform stunts or sudden maneuvers.
- Ensure the scooter is fully charged and all components are secure before each ride.
- The maximum load capacity is 264 lbs (120 kg). Do not exceed this limit.
- This scooter is designed for individuals aged 14 and above.

Battery Safety:

- Use only the original charger provided with the scooter.
- Do not charge the battery in unventilated areas or near flammable materials.
- Fully charge the scooter before its first use.
- Regularly inspect the battery and charger for any damage.
- Do not attempt to open or modify the battery pack.

3. PACKAGE CONTENTS

Upon unpacking, please verify that all items listed below are present and in good condition:

- MAXSHOT V1 Electric Scooter
- User Manual (this document)
- Power Charger
- Tool Kit (if applicable, for minor assembly)
- Storage Bag (for V1-Bag Included variant)

If any items are missing or damaged, please contact customer support immediately.

4. PRODUCT OVERVIEW

Familiarize yourself with the main components of your MAXSHOT V1 Electric Scooter.



Figure 4.1: Overview of the MAXSHOT V1 Electric Scooter and its accompanying mobile application interface.

Key Components:

- **Handlebar:** Controls steering, acceleration, and braking.

- **Display Panel:** Shows speed, battery level, headlight status, and cruise control.
- **Headlight:** Front illumination for visibility.
- **Brake Lever:** Activates the dual braking system.
- **Throttle:** Controls acceleration.
- **Folding Mechanism:** Allows for compact storage and transport.
- **Deck:** Foot platform.
- **Kickstand:** Supports the scooter when parked.
- **Front Wheel:** 8.5-inch solid tire.
- **Rear Wheel:** 8.5-inch solid tire with integrated 350W motor.
- **Taillight:** Rear illumination and brake light.
- **Charging Port:** For connecting the power charger.

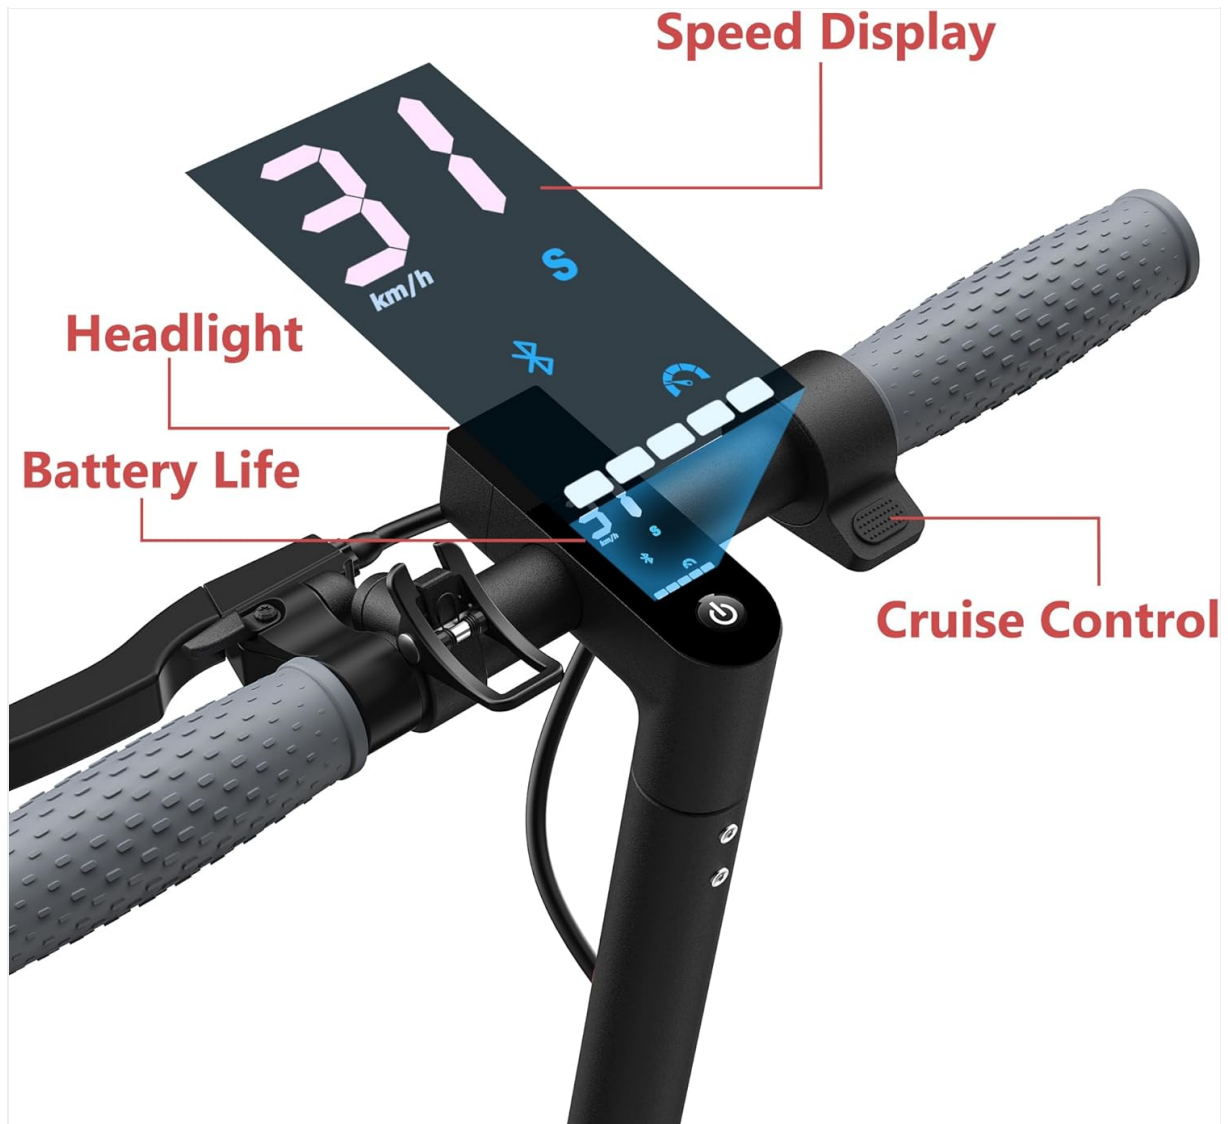


Figure 4.2: Detailed view of the handlebar display, indicating speed, battery life, headlight status, and cruise control.

350W POWERFUL MOTOR



19MPH
Top Speed



15%
Uphill Climbing

Figure 4.3: Illustration of the 350W powerful brushless motor, providing smooth acceleration and a top speed of 16 mph.

5. ASSEMBLY AND SETUP

The MAXSHOT V1 Electric Scooter comes largely pre-assembled. Follow these steps to prepare your scooter for its first ride.

1. Unfold the Scooter:

- Place the scooter on a flat surface.
- Release the folding latch located near the base of the handlebar stem.
- Carefully lift the handlebar stem until it locks into the upright position. Ensure the latch is securely engaged.



Figure 5.1: The scooter's portable folding design for easy transport and storage.

2. Attach Handlebars (if detached):

- Align the handlebars with the stem and slide them into place.
- Secure them using the provided screws and tools. Ensure they are tightened firmly.

3. **Initial Charge:** Before first use, fully charge the scooter's battery. Refer to the "Charging" section for detailed instructions.

4. **Safety Check:** Before every ride, check the brakes, tire pressure (if applicable, V1 has solid tires), and ensure all bolts and quick releases are tight.

6. CHARGING

The MAXSHOT V1 Electric Scooter is equipped with a 36V/5.2Ah battery. A full charge takes approximately 3-4 hours.

1. Locate the charging port on the scooter.
2. Ensure the scooter is powered off before charging.
3. Connect the charger to the charging port, then plug the charger into a standard wall outlet.
4. The indicator light on the charger will typically turn red during charging and green when fully charged.
5. Once fully charged, disconnect the charger from the wall outlet first, then from the scooter.

Important: Do not leave the scooter charging unattended for extended periods. Always charge in a well-ventilated area.



Figure 6.1: The MAXSHOT V1 offers a 12-mile range on a 3-4 hour charge, ideal for daily commutes.

7. OPERATING INSTRUCTIONS

Power On/Off:

- To power on, press and hold the power button on the display panel.
- To power off, press and hold the power button again until the display turns off.

Riding the Scooter:

1. Place one foot firmly on the deck and push off with the other foot to gain initial momentum (kick-start).
2. Once moving, gently press the throttle lever with your thumb to accelerate.
3. To brake, release the throttle and gently squeeze the brake lever on the handlebar. The scooter features a dual braking system (drum brake and EABS regenerative anti-lock braking) for effective stopping.
4. To activate the headlight, press the headlight button on the display or via the app.



Keep You Safe



Figure 7.1: The scooter's safety features include a bright headlight, taillight, and a responsive dual braking system.

Cruise Control:

To activate cruise control, maintain a consistent speed for a few seconds. The scooter will beep, and the cruise control icon will appear on the display. To deactivate, press the brake lever or throttle.

8. VICONT APP CONTROL

Enhance your riding experience by connecting your MAXSHOT V1 Electric Scooter to the Vicont mobile application.

1. **Download the App:** Search for "Vicont" in your smartphone's app store (iOS or Android) and install it.
2. **Pairing:**
 - Ensure your scooter is powered on and Bluetooth is enabled on your smartphone.
 - Open the Vicont app and follow the on-screen instructions to search for and connect to your scooter.
3. **App Functions:** The Vicont app allows you to:
 - Lock/Unlock the scooter.
 - Set customized maximum speed limits.

- Control the headlight.
- Activate/deactivate cruise control.
- Switch between different gear modes.
- Monitor battery level and riding time.
- Access fault detection system information.

SMART APP CONTROL



Bluetooth Pairing



Lock&Unlock Your Scooter



Headlight Control



Cruise Control



Customized Speed Limit



Switch Riding Modes

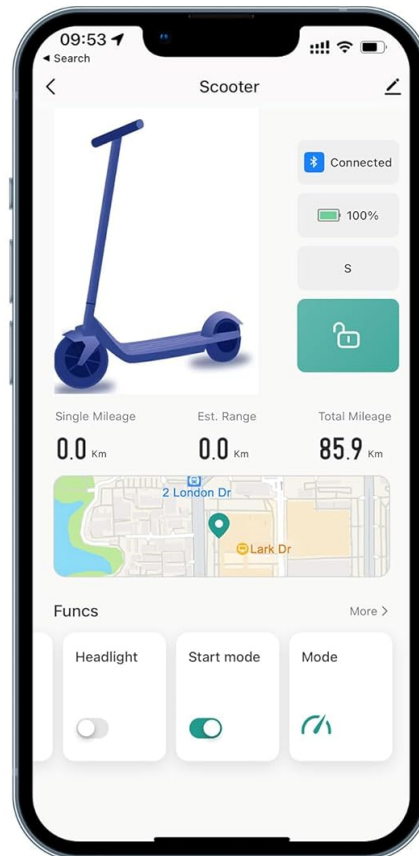


Figure 8.1: The Vicont app provides comprehensive control and monitoring features for your scooter.

9. FOLDING AND STORAGE

The MAXSHOT V1 features a one-step folding mechanism for convenient storage and portability.

1. Ensure the scooter is powered off.
2. Locate the folding latch at the base of the handlebar stem.
3. Press the safety button and pull the folding latch to release the stem.
4. Carefully fold the handlebar stem downwards until it clicks into place, securing it to the rear fender.
5. To unfold, reverse the process, ensuring the stem is securely locked in the upright position before riding.

Store the folded scooter in a dry, cool place away from direct sunlight and extreme temperatures.

10. MAINTENANCE

Regular maintenance ensures the longevity and safe operation of your MAXSHOT V1 Electric Scooter.

- **Cleaning:** Wipe the scooter with a damp cloth. Do not use high-pressure water or immerse the scooter in water.
- **Brakes:** Regularly check the brake levers and cables for proper function and adjustment. Ensure the brakes respond effectively.
- **Tires:** The V1 model uses solid tires, which do not require air pressure checks. Inspect them for wear and tear.
- **Fasteners:** Periodically check all screws and bolts to ensure they are tight.
- **Battery Care:** Avoid fully discharging the battery. Charge it regularly, even if not in use, to maintain battery health. Store the scooter with a partial charge (around 50-70%) if storing for extended periods.

11. TROUBLESHOOTING

This section addresses common issues you might encounter with your scooter.

Problem	Possible Cause	Solution
Scooter does not power on.	Low battery; loose connection; power button malfunction.	Charge the battery; check all connections; contact support if issue persists.
Motor not engaging/no acceleration.	Scooter not kick-started; throttle issue; motor fault.	Ensure you kick-start to gain initial speed; check throttle connection; use app for fault detection.
Brakes are not effective.	Brake cable loose; worn brake pads.	Adjust brake cable tension; inspect and replace brake pads if necessary.
App not connecting to scooter.	Bluetooth off; scooter off; app permissions.	Ensure scooter is on and Bluetooth is enabled on phone; check app permissions; restart app/phone.

For issues not listed here or if troubleshooting steps do not resolve the problem, please contact MAXSHOT customer support.

12. SPECIFICATIONS

Feature	Detail
Model Name	MAXSHOT V1
Motor Power	350W Brushless Motor
Max Speed	16 mph (25 km/h)
Battery Capacity	36V/5.2Ah
Max Range	Up to 12 miles (20 km)
Charging Time	3-4 hours
Weight Limit	264 lbs (120 kg)
Item Weight	26 lbs (11.8 kg)

Feature	Detail
Wheel Size	8.5 inches
Tire Type	Solid Rubber
Braking System	Dual Braking (Drum Brake + EABS)
Suspension	Dual Suspension
Frame Material	Aluminum
Special Features	Foldable, App Control, Headlight, Taillight

13. WARRANTY AND SUPPORT

MAXSHOT provides a comprehensive warranty for your electric scooter.

- **Warranty Period:** The MAXSHOT V1 Electric Scooter comes with a 365-day (12-month) warranty on various parts, or 180 days depending on the specific component. Please refer to your purchase documentation for detailed warranty terms.
- **Customer Support:** For any inquiries, technical assistance, or warranty claims, please contact MAXSHOT customer support. Contact information can typically be found on the MAXSHOT official website or your purchase receipt.

Reminder: Please fully charge the scooter first and then unplug the charger to power it on. Users should regularly check the condition of the battery and charging device, to ensure that the matching battery is used and the correct charging method is used, and avoid charging in an unventilated or flammable environment.