

Proscenic P20 One Pass

Proscenic P20 Cordless Vacuum Cleaner User Manual

Model: P20 One Pass

1. IMPORTANT SAFETY INSTRUCTIONS

Please read all instructions carefully before using this appliance and retain them for future reference. Failure to follow these instructions may result in electric shock, fire, or serious injury.

- This appliance is for household use only. Do not use outdoors or on wet surfaces.
- Do not allow children to operate the vacuum cleaner. Close supervision is necessary when used near children.
- Do not pick up flammable or combustible liquids, such as gasoline, or use in areas where they may be present.
- Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
- Do not use without the dust cup and/or filters in place.
- Turn off the appliance before connecting or disconnecting the motorized brush, charging, or performing any maintenance.
- Use only as described in this manual. Use only manufacturer's recommended attachments.
- Do not handle the charger or appliance with wet hands.
- If the appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, return it to a service center.

2. PRODUCT OVERVIEW

The Proscenic P20 One Pass is a powerful and versatile cordless vacuum cleaner designed for efficient home cleaning. It features a 2-in-1 vacuum and mop function, a flexible wand, and smart dust detection technology.



Image: Proscenic P20 One Pass Cordless Vacuum Cleaner

Key Features:

- **Powerful Suction:** 70KPa suction power and 680W brushless motor for deep cleaning.
- **Long Runtime:** Up to 70 minutes in Eco mode with a removable battery.
- **2-in-1 Vacuum & Mop:** Simultaneous dry vacuuming and wet mopping with a 230ml removable water tank.
- **Flexible & Foldable Wand:** 65 cm long cleaning arm that folds to reach under furniture without bending.
- **GreenEye Technology:** Green LED light detects invisible dust particles as small as 0.02 mm.
- **Smart LED Display:** Provides HEPA filter status, cleaning reminders, and mode selection.
- **Anti-Tangle Brush:** Designed to prevent hair and pet fur from tangling.
- **Self-Standing Design:** Allows the vacuum to stand upright independently for convenient storage.
- **Hygienic Emptying:** One-click dustbin emptying without direct contact with dirt.

Video Overview:

Your browser does not support the video tag.

Video: Proscenic P20 One Pass Product Overview. This video demonstrates the key features and functionality of the vacuum cleaner, including its flexible design, suction power, and 2-in-1 cleaning capabilities.

3. COMPONENTS AND ACCESSORIES

The Proscenic P20 comes with several attachments to enhance your cleaning experience:

- Main Unit (Motor, Dustbin, Battery)
- Flexible Extension Wand
- Motorized Floor Brush with GreenEye LED lights
- 2-in-1 Dust Brush
- Crevice Nozzle
- Wall Mount Dock
- Charger
- Removable Water Tank (for mopping)

Note: An anti-mite brush is available for separate purchase (ASIN: B0F1D1H6XM).



Image: The 2-in-1 Dust Brush accessory, suitable for various surfaces.



Image: The Crevice Nozzle accessory, ideal for reaching tight spaces.

4. ASSEMBLY AND CHARGING

Assembly:

1. Insert the extension wand into the main unit until it clicks into place.
2. Attach the desired cleaning head (e.g., motorized floor brush) to the other end of the extension wand until it clicks.
3. For mopping, attach the removable water tank to the motorized floor brush.

Charging:

Before first use, fully charge the battery. The P20 offers multiple charging options:

- **Direct Charging:** Plug the charger directly into the battery port on the main unit.
- **Wall Mount Charging:** Install the wall mount dock and place the vacuum cleaner on it. Connect the charger to the dock.
- **Removable Battery Charging:** Remove the battery from the main unit and charge it separately using the charger.



3 Metodi di Ricarica

Supporto a Parete / Collegamento Diretto / Batteria Rimovibile

Image: Demonstrates the three charging methods: wall mount, direct plug, and removable battery charging.

5. OPERATING INSTRUCTIONS

Power On/Off and Mode Selection:

1. Press the power button to turn the vacuum cleaner on or off.
2. Use the mode selection button on the LED display to switch between cleaning modes: Eco, Carpet, Turbo, and Auto.



Image: The smart LED display provides real-time information on cleaning modes, battery status, and HEPA filter reminders.

Using the Flexible Wand:

The innovative foldable wand allows you to clean under low furniture without bending. Simply press the release button on the wand to fold it and extend your reach.


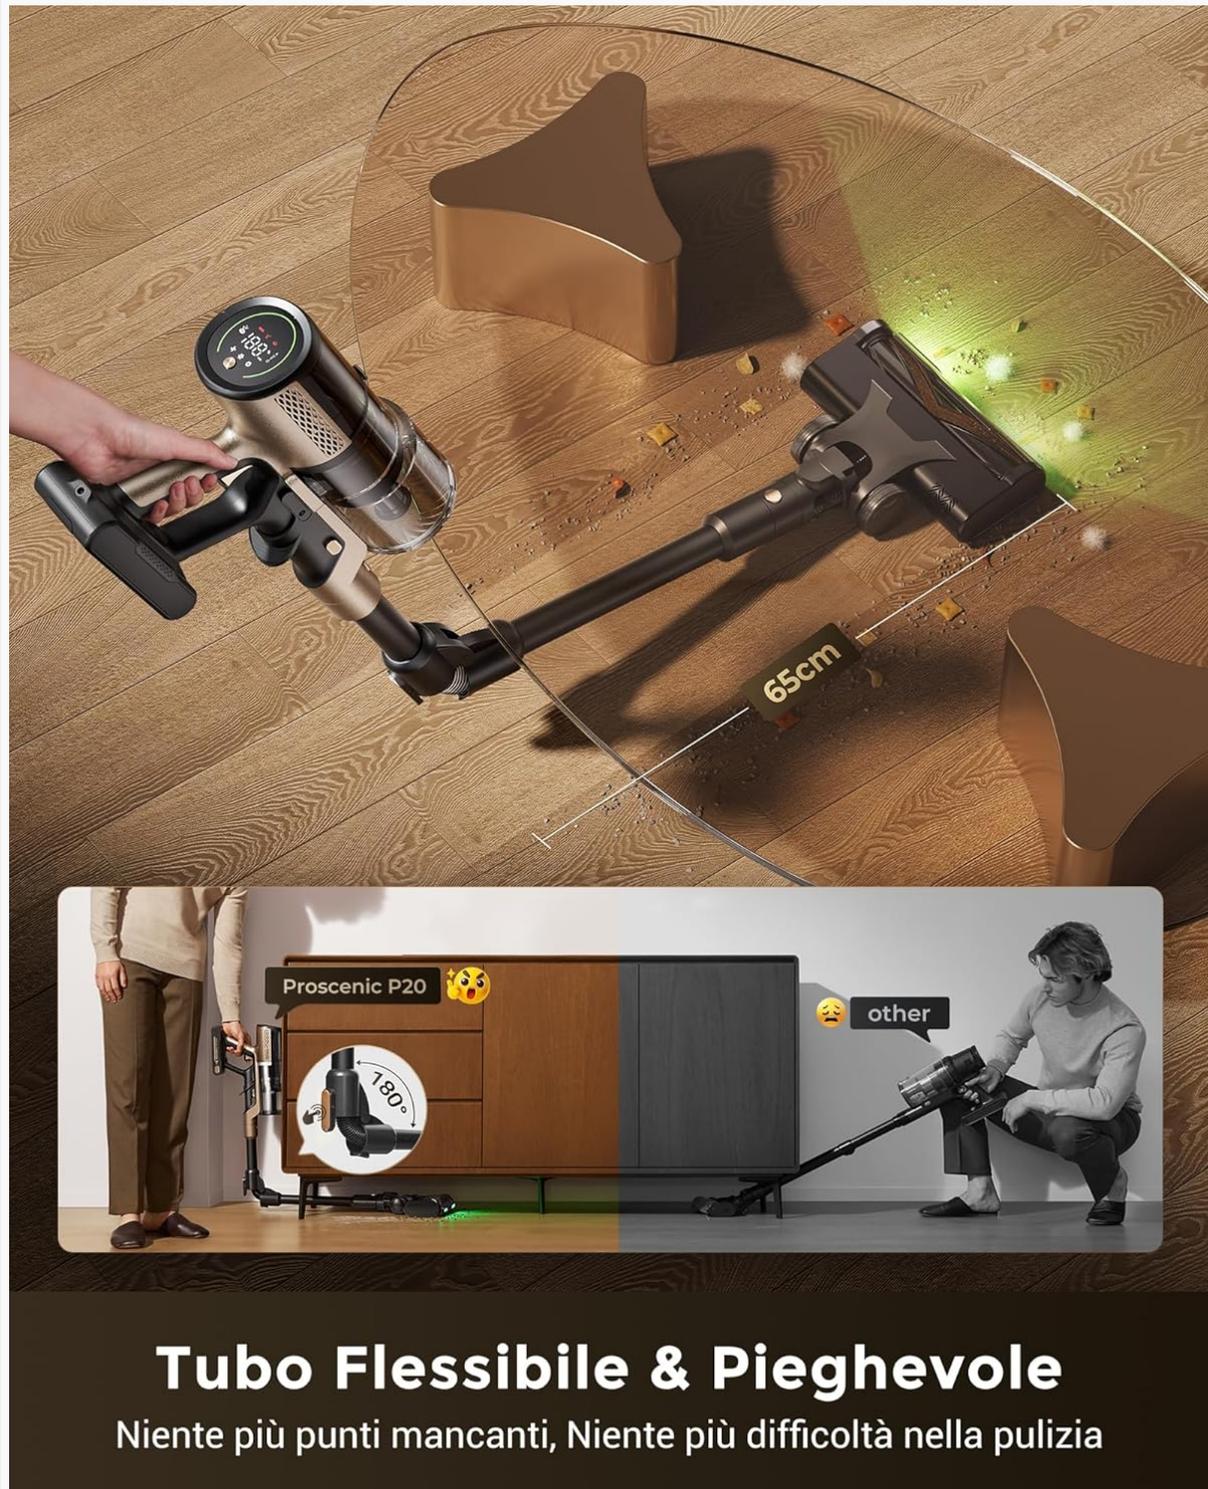


Image: The flexible wand allows easy cleaning under sofas and beds.

2-in-1 Vacuuming and Mopping:

To use the mopping function:

1. Fill the 230ml removable water tank with clean water.
2. Attach the water tank to the motorized floor brush.
3. The vacuum will simultaneously vacuum dry debris and mop the floor.

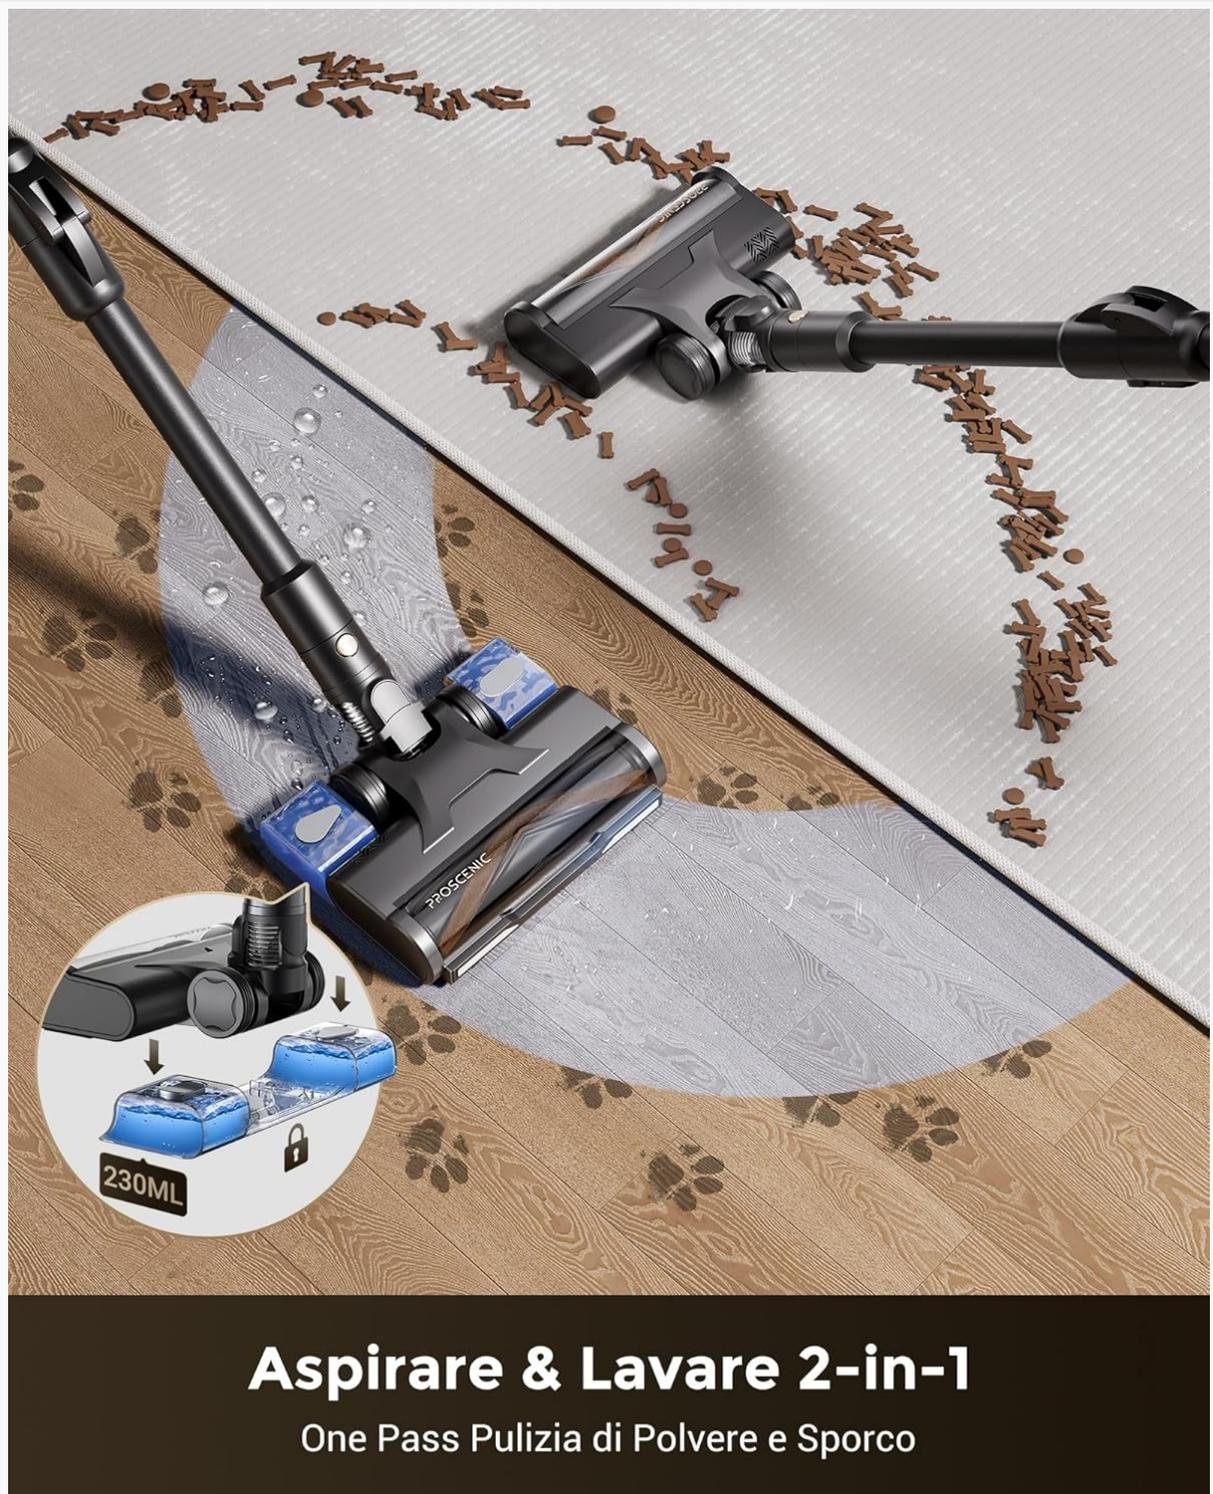

Aspirare & Lavare 2-in-1

One Pass Pulizia di Polvere e Sporco

Image: The vacuum cleaner performing simultaneous vacuuming and mopping.

Automatic Dust Detection (GreenEye Technology):

The GreenEye LED lights on the floor brush illuminate invisible dust, making it easier to spot and clean. In Auto mode, the vacuum automatically adjusts suction power based on the detected amount of dirt.



Image: Visual representation of automatic dust detection and suction adjustment.

6. MAINTENANCE

Regular maintenance ensures optimal performance and extends the lifespan of your Proscenic P20.

Emptying the Dustbin:

The dustbin features a one-click hygienic emptying system. Position the dustbin over a trash can and press the release button to open the bottom flap and empty the contents.



Svuotamento Sanitario

Rilascio della polvere con un solo pulsante

Image: Demonstrates the one-click dustbin emptying process.

HEPA Filter Maintenance:

The LED display will provide reminders for cumulative HEPA filter cleaning. To clean the HEPA filter:

1. Twist and remove the dustbin from the main unit.
2. Remove the HEPA filter and other filter components.
3. Tap the filter gently to remove loose dust. For a deeper clean, rinse the filter under running water.
4. Ensure the filter is completely dry before reassembling.



Display intelligente

Intuitif, confortable et idéal pour les seniors !

Image: The smart LED display indicating a HEPA filter cleaning reminder.

Cleaning the Anti-Tangle Brush:

Periodically check the motorized floor brush for tangled hair or debris. Use scissors to cut away any tangled hair and remove it from the brush roll.



Image: Close-up of the anti-tangle brush, showing its design to prevent hair entanglement.

Water Tank Maintenance:

After mopping, empty any remaining water from the tank and rinse it thoroughly. Allow it to air dry before storing.

7. TROUBLESHOOTING

If you encounter any issues with your Proscenic P20, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Vacuum does not turn on	Battery is not charged or not properly installed.	Ensure the battery is fully charged and correctly inserted.
Low suction power	Dustbin is full, filter is clogged, or brush roll is obstructed.	Empty the dustbin, clean the HEPA filter, and remove any obstructions from the brush roll.
Motorized brush stops working	Hair or debris tangled in the brush roll, or an object is jammed.	Turn off the vacuum, remove the brush roll, and clear any obstructions.
Water tank leaks	Water tank not properly installed or damaged.	Ensure the water tank is securely attached. Check for cracks or damage and replace if necessary.
LED display shows an error	HEPA filter missing or needs cleaning.	Check if the HEPA filter is installed correctly. Clean the filter if prompted by the display.

For further assistance, please contact Proscenic customer support.

8. SPECIFICATIONS

Feature	Specification
Brand	Proscenic
Model	P20 One Pass
Color	Black and Coffee
Product Dimensions	24 x 23 x 122 cm
Item Weight	3.6 Kilograms
Dustbin Capacity	1.5 Liters
Wattage	680 watts
Number of Speeds	3
Noise Level	59 Decibels
Runtime	Up to 70 minutes
Filter Type	HEPA Filter
Recommended Surfaces	All floor types
Power Source	Battery powered

9. WARRANTY AND SUPPORT

Proscenic is committed to providing excellent customer service.

- **24/7 Support:** Proscenic offers 24/7 customer support for any questions or issues you may have.
- **Service Centers:** Service and repair centers are available throughout Europe.

- **Warranty:** Please refer to your purchase documentation for specific warranty details.

For assistance, please visit the official Proscenic website or contact their customer service team directly.