

Silvergear 4382

Silvergear RC Car with Shooting Function Instruction Manual

Model: 4382

1. INTRODUCTION

This manual provides detailed instructions for the safe and effective use of your Silvergear RC Car with Shooting Function. Please read this manual thoroughly before operating the product and retain it for future reference.

The Silvergear RC Car combines remote-controlled driving with an interactive shooting feature, enhanced by LED lights. It offers two distinct play modes for varied entertainment.

2. SAFETY WARNINGS

- Not suitable for children under 4 years of age.
- Always use under direct adult supervision.
- Never aim the soft bullet gun at eyes, face, or animals.
- Use only the soft balls provided with this product. Do not insert other objects into the gun.
- Keep hands, hair, and loose clothing away from all moving parts of the vehicle.
- Operate the vehicle outdoors or in sufficiently large indoor spaces to prevent damage or injury.
- Before each use, inspect the vehicle and projectiles for any signs of damage. Do not use if damaged.
- Keep all toy components out of reach of small children when not in use.

3. PACKAGE CONTENTS

Verify that all items listed below are included in your package:

- Silvergear RC Car
- Remote Control

- Soft Ball Gun (Launcher)
- Target
- 10x Soft Balls (Darts)
- Screwdriver
- 2x Rechargeable Batteries
- USB Charging Cable



Image: All components included in the Silvergear RC Car package, including the car, remote, soft ball gun, target, soft balls, screwdriver, batteries, and USB cable.

4. SETUP

4.1. Battery Installation and Charging

The RC car and remote control require battery installation. Use the provided screwdriver to open battery compartments.

1. **Car Battery:** Insert one rechargeable battery into the car's battery compartment. Ensure correct polarity. Close the compartment securely.
2. **Remote Control Batteries:** Insert the other rechargeable battery into the remote control's battery compartment. Ensure correct polarity. Close the compartment securely.
3. **Charging:** Connect the rechargeable batteries to the USB charging cable. Plug the USB cable into a compatible USB power source (e.g., computer, USB wall adapter). The charging indicator will show the charging status. Charge fully before first use.

4.2. Attaching the Soft Ball Gun

The soft ball gun can be attached to either the car or the remote control, depending on the desired play mode.

- **To the Car:** Align the soft ball gun with the mounting point on top of the RC car and secure it firmly.
- **To the Remote Control:** Align the soft ball gun with the designated slot on the remote control and secure it firmly.

5. OPERATING INSTRUCTIONS

5.1. Remote Control Overview



Image: Diagram illustrating the functions of the remote control, including On/Off, Demo Function, Move Left/Right, Shoot, Turn On/Off Light, Forward, Reverse, Turn Left/Right.

- **ON/OFF:** Power button for the remote control.
- **DEMO FUNCTION:** Activates the automatic demo mode.
- **MOVE LEFT/RIGHT:** Controls the car's lateral movement.
- **SHOOT:** Fires a soft ball from the attached gun.
- **TURN ON/OFF LIGHT:** Toggles the car's LED lights.
- **FORWARD/REVERSE:** Controls the car's forward and backward movement.
- **TURN LEFT/RIGHT:** Controls the car's steering.

5.2. Play Mode 1: Run, Drift, and Shoot

This mode allows you to control the car's movement and shooting simultaneously.

1. Attach the soft ball gun to the top of the RC car.
2. Load the soft balls into the gun's magazine.
3. Turn on both the car and the remote control.
4. Use the remote control to drive, drift, and maneuver the car.
5. Press the 'SHOOT' button on the remote to fire soft balls at your target.



Image: Step-by-step guide for 'Run, Drift, and Shoot' mode, showing attaching the gun to the car, loading darts, driving with the remote, and firing.

5.3. Play Mode 2: Target Practice

This mode offers an interactive target shooting challenge.

1. Attach the soft ball gun to the remote control.
2. Place the target accessory on top of the RC car.
3. Turn on both the car and the remote control.
4. Activate the 'DEMO FUNCTION' on the remote control. The car will move automatically.
5. Aim the gun (attached to the remote) at the target on the moving car and press 'SHOOT' to hit the target.



Image: Step-by-step guide for 'Target Practice' mode, showing attaching the gun to the remote, placing the target on the car, activating demo mode, and shooting the target.

6. MAINTENANCE

- **Cleaning:** Wipe the car and remote control with a dry, soft cloth. Do not use water or chemical cleaners.
- **Storage:** Store the product in a cool, dry place away from direct sunlight when not in use. Remove batteries if storing for extended periods.
- **Battery Care:** Do not overcharge batteries. Allow them to cool before recharging.

7. TROUBLESHOOTING

- **Car not responding:**
 - Ensure both the car and remote control are powered on.
 - Check if batteries are correctly installed and fully charged.
 - Verify that the remote control and car are within operating range.
- **Soft balls not firing:**
 - Ensure the soft ball gun is properly attached to either the car or remote.
 - Check if soft balls are correctly loaded into the magazine.
 - Confirm that the 'SHOOT' button is being pressed firmly.
- **Short battery life:**
 - Ensure batteries are fully charged before use.
 - Battery performance may decrease over time; consider replacing if significantly degraded.

8. SPECIFICATIONS

Feature	Detail
Model Number	4382
Dimensions (L x W x H)	19 x 15 x 8 cm
Weight	1.18 kg
Recommended Age	4 years and up

Main Material	Plastic
Color	Black
Power Source	Battery Powered
Special Feature	Remote controlled car with shooting function
Educational Value	Promotes fine motor skills, hand-eye coordination, and strategic thinking through interactive play

9. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the contact details provided on the product packaging or visit the official Silvergear website. Keep your purchase receipt as proof of purchase.