

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Luqeeq](#) /

› [Luqeeq Bluetooth Thermal Label Printer User Manual - Model Luqeeqztx2krfq34](#)

Luqeeq Luqeeqztx2krfq34

Luqeeq Bluetooth Thermal Label Printer User Manual

Model: Luqeeqztx2krfq34

1. INTRODUCTION

Thank you for choosing the Luqeeq Bluetooth Thermal Label Printer. This compact, inkless printer is designed for convenience and portability, allowing you to print labels, memos, photos, and more directly from your smartphone or tablet. This manual provides essential information for setting up, operating, and maintaining your device.

What's in the Box

- 1 x Luqeeq Thermal Printer
- 1 x USB Charging Cable
- 1 x Roll of Thermal Paper (pre-installed inside the machine)
- 1 x User Manual



Image: Contents of the Luqeeq Thermal Printer package, including the printer, USB cable, and a roll of thermal paper.

Can be placed in a pocket or bag and taken anywhere.

No ink required.

Connect to your phone quickly and easily.



Image: The Luqeeq Thermal Printer shown held in a hand, illustrating its compact and portable design.

2. SETUP

2.1 Initial Charging

Before first use, ensure the printer is fully charged. Connect the provided USB cable to the printer's charging port and a standard USB power adapter (not included). The charging indicator light will typically show charging status and turn off or change color when fully charged. A full charge provides approximately 15 hours of standby time.

2.2 Loading Thermal Paper

Your printer comes with one roll of thermal paper pre-installed. To replace or load new paper:

1. Gently open the paper compartment cover.
2. Remove any empty paper roll or the protective sticker from a new roll.
3. Insert the new thermal paper roll, ensuring the printing side faces outwards and the paper feeds correctly into the print mechanism. Refer to the diagram inside the compartment for correct paper direction.
4. Close the paper compartment cover firmly until it clicks into place.



Image: The Luqeeq Thermal Printer with its paper compartment open, illustrating the correct direction for loading thermal paper.



Image: A close-up view of the open paper compartment of the Luqeeq Thermal Printer, showing the internal mechanism and paper roll placement.

2.3 App Installation and Bluetooth Connection

To use the printer, you need to download the **theiprint** application on your mobile device.

1. Search for "iprint" in your device's app store (available for Android and iOS systems).
2. Download and install the application.
3. Ensure your printer is powered on and Bluetooth is enabled on your mobile device.
4. Open the iprint app and follow the on-screen instructions to connect to your printer via Bluetooth 4.0 or above. The app should detect the printer automatically.

Supports for Android and for iOS operating systems.

Multiple printing templates are available for you to choose from. Used for printing images and photos, memos, shopping lists, etc.



Image: The Luqeeq Thermal Printer, emphasizing its compatibility with Android and iOS operating systems for app control and printing.

3. OPERATING INSTRUCTIONS

3.1 Power On/Off

- To power on: Press and hold the power button located on the side of the printer until the indicator light illuminates.
- To power off: Press and hold the power button again until the indicator light turns off.

3.2 Printing with the iprint App

The iprint app offers various functions for creating and printing content:

1. **Select Template:** The app provides multiple templates for labels, lists, messages, and various material themes. Choose the template that suits your needs.
2. **Edit Content:** Customize your chosen template with text, images, or other elements. The app supports printing black and white images, photos, memos, shopping lists, study notes, business plans, QR codes, and more.
3. **Print:** Once your content is ready, use the "1-click printing" function within the app to send the job to your connected printer.

How to Use:

Open the package and take out the product to use.



Image: The Luqeeq Thermal Printer, accompanied by text indicating basic usage instructions.

4. MAINTENANCE

4.1 Cleaning the Print Head

To ensure optimal print quality, periodically clean the print head. Use a soft, lint-free cloth lightly dampened with isopropyl alcohol. Gently wipe the print head surface. Allow it to dry completely before closing the cover or using the printer.

4.2 Battery Care

- Avoid fully discharging the battery frequently.
- Charge the printer regularly, even if not in use, to maintain battery health.
- Store the printer in a cool, dry place when not in use for extended periods.

4.3 Thermal Paper Storage

Store thermal paper in a cool, dry place away from direct sunlight, heat, and humidity to prevent fading and degradation of print quality.

5. TROUBLESHOOTING

5.1 Printer Not Connecting via Bluetooth

- Ensure the printer is powered on and within range of your mobile device.

- Verify Bluetooth is enabled on your mobile device.
- Restart both the printer and your mobile device.
- Check if the iprint app has Bluetooth permissions enabled in your device settings.

5.2 Poor Print Quality

- Check if the thermal paper is loaded correctly and is not old or damaged.
- Clean the print head as described in the Maintenance section.
- Ensure the printer battery is sufficiently charged. Low battery can affect print quality.
- Verify that the thermal paper specifications (57mm width, \leq 30mm diameter) match the printer's requirements.



Can print 57 x 30mm thermal paper with a resolution of 200 DPI.

Equipped with a 1000mAH lithium battery, it can last for 15 hours on a single charge.



Image: The Luqeeq Thermal Printer alongside a roll of thermal paper, illustrating its capability to print 57 x 30mm paper with 200 DPI resolution.

5.3 Printer Not Printing

- Confirm the printer is powered on and connected to the app.
- Check if there is thermal paper loaded and that the paper compartment is closed securely.
- Ensure the battery has sufficient charge.
- Restart the app and the printer.

6. SPECIFICATIONS

Feature	Specification
Model Number	Luqeeegztx2krfq34
Item Type	Thermal Printer
Printing Resolution	200 DPI
Printing Speed	40mm/s
Battery	1 x 1000mAh Rechargeable Lithium Battery
Connectivity	Bluetooth 4.0 or above
App Support	iPrint App (Android, iOS)
Applicable Paper Width	≤ 57mm (2.24in)
Applicable Paper Diameter	≤ 30mm (1.18in)
Product Dimensions	4.33 x 3.54 x 1.97 inches
Item Weight	6.9 ounces
Manufacturer	Luqeeeg