

## ARCADE CLASSICS WWE Ultra Series

# ARCADE CLASSICS WWE Ultra Series Game Machine Instruction Manual

Model: WWE Ultra Series (B0FSM2PWRZ)

Brand: ARCADE CLASSICS

## 1. PRODUCT OVERVIEW

The ARCADE CLASSICS WWE Ultra Series Game Machine brings classic arcade wrestling action directly to your home. This compact cabinet features a 17-inch liquid crystal screen and includes five iconic games for an authentic retro gaming experience.

- **Classic WWE Counter Arcade Experience:** Play through arcade favorites like WrestleFest, SuperStars, The Big Pro Wrestling!, Super Dodgeball, and Acrobatic Dog-Fight – all in one cabinet for nonstop action.
- **Multi-Game Retro Fun:** Each game in this compact arcade cabinet recreates its original gameplay, graphics, and sound for fast-paced excitement of classic wrestling.
- **Authentic Controls For True Arcade Feel:** Dual joysticks and buttons that replicate the authentic arcade experience. Grapple, slam, and dodge with precision as you battle your way through opponents.
- **Vibrant 17-inch Display:** The full-color 17-inch liquid crystal screen brings every punch, dodge, and throw to life with crisp detail.
- **Important Roster Note:** Due to current licensing restrictions, WrestleFest excludes Sgt. Slaughter and Legion of Doom, while SuperStars omits Andre the Giant and “Macho Man” Randy Savage.



Image: The ARCADE CLASSICS WWE Ultra Series Game Machine, highlighting the five classic games included in the cabinet.

**BRING THE FULL EXPERIENCE AT HOME**

## **WWE ULTRA SERIES ARCADE GAME**



### **RUB-RESISTANT CONTROL DECK**

Our control panel features a special protective coating that guards against smears, fading, and wear - keeping the artwork vivid and authentic without the need for a plastic overlay.



### **AUTHENTIC GAMEPLAY**

With classic graphics, dual joysticks, buttons, and sounds you can immerse yourself in nostalgia that looks just like the original.



### **AC ADAPTER INCLUDED**

Plug in and play instantly—no batteries, no waiting, all action



### **LIGHT-UP MARQUEE**

Adds that classic arcade glow to your game room or collection shelf—just like the originals!



### **17" LIQUID CRYSTAL SCREEN**

Oversized full-color display delivers crisp visuals and dynamic gameplay that jumps off the screen.



### **5 DUAL-PLAYER GAMES**

Battle it out in 5 arcade-style favorites—WrestleFest, SuperStars, The Big Pro Wrestling!, Super Dodgeball, and Acrobatic Dog-Fight



Image: Detailed features of the WWE Ultra Series Arcade Game, emphasizing the rub-resistant control deck, authentic gameplay, included AC adapter, light-up marquee, 17-inch liquid crystal screen, and the five dual-player games.

## **Product Video Overview**

Your browser does not support the video tag.

Video: A brief overview of the Arcade Classics WWE Ultra Series Arcade machine, showcasing its design and features.

## **2. SETUP INSTRUCTIONS**

Carefully unpack all components and ensure all parts are present before beginning assembly. A screwdriver is required for assembly. Follow the steps below for proper setup.

### **Assembly Video Guide**

Your browser does not support the video tag.

Video: A detailed step-by-step guide on assembling the Arcade Classics WWE Ultra Series Game Machine.

## Step-by-Step Assembly

1. **Unpack Components:** Carefully remove all parts from the packaging. Verify that all panels, hardware, and electronic components are present and undamaged.
2. **Assemble Base:** Attach the side panels to the base panel using the provided screws and dowels. Ensure all connections are secure.
3. **Install Internal Supports:** Secure the internal support panels within the cabinet structure. These provide stability and support for the screen and control deck.
4. **Mount Screen:** Carefully place the 17-inch liquid crystal screen into its designated slot. Secure it with the appropriate brackets and screws. Connect the screen's power and data cables to the main board.
5. **Attach Control Deck:** Position the control deck onto the top of the cabinet. Ensure the joysticks and buttons align with their respective openings. Secure the control deck with screws.
6. **Connect Power:** Plug the included AC adapter into the machine's power input and then into a standard wall outlet.
7. **Final Checks:** Before powering on, double-check all connections and ensure all screws are tightened.



Image: The dimensions of the WWE Ultra Series Arcade Game, illustrating its height, width, and depth for placement planning.

### 3. OPERATING INSTRUCTIONS

---

Once assembled and powered on, the game machine is ready for use. The main menu will display the available games.

1. **Power On:** Ensure the AC adapter is securely connected. The machine will power on automatically.
2. **Select Game:** Use the joystick to navigate through the game selection menu. Press the designated action button (usually a red button) to select a game.
3. **Insert Coin (Virtual):** For most games, you will need to press the "Player 1 Start" or "Player 2 Start" button to simulate inserting a coin and begin play.
4. **Controls:**
  - **Joystick:** Controls character movement.
  - **Action Buttons:** Perform various in-game actions such as punching, kicking, grappling, or special moves. Refer to the on-screen game instructions for specific controls.
  - **Volume Control:** Adjust the volume using the dedicated volume buttons or knob on the control deck.
5. **Exiting a Game:** To return to the main game selection menu, typically hold down the "Player 1 Start" button for a few seconds, or follow the on-screen prompts.



Image: Two individuals actively engaged in playing the WWE Ultra Series Arcade Game, showcasing the two-player control setup.



Image: A close-up of the control deck, highlighting the joysticks and action buttons for gameplay.

## 4. MAINTENANCE

Proper maintenance ensures the longevity and optimal performance of your game machine.

- **Cleaning:** Use a soft, dry cloth to wipe down the cabinet and screen. Avoid abrasive cleaners or solvents that could damage the finish or screen.
- **Dusting:** Regularly dust the vents and control panel to prevent dust buildup, which can affect performance.
- **Storage:** If storing the machine for an extended period, ensure it is powered off and unplugged. Store in a cool, dry place away from direct sunlight and extreme temperatures.
- **Cable Management:** Keep all cables neatly organized and free from kinks or pinches to prevent damage.

## 5. TROUBLESHOOTING

If you encounter any issues with your game machine, refer to the following common troubleshooting steps:

- **No Power:**
  - Ensure the AC adapter is securely plugged into both the machine and a working wall outlet.
  - Check if the wall outlet is functional by plugging in another device.
- **No Picture/Sound:**
  - Verify all internal cable connections to the screen and main board are secure.
  - Check the volume settings on the control deck.
- **Controls Unresponsive:**
  - Ensure the control deck cables are properly connected to the main board.
  - Restart the machine by unplugging and re-plugging the power adapter.
- **Game Freezes:**
  - Power cycle the machine. If the issue persists, contact customer support.

## 6. SPECIFICATIONS

<b>Screen Size</b>	17 Inches
<b>Display Type</b>	LCD
<b>Power Source</b>	Corded Electric
<b>Material</b>	Plastic, Acrylonitrile Butadiene Styrene (ABS)
<b>Form Factor</b>	Full Size
<b>Manufacturer Recommended Age</b>	3 years and up
<b>UPC</b>	885561097054
<b>ASIN</b>	B0FSM2PWRZ
<b>Manufacturer</b>	Basic Fun Inc.



Image: A visual comparison of different Arcade Classics series (Supreme, Ultra, Counter, Handheld) illustrating their relative sizes.

## 7. WARRANTY AND SUPPORT

For warranty information or customer support, please refer to the documentation included with your product or visit the manufacturer's official website.

Protection plans are available for extended coverage:

- 2-Year Protection Plan
- 3-Year Protection Plan
- Complete Protect: One plan covers all eligible past and future purchases.

This product includes a 30-day free return policy for refunds or replacements.

