



Manuals.plus /

› TMEZON /

› TMEZON C680 Indoor Window Security Camera User Manual

## TMEZON C680

# TMEZON C680 Indoor Window Security Camera User Manual

Model: C680

## INTRODUCTION

---

Thank you for choosing the TMEZON C680 Indoor Window Security Camera. This manual provides essential information for setting up, operating, and maintaining your camera. Please read it thoroughly before use and retain it for future reference.

## Safety Information

- Use only the provided power adapter.
- Do not expose the camera to extreme temperatures or humidity.
- This camera is designed for indoor use only.
- Keep out of reach of children.

## PACKAGE CONTENTS

---

Verify that all items are present in your package. If any items are missing or damaged, please contact customer support.

- TMEZON C680 Indoor Window Security Camera
- Power Adapter
- USB Power Cable
- Mounting Kit (screws, anchors)
- User Manual

## PRODUCT OVERVIEW

---

Familiarize yourself with the components of your TMEZON C680 camera.



Image: The TMEZON C680 Indoor Window Security Camera. This image displays the camera's compact, circular form factor, highlighting the main lens and overall design.

## Camera Components

1. **Camera Lens:** Captures 4MP 2.5K video.
2. **Status Indicator Light:** Indicates camera status (e.g., solid blue for connected, flashing red for disconnected).
3. **Microphone:** For audio input and two-way audio communication.
4. **Speaker:** For audio output and two-way audio communication.
5. **Power Port:** Connects to the power adapter.
6. **Reset Button:** Press and hold for 5 seconds to reset the camera to factory settings.
7. **MicroSD Card Slot:** For local storage (card not included).

## SETUP

---

### Step 1: Download the App

Search for the "TMEZON Smart" app (or similar, as specified in your product documentation) in your mobile device's app store (App Store for iOS, Google Play Store for Android). Download and install the app.

## Step 2: Power On the Camera

Connect the USB power cable to the camera's power port and plug the power adapter into a wall outlet. The camera's status indicator light will turn on. Wait for it to flash red, indicating it's ready for pairing.

## Step 3: Add Device in App

1. Open the TMEZON Smart app and create an account or log in.
2. Tap the "+" icon (or "Add Device") to add a new camera.
3. Select "Security Camera" or "Smart Camera" from the device list.
4. Follow the on-screen instructions to connect the camera to your 2.4GHz Wi-Fi network. Ensure your phone is connected to the same 2.4GHz Wi-Fi network.
5. The app will display a QR code. Position your camera to scan this QR code from your phone screen. You will hear a confirmation sound from the camera once scanned successfully.
6. Once connected, the status indicator light will turn solid blue.

## Step 4: Window Mounting

The TMEZON C680 is designed for easy window mounting.

1. Choose a clean, flat window surface for optimal viewing.
2. Use the provided mounting kit to secure the camera to the window frame or a nearby wall, ensuring the lens faces outwards.
3. Adjust the camera angle to cover your desired surveillance area.

## OPERATING INSTRUCTIONS

---

### Live View

Open the TMEZON Smart app and select your camera from the device list to access the live video feed.

### Recording and Playback

The camera supports 24/7 continuous recording to a local MicroSD card (not included).

- **Insert MicroSD Card:** Power off the camera, insert a MicroSD card (up to 128GB, Class 10 or higher recommended) into the slot, then power on.
- **View Recordings:** In the app's live view, tap the "Playback" or "History" icon to access recorded footage.

### Two-Way Audio

In the live view interface, tap the microphone icon to speak through the camera's speaker. Tap the speaker icon to listen to audio from the camera's microphone.

### Color Night Vision

The camera automatically switches to color night vision in low-light conditions, providing clear, vivid footage up to 32 feet. No manual adjustment is typically required.

### Motion Detection and Alerts

The camera features motion-only alert type.

1. In the app, navigate to the camera settings.
2. Find "Motion Detection" or "Alert Settings."
3. Enable motion detection and customize sensitivity levels and alert schedules as needed.
4. You will receive push notifications on your mobile device when motion is detected.

## MAINTENANCE

---

### Cleaning

Gently wipe the camera lens and body with a soft, dry cloth. Do not use liquid cleaners or abrasive materials.

### Firmware Updates

Periodically check the TMEZON Smart app for available firmware updates to ensure optimal performance and security. Follow the in-app instructions for updating.

### Storage

When not in use for extended periods, store the camera in a cool, dry place, away from direct sunlight.

## TROUBLESHOOTING

---

Problem	Solution
Camera not powering on.	Ensure the power adapter is securely connected to both the camera and a working power outlet. Try a different outlet.
Cannot connect to Wi-Fi.	<ul style="list-style-type: none"><li>• Ensure your Wi-Fi network is 2.4GHz. The camera does not support 5GHz Wi-Fi.</li><li>• Check Wi-Fi password.</li><li>• Move the camera closer to the Wi-Fi router.</li><li>• Reset the camera by pressing the reset button for 5 seconds and try pairing again.</li></ul>
No recording to MicroSD card.	<ul style="list-style-type: none"><li>• Ensure the MicroSD card is inserted correctly and is Class 10 or higher.</li><li>• Format the MicroSD card through the app settings.</li><li>• Check if the card is full; replace or clear old recordings.</li></ul>
Poor video quality.	<ul style="list-style-type: none"><li>• Ensure the camera lens is clean.</li><li>• Check your Wi-Fi signal strength; a weak signal can affect streaming quality.</li><li>• Adjust camera placement to avoid glare or obstructions.</li></ul>

## SPECIFICATIONS

---

**Model:** C680

**Resolution:** 4MP (2.5K)

**Night Vision:** Color Night Vision, up to 32 feet

**Connectivity:** 2.4GHz Wi-Fi

**Storage:** MicroSD Card (up to 128GB, not included)

**Audio:** Two-Way Audio (Built-in Microphone & Speaker)

**Power:** Corded Electric, 5W

**Indoor/Outdoor Use:** Indoor Only

**Viewing Angle:** 120 Degrees

**Dimensions:** Approximately 3.5 x 3.5 x 3.5 inches

**Material:** Plastic

**Alert Type:** Motion Only

## **WARRANTY AND SUPPORT**

---

TMEZON products are designed for reliability and performance. For warranty information, technical support, or customer service inquiries, please refer to the contact information provided on the product packaging or visit the official TMEZON website.

You can also visit the TMEZON store on Amazon for additional product information and support: [TMEZON Amazon Store](#).