

SKMEI 2440

SKMEI Model 2440 Digital Sports Watch User Manual

Comprehensive Instructions for Operation and Maintenance

1. INTRODUCTION

Thank you for choosing the SKMEI Model 2440 Digital Sports Watch. This manual provides detailed instructions for the proper use and care of your watch. Please read it carefully to ensure optimal performance and longevity of your timepiece.

2. PRODUCT FEATURES

- **Durable Construction:** High-strength ABS material for various sports and outdoor activities.
- **Multifunction Integration:** Dual time zone display, stopwatch, alarm, countdown timer, and date display.
- **High Readability Display:** Large font digital display with EL backlight for clear viewing in any lighting.
- **Comfortable Fit:** Soft and breathable TPU strap for extended wear.
- **Excellent Water Resistance:** 50-meter water resistance rating for daily water exposure.



COUNT DOWN



DATE / WEEK



WR 50M



12/24 HOUR



EL LIGHT



ALARM



2 TIME



STOPWATCH

Image: Visual representation of the watch's key functions including countdown, date/week, 50M water resistance, 12/24 hour format, EL light, alarm, dual time, and stopwatch.

3. COMPONENT IDENTIFICATION

Familiarize yourself with the buttons and display elements of your SKMEI Model 2440 watch:

FEATURE SET



Image: A detailed diagram highlighting the various buttons and display indicators on the watch face. These include the LIGHT button (top left), MODE button (bottom left), START button (top right, also functions as Light +/-), and RESET button (bottom right, also functions as Reset +/-). The display shows indicators for Week, Date, Time, and Alarm.

- **LIGHT Button (Top Left):** Activates the EL backlight.
- **MODE Button (Bottom Left):** Cycles through different modes (Time, Stopwatch, Alarm, Countdown, Dual Time).
- **START Button (Top Right):** Used to start/stop functions and adjust values (often indicated as Light +/-).
- **RESET Button (Bottom Right):** Used to reset functions and adjust values (often indicated as Reset +/-).

4. BASIC OPERATION

4.1. EL Backlight

Press the **LIGHT** button (top left) to illuminate the display. The backlight will remain active for a few seconds.

LUMINOUS DISPLAY



Image: A side-by-side comparison showing the watch display in normal ambient light and with the EL backlight activated, demonstrating improved visibility in low-light conditions.

4.2. Mode Switching

Press the **MODE** button (bottom left) repeatedly to cycle through the different operational modes:

1. Time Mode (default display)
2. Stopwatch Mode
3. Alarm Setting Mode
4. Countdown Timer Mode
5. Dual Time Mode

5. SETTING THE TIME AND DATE

1. From Time Mode, press and hold the **RESET** button for approximately 3 seconds until the seconds digits begin to flash. This indicates you are in setting mode.
2. Press the **MODE** button to cycle through the setting items: Seconds → Hours → Minutes → Year → Month → Day → 12/24 Hour Format.
3. While an item is flashing, press the **START** button to increase the value or the **RESET** button to

decrease the value (if applicable).

4. Once all settings are adjusted, press the **RESET** button again to exit the setting mode and return to normal Time Mode.

5.1. 12/24 Hour Format

When the 12/24 hour format is flashing during time setting, press the **START** button to toggle between 12-hour (indicated by 'PM' for afternoon hours) and 24-hour formats.

6. ALARM FUNCTION

1. From Time Mode, press the **MODE** button once to enter Alarm Setting Mode. The alarm time will be displayed.
2. Press and hold the **RESET** button until the hour digits begin to flash.
3. Press the **START** button to adjust the hour.
4. Press the **MODE** button to select the minute digits, then press the **START** button to adjust the minutes.
5. Press the **RESET** button to confirm the alarm time and exit setting mode.
6. To activate/deactivate the alarm, in Alarm Setting Mode, press the **START** button. An alarm icon will appear/disappear on the display.
7. When the alarm sounds, press any button to stop it.

7. STOPWATCH FUNCTION

1. From Time Mode, press the **MODE** button twice to enter Stopwatch Mode. The display will show "00:00:00".
2. Press the **START** button to begin timing.
3. Press the **START** button again to pause timing.
4. Press the **RESET** button while paused to reset the stopwatch to "00:00:00".
5. To resume timing after pausing, press the **START** button.

8. COUNTDOWN TIMER

1. From Time Mode, press the **MODE** button three times to enter Countdown Timer Mode.
2. Press and hold the **RESET** button until the hour digits begin to flash.
3. Press the **START** button to adjust the hour.
4. Press the **MODE** button to select the minute digits, then press the **START** button to adjust the minutes.
5. Press the **RESET** button to confirm the countdown time.
6. Press the **START** button to begin the countdown.
7. Press the **START** button again to pause the countdown. Press **START** again to resume.
8. Press the **RESET** button while paused to reset the countdown to the set time.
9. When the countdown reaches zero, an alarm will sound. Press any button to stop it.

9. DUAL TIME ZONE

1. From Time Mode, press the **MODE** button four times to enter Dual Time Mode.
2. Press and hold the **RESET** button until the hour digits begin to flash.
3. Press the **START** button to adjust the hour for the second time zone.
4. Press the **MODE** button to select the minute digits, then press the **START** button to adjust the minutes.
5. Press the **RESET** button to confirm the dual time setting and exit setting mode.

10. WATER RESISTANCE GUIDELINES

Your SKMEI Model 2440 watch has a water resistance rating of 50 meters (5 ATM). This means it is suitable for daily use, including hand washing, rain exposure, and cold showers. It is **not** suitable for swimming, diving, or hot water activities.

- Do not press any buttons while the watch is submerged in water.
- Avoid exposing the watch to hot water or steam (e.g., hot showers, saunas, hot tubs) as this can compromise the seals.
- After exposure to saltwater, rinse the watch with fresh water and dry it thoroughly.



Image: An illustration demonstrating the 50M water resistance of the watch, indicating it is suitable for activities like washing hands, being in the rain, and cold showers, with checkmarks confirming suitability.

11. MAINTENANCE

- **Cleaning:** Wipe the watch regularly with a soft, dry cloth. For stubborn dirt, use a slightly damp cloth and mild soap, then dry thoroughly.
- **Avoid Chemicals:** Do not expose the watch to solvents, detergents, perfumes, or cosmetics, as these can damage the case, strap, or seals.
- **Temperature Extremes:** Avoid exposing the watch to extreme temperatures (both hot and cold) for prolonged periods.
- **Battery Replacement:** When the display becomes dim or functions become erratic, the battery may need replacement. It is recommended to have the battery replaced by a qualified watch technician to ensure water resistance is maintained.
- **Storage:** Store the watch in a cool, dry place away from direct sunlight when not in use.

12. TROUBLESHOOTING

- **Display is blank:** The battery may be depleted. Replace the battery.
- **Buttons not responding:** Ensure the watch is not in a locked mode (if applicable, though not a feature on this model). Try resetting the watch by removing and reinserting the battery (professional service recommended).
- **Time is incorrect:** Re-set the time following the instructions in Section 5. Check for proper 12/24 hour format.
- **Water inside the watch:** Immediately take the watch to a professional for inspection and repair to prevent further damage.

13. SPECIFICATIONS

PRODUCT PARAMETER

38mm /1.5in

38mm /1.5in

BRAND: SKMEI

MODEL: 2440

WEIGHT: 42.7g

MOV' T: DIGITAL

CRYSTAL: RESIN

CASE: ABS

BAND: TPU

BUCKLE: STAINLESS STEEL

W / P : 50M

FUNCTION: 2Time, Chrono, Alarm, Date, Week, EL Light, 12/24 hour clock, Countdown.

Case width: 38mm/1.5in

Case thickness: 12.9mm/0.5in

Band Width: 35mm/1.38in

Watch length: 255m/10.04in

Image: A detailed graphic outlining the product parameters, including physical dimensions, materials used for the case, band, and buckle, and a list of functions.

Parameter	Detail
Brand	SKMEI

Model	2440
Weight	42.7g
Movement	Digital
Crystal	Resin
Case Material	ABS
Band Material	TPU
Buckle Material	Stainless Steel
Water Resistance	50M (5 ATM)
Case Width	38mm / 1.5in
Case Thickness	12.9mm / 0.5in
Band Width	35mm / 1.38in
Watch Length	255mm / 10.04in
Functions	Dual Time, Chronograph (Stopwatch), Alarm, Date, Week, EL Light, 12/24 Hour Clock, Countdown

14. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the documentation provided with your purchase or contact the retailer where the watch was acquired. You may also visit the official SKMEI website for further assistance.