

LittleTora DWE23

LittleTora DWE23 Electric Automatic Nail Clipper User Manual

Model: DWE23

1. INTRODUCTION

The LittleTora DWE23 Electric Automatic Nail Clipper is a versatile 2-in-1 device designed for trimming, polishing, and shining fingernails. This rechargeable, cordless unit offers a convenient and mess-free nail care experience for individuals of all ages, including babies, seniors, and adults. Its low-noise operation and integrated safety features ensure comfortable and secure use.

Important Note: This automatic nail clipper is suitable only for trimming fingernails, not for toenails.

2. SAFETY INFORMATION

- Do not insert the cleaning brush into the blade opening, as this may cause damage or blockage of the blade edge.
- Keep the device out of reach of children when not in use, despite the integrated child lock feature.
- Avoid exposing the device to water or other liquids.
- Do not attempt to disassemble or repair the device yourself. Contact customer support for assistance.
- Ensure the device is fully charged before first use to prevent operational issues.

3. PRODUCT OVERVIEW

Familiarize yourself with the components of your LittleTora DWE23 Electric Automatic Nail Clipper:

Product Details and Inclusions



Image: Product Details and Inclusions. This image illustrates the various parts of the nail clipper and its accessories.

- **LED Light:** Provides illumination for enhanced visibility during use.
- **Storage Box:** Collects nail debris for a mess-free experience.
- **Indicator Light:** Shows device status (e.g., charging, operational).
- **Trim Switch:** Activates the trimming function.
- **Polish Switch:** Activates the polishing/grinding function.
- **Cover:** Protective cover for the device.
- **Cleaning Brush:** For cleaning the device (do not insert into blade).
- **Type-C Charging Cable:** For recharging the built-in battery.

4. SETUP

4.1 Initial Charging

Before first use, or if the device does not turn on, fully charge the unit. Connect the provided Type-C charging cable to the device's charging port and plug the other end into a compatible USB power source. The indicator light will show the charging status. A full charge provides up to 4 hours of use.

Multifunctional Design for All Ages

Perfect for Trimming, Polishing, and Storage!



Trimming



Polishing



Convenient Storage



Image: Silent Design Operation, Long-Lasting Power. This image highlights the device's quiet operation and long battery life.

5. OPERATING INSTRUCTIONS

5.1 Turning On/Off and Child Lock

To turn on the device, press and hold both the trim and polish switches simultaneously for approximately 2 seconds. This activates the child-lock function, preventing accidental operation. The device will automatically power off after 15 seconds of inactivity to conserve battery life.

Built for Convenience and Safety



Low Noise Operation

Quiet (40dB) for a comfortable experience.



LED Light for Visibility

Illuminates for precise trimming in low light.



Protective Design

Secure nail fit with raised sides for added safety.



Long Battery Life

Up to 4 hours of use.



Auto-Off Function

Powers off automatically after 15 seconds of inactivity to save battery.



Child Safety Lock

Prevents accidental activation, ensuring safe use.

Image: Enhanced Safety Features. This image illustrates the child safety lock, hidden blade, LED light, and auto-off function.

5.2 Trimming, Polishing, and Shining Nails

Follow these steps for optimal nail care:

How to use

Trim Nails

Place the product with the front facing up. Rest your finger in the designated area, insert your nail into the hole, and rotate your finger left and right to trim it evenly.



Polish Nails

Hold your nail perpendicular to the rotating head. Gently polish the tip of your nail while rotating your finger left and right to smooth it out.



Shine Nails

Place your nail parallel to the rotating head. Gently polish the surface of the nail and slowly move your finger to achieve a shiny finish.



Clean Up

Press the top of the storage bin cover to release and dispose of the nail debris.



Image: How to Use. This image provides a visual guide for trimming, polishing, shining, and cleaning the device.

1. **Trim Nails:** With the product's front facing up, rest your finger in the designated trimming area. Insert your fingernail into the hole and gently rotate your finger left and right to achieve an even trim.
2. **Polish Nails:** Hold your fingernail perpendicular to the rotating polishing head. Gently polish the tip of your nail while rotating your finger left and right to smooth the edges.
3. **Shine Nails:** Place your fingernail parallel to the rotating polishing head. Gently move your finger across the surface of the nail to achieve a shiny finish.

5.3 Speed Modes

The device features two speed modes to customize your nail care experience:

Dual-Speed Polishing for Customized Care



Image: Dual-Speed Polishing for Customized Care. This image demonstrates the two available speed settings.

- **Low-Speed Mode:** Ideal for babies or individuals with delicate nails, offering a gentler and more precise finish.
- **High-Speed Mode:** Provides faster and more efficient results for general adult use.

Switch between modes using the designated speed control button (if applicable, otherwise imply automatic adjustment based on pressure or a single button press).

6. MAINTENANCE

6.1 Cleaning

After each use, clean the device to maintain hygiene and performance:

1. Press the top of the storage bin cover to release and dispose of the collected nail debris.
2. Use the provided cleaning brush to gently remove any remaining dust or particles from the trimming and polishing areas. Remember not to insert the brush into the blade opening.
3. Wipe the exterior of the device with a soft, dry cloth.

Storage for Nail Debris

Keep your space clean and hygienic with the convenient storage compartment for easy disposal of nail chips



Image: Storage for Nail Debris. This image demonstrates the integrated compartment for collecting nail clippings.

6.2 Storage

Store the nail clipper in a cool, dry place away from direct sunlight and moisture. Ensure the device is turned off and the child lock is engaged before storing.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Device does not turn on.	Low battery or child lock engaged.	Charge the device fully using the Type-C cable. Press and hold both switches simultaneously to disengage the child lock and power on.
Nails are not trimmed or polished effectively.	Incorrect technique or debris accumulation.	Ensure your finger is positioned correctly in the trimming/polishing area. Clean the device thoroughly to remove any nail debris. Try the high-speed mode for thicker nails.

Problem	Possible Cause	Solution
Device is not charging.	Faulty cable or power source.	Check the Type-C charging cable for damage. Try a different USB power adapter or port. Ensure the cable is securely connected to the device.
Unusual noise during operation.	Debris caught in the mechanism.	Turn off the device and carefully clean the trimming and polishing areas. If the noise persists, discontinue use and contact customer support.

8. SPECIFICATIONS

Feature	Detail
Model Number	DWE23
Brand	LittleTora
Functions	Trimming, Polishing, Shining
Battery Type	Built-in 400mAh Rechargeable Battery
Charging Port	Type-C
Usage Time	Up to 4 hours (on a full charge)
Noise Level	As low as 40dB
Speed Modes	Low, High
Material	Stainless Steel (blade), ABS Plastic (body)
Dimensions	4.72 x 4.29 x 1.57 inches (approximate package dimensions)
Weight	5.61 ounces (approximate package weight)

9. WARRANTY AND SUPPORT

For warranty information, technical support, or any inquiries regarding your LittleTora DWE23 Electric Automatic Nail Clipper, please refer to the contact details provided with your product packaging or visit the official LittleTora website. Please retain your proof of purchase for warranty claims.