

[Manuals.plus](#) /

› [VASAGLE](#) /

› VASAGLE Electric Sit-Stand Desk 120x60cm (72-120cm) User Manual - Model LSD312KD03

VASAGLE LSD312KD03

VASAGLE Electric Sit-Stand Desk User Manual

Model: LSD312KD03

INTRODUCTION

Thank you for choosing the VASAGLE Electric Sit-Stand Desk, Model LSD312KD03. This manual provides essential information for the safe assembly, operation, and maintenance of your new height-adjustable desk. Please read these instructions carefully before use and retain them for future reference.



Image: The VASAGLE Electric Sit-Stand Desk, Model LSD312KD03, featuring a rustic brown desktop and black frame, set up in a contemporary home office environment.

SAFETY INFORMATION

- Ensure all components are present and undamaged before assembly. Do not use if any parts are missing or defective.
- Keep children and pets away from the desk during operation to prevent injury.
- Do not overload the desk. The maximum load capacity is 70 kg (154 lbs).
- Avoid placing liquids directly on the control panel or near electrical components.
- Do not attempt to disassemble or repair the motor or control system yourself. Contact customer support for assistance.
- Ensure the power cord is not pinched or damaged.
- The desk features rounded edges for safety, but exercise caution during movement.

PACKAGE CONTENTS

Verify that all the following components are included in your package:

- 1 x Electric Height-Adjustable Desk (LSD312KD03)
- Desktop sections (typically 3 pieces for this model)
- Leg frames and feet
- Control panel and motor assembly
- Power adapter and cable
- 2 x Cable grommets
- 2 x Headphone hooks
- Assembly hardware (screws, tools, etc.)
- Illustrated Instruction Manual

ASSEMBLY INSTRUCTIONS

Assembly of your VASAGLE Electric Sit-Stand Desk is designed to be quick and straightforward. Follow the numbered steps and refer to the illustrations for guidance. It is recommended to assemble the desk on a soft, clean surface to prevent scratches.



Image: A visual guide illustrating the three main assembly steps: mounting the table top sections, assembling the base frame, and attaching the table top to the base frame.

1. Step 1: Assemble the Desktop

Carefully join the desktop sections together using the provided connectors and screws. Ensure they are aligned properly to form a smooth surface.

2. Step 2: Assemble the Frame

Attach the lifting columns to the crossbar, then secure the feet to the bottom of the lifting columns. Connect the motor and control box according to the diagram.

3. Step 3: Attach Desktop to Frame

Place the assembled desktop upside down on a soft surface. Position the assembled frame onto the desktop and secure it using the designated screw holes.

4. Step 4: Install Accessories

Insert the cable grommets into the pre-drilled holes on the desktop. Attach the headphone hooks to the side of the desk frame as desired.

5. Step 5: Connect Power

Plug the power adapter into the control box and then into a wall outlet.

For detailed visual instructions, please refer to the included illustrated manual or the PDF installation manual available online.

Note: The desk comes with numbered parts and an illustrated guide to simplify the process. An extra bag of spare mounting hardware is included.

OPERATING INSTRUCTIONS

Control Panel Overview



Fonction de verrouillage

Rappel de sédentarité

Faible niveau de bruit

≤ 48 dB
Niveau sonore

20 mm/s
Vitesse de réglage

**Moins de bruit,
plus d'idées**

Image: A detailed view of the desk's control panel, highlighting its features such as height display, adjustment buttons, memory presets, and safety functions.

- **Up/Down Arrows:** Press and hold to adjust the desk height continuously.
- **1, 2, 3:** Memory preset buttons.
- **4:** Multi-function button combining memory and sedentary reminder.
- **Display:** Shows the current height in centimeters.

Height Adjustment

The desk height can be adjusted from 72 cm (sitting position) to 120 cm (standing position). Use the up and down arrow buttons on the control panel to move the desk to your desired height. The motor operates smoothly and quietly (below 48 dB) at a speed of 20 mm/s.

Une table pour toute la famille

Chacun choisit sa hauteur idéale d'une simple pression sur un bouton



Max. 120 cm

Min. 72 cm

4 hauteurs pré-enregistrées

Icons representing different users: a person, a book, a monitor, and a desk.

*La quatrième touche combine la fonction mémoire et la fonction de rappel en une seule

4 Touches multifonctionnelles

Image: Two individuals using the desk at different heights, illustrating the versatility of the sit-stand function and the range of height adjustment.

Memory Presets

The desk allows you to save up to 4 preferred heights for quick adjustment:

1. Adjust the desk to your desired height using the up/down arrows.
2. Press the 'M' button (or equivalent memory set button, if available, otherwise proceed to step 3).
3. Press one of the numbered preset buttons (1, 2, 3, or 4) until you hear a beep or see a confirmation on the display.
The height is now saved to that button.

4. To recall a saved height, simply press the corresponding numbered button.

Sedentary Reminder

The desk includes a sedentary reminder function to encourage healthier work habits. The multi-function button (4) can be configured to remind you to change position. Consult the detailed manual for specific programming steps for this feature.

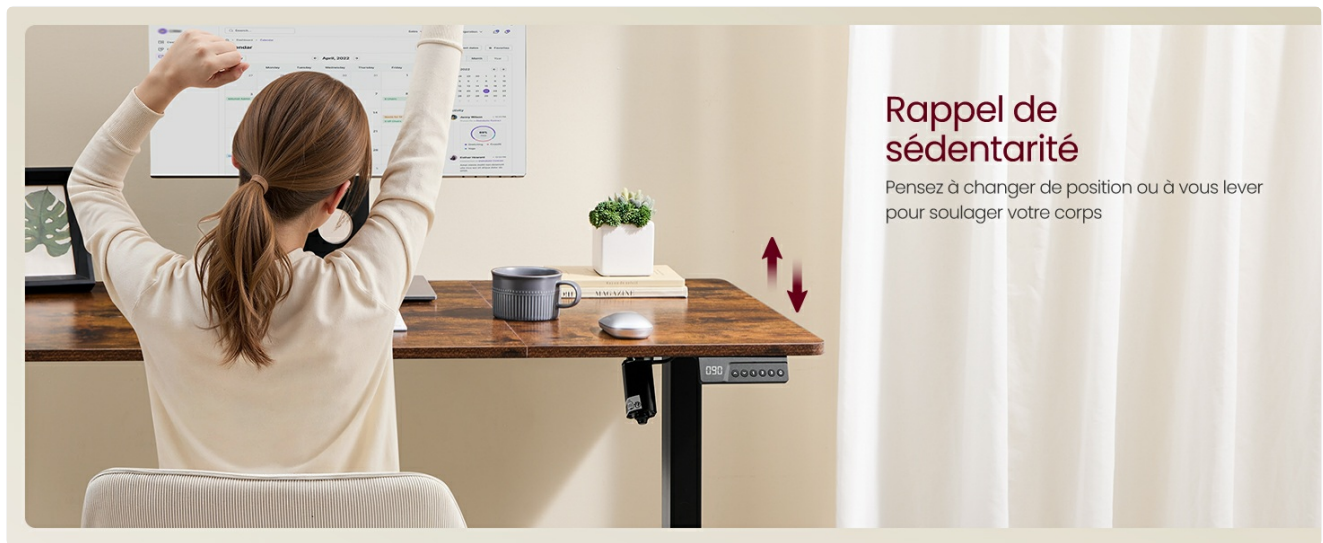


Image: A user engaging in a light stretch at the desk, illustrating the benefit of the sedentary reminder feature to promote movement.

Lock Function

To prevent unintentional height adjustments, especially around children, the desk features a lock function:

- **To Lock:** Press and hold the 'Up' and 'Down' arrow buttons simultaneously for 3 seconds. The display will show 'LOC' to indicate it is locked.
- **To Unlock:** Press and hold the 'Up' and 'Down' arrow buttons simultaneously again for 3 seconds. The display will return to the current height, indicating it is unlocked.



Image: A visual representation of how to engage and disengage the lock function on the control panel, ensuring safety and preventing accidental adjustments.

Cable Management and Hooks

The desk is equipped with two cable grommets to help organize your cables and prevent tangles. Additionally, two hooks are provided to hang bags, headphones, or other items, keeping your workspace tidy.



Image: A close-up of the cable grommet, demonstrating effective cable organization.



Image: Headphones neatly hung on one of the integrated hooks, showcasing the practical storage solution.

MAINTENANCE

- **Cleaning:** Wipe the desktop and frame with a soft, damp cloth. Avoid harsh chemicals or abrasive cleaners that could damage the finish.
- **Inspection:** Periodically check all screws and connections to ensure they are tight. Retighten if necessary.
- **Cable Care:** Ensure cables are not tangled or pinched, especially during height adjustments.
- **Motor Care:** The motor is designed for durability (tested over 20,000 lifting cycles). No special lubrication or maintenance is required for the motor itself.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Desk does not move.	Power cord disconnected; Lock function activated; Overload.	Check power connection; Unlock the desk (hold Up+Down for 3s); Reduce weight on desk.
Uneven movement or shaking.	Loose connections; Uneven weight distribution.	Check and tighten all screws; Distribute weight evenly on the desktop.
Error code on display.	Specific system error.	Refer to the full manual for specific error codes or contact customer support. Try power cycling the desk (unplug for 30s, then plug back in).
Memory presets not working.	Not saved correctly.	Re-save the desired height to the preset button (adjust to height, press 'M', then press preset button).

SPECIFICATIONS

Feature	Detail
Model Number	LSD312KD03
Brand	VASAGLE
Desktop Dimensions (L x W)	120 x 60 cm (47.2 x 23.6 inches)
Height Adjustment Range	72 - 120 cm (28.3 - 47.2 inches)
Maximum Load Capacity	70 kg (154 lbs)
Material	Engineered Wood (Desktop), Alloy Steel (Frame)
Color	Rustic Brown
Motor Noise Level	< 48 dB
Adjustment Speed	20 mm/s
Special Features	Electric Height Adjustment, 4 Memory Presets, Sedentary Reminder, Lock Function, Cable Management, Headphone Hooks, Rounded Edges
Assembly Required	Yes
Item Weight	18.7 kg (41.2 lbs)



Quelle taille de plateau est faite pour vous ?



Image: Detailed dimensions and static load capacity of the desk.

4 hauteurs pré-enregistrées
pour toute la famille



*La quatrième touche combine la fonction
mémoire et la fonction de rappel en une seule



Image: Visual representation of the desk's 70 kg load capacity and resistance to deformation.

WARRANTY INFORMATION

VASAGLE products are manufactured to high-quality standards. For specific warranty details regarding your Electric Sit-Stand Desk, please refer to the documentation included with your purchase or contact VASAGLE customer support. Keep your proof of purchase for any warranty claims.

CUSTOMER SUPPORT

If you have any questions, require assistance with assembly, or encounter any issues with your VASAGLE Electric Sit-Stand Desk, please do not hesitate to contact our customer support team.

- **Online Support:** Visit the official VASAGLE store on Amazon for FAQs and additional resources: [VASAGLE Store](#)
- **Installation Manual (PDF):** A detailed installation manual is available for download [here](#).