

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [OUKITEL](#) /

› [OUKITEL C59 SIM-Free Smartphone User Manual](#)

## OUKITEL C59

# OUKITEL C59 SIM-Free Smartphone User Manual

Model: C59

## INTRODUCTION

Thank you for choosing the OUKITEL C59 SIM-Free Smartphone. This manual provides essential information for setting up, operating, maintaining, and troubleshooting your device. Please read it carefully to ensure optimal performance and longevity of your smartphone.



Overview of the OUKITEL C59's main features.

## PACKAGE CONTENTS

Upon opening the box, please verify that all the following items are included:

- OUKITEL C59 Smartphone Unit
- Quick Charging Adapter
- USB-C Cable (supports fast charging and data transfer)
- Ultra-thin Clear Shockproof Case
- SIM Ejector Tool

- Multi-language User Manual
- Warranty Card
- Quick Setup Guide



All items included in the OUKITEL C59 retail package.

## SETUP

### 1. Inserting SIM Card(s) and MicroSD Card

The OUKITEL C59 supports two nano-SIM cards and one microSD card for storage expansion. Use the provided SIM ejector tool to open the SIM tray.

1. Locate the SIM tray on the side of your device.
2. Insert the SIM ejector tool into the small hole next to the tray and push gently until the tray pops out.
3. Place your nano-SIM card(s) and/or microSD card into the designated slots on the tray. Ensure the gold contacts face downwards.
4. Carefully push the tray back into the slot until it is flush with the device.

### 2. Initial Power On and Basic Setup

To power on your device for the first time:

1. Press and hold the Power button (usually on the right side) until the OUKITEL logo appears.
2. Follow the on-screen prompts to select your language, connect to a Wi-Fi network, and set up your Google account.
3. You will also be guided through setting up security features like fingerprint and face unlock during this process.



Illustration of SIM card insertion, GPS functionality, fingerprint sensor, and face unlock.

## OPERATING INSTRUCTIONS

### Power On/Off/Restart

- Power On:** Press and hold the Power button until the device vibrates and the logo appears.
- Power Off:** Press and hold the Power button for a few seconds, then tap 'Power off' on the screen.
- Restart:** Press and hold the Power button for a few seconds, then tap 'Restart' on the screen.

### Screen Lock and Unlock

- Lock:** Press the Power button once.
- Unlock:** Press the Power button, then swipe up on the screen. Use your set PIN, pattern, fingerprint, or face unlock to access the device.

### Volume Control

Use the Volume Up and Volume Down buttons located on the side of the device to adjust media volume, call volume, and notification volume.

## Navigation

The OUKITEL C59 uses Android 15, offering intuitive touch gestures for navigation:

- **Home:** Swipe up from the bottom of the screen.
- **Back:** Swipe from the left or right edge of the screen.
- **Recent Apps:** Swipe up from the bottom and hold.



The OUKITEL C59 runs on the latest Android 15 operating system.

## CAMERA FEATURES

The OUKITEL C59 is equipped with a 13MP main camera and a 5MP front camera, enhanced with AI algorithms for various photography needs.

### Main Camera (13MP)

- **F2.2 Large Aperture Lens:** Captures clear images even in low-light conditions, ideal for night scenes.
- **Enhanced Image Stabilization:** Reduces blur from hand movements, allowing for sharp photos without a tripod.
- **Portrait Lighting Mode:** Reproduces studio-quality lighting effects for professional-looking portraits.

## Front Camera (5MP)

- **Natural Skin Correction Algorithm:** Provides natural beauty enhancements without compromising skin texture.

## Camera Modes

Explore various modes to enhance your photography:

- **Panorama Mode:** For capturing wide landscapes.
- **Food Mode:** Optimizes settings for vibrant food photography.
- **Portrait Mode:** Creates a depth-of-field effect, blurring the background.
- **Pro Mode:** Offers manual control over camera settings for advanced users.



The OUKITEL C59 features a 13MP main camera and a 5MP front camera for capturing moments.

## BATTERY AND CHARGING

The OUKITEL C59 is equipped with a large 10000mAh battery, designed for extended usage.

### Battery Life


- A single full charge can provide approximately 20 hours of continuous video playback.
- Supports long gaming sessions and extensive social media use.

### Charging

- Supports 18W fast charging using the included USB-C cable and adapter.
- Features overcharge prevention and overheat protection for safe charging.
- **Reverse Charging (OTG):** The device can act as a power bank to charge other devices using an OTG cable (not included).



The OUKITEL C59 features a 10000mAh battery for extended use.

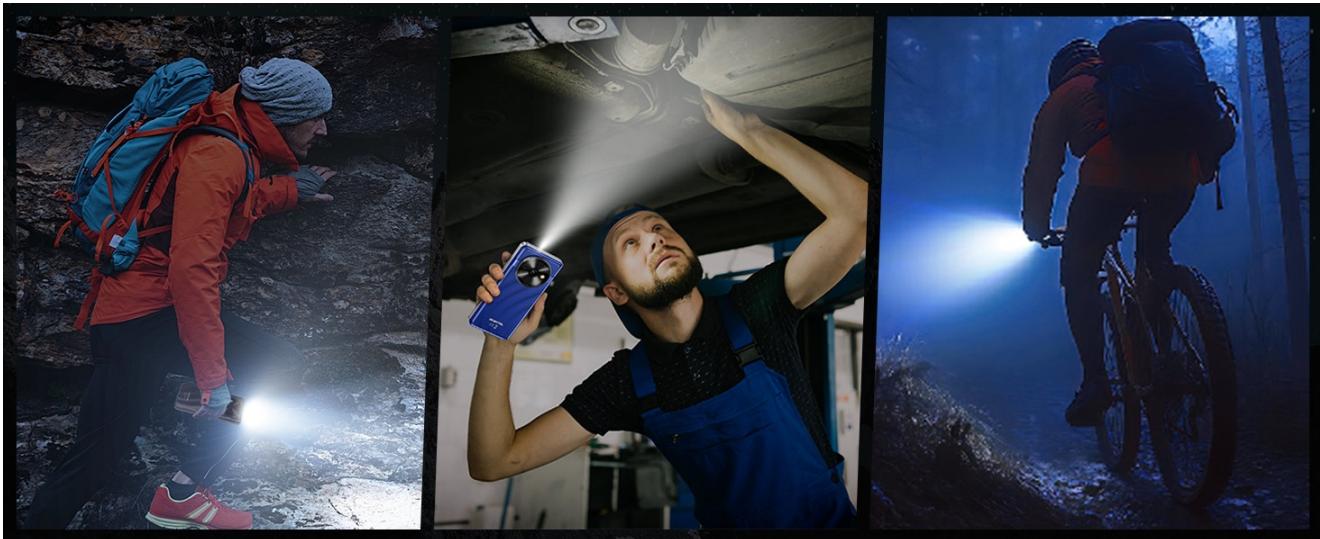

The OUKITEL C59 can charge other devices via its reverse charging function.

## CONNECTIVITY

### Dual SIM Support

The OUKITEL C59 supports two nano-SIM cards, allowing you to manage separate business and personal numbers on a single device.

### Global 4G Network Compatibility

This SIM-free smartphone is fully compatible with major Japanese carriers (Docomo, au, Rakuten Mobile, Softbank, UQ Mobile) and supports a wide range of global 4G bands:


- **GSM:** B2/B3/B5/B8
- **WCDMA:** B1/2/4/5/8
- **TDD:** 34/38/39/40/41
- **FDD-LTE:** B1/2/3/4/5/7/8/12/17/18/19/20/25/26/28A/28B/66

### Wi-Fi and Bluetooth

- **Wi-Fi:** Supports 2.4G and 5G networks for fast and stable internet access.
- **Bluetooth:** Equipped with Bluetooth 5.0 for efficient wireless connections to accessories.

### GPS Navigation

The device integrates four satellite systems (GPS, GLONASS, BeiDou, and Galileo) to maintain a position accuracy of  $\pm 3\text{m}$ , even in challenging environments like mountainous areas or high-rise building districts.

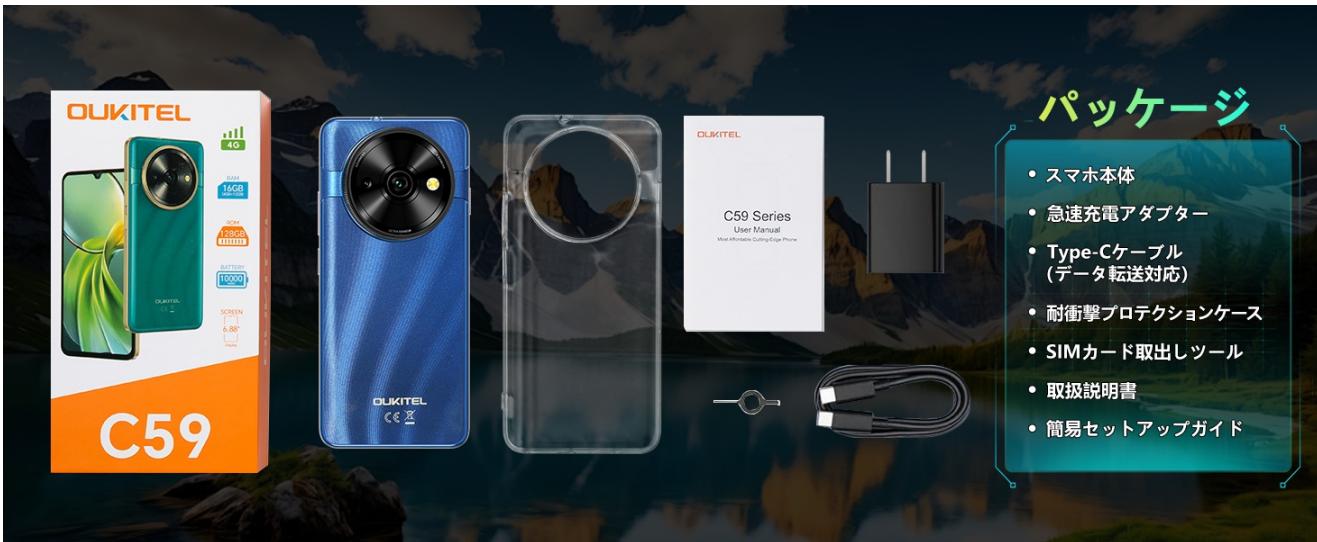

## パッケージ

- スマホ本体
- 急速充電アダプター
- Type-Cケーブル (データ転送対応)
- 耐衝撃プロテクションケース
- SIMカード取出しツール
- 取扱説明書
- 簡易セットアップガイド

The OUKITEL C59 supports major Japanese carriers and advanced GPS navigation.

## SECURITY FEATURES

The OUKITEL C59 offers multiple security options to protect your data and privacy.

### Fingerprint Unlock

- The side-mounted fingerprint sensor provides high-speed authentication in just 0.3 seconds.
- To set up, go to **Settings > Security > Fingerprint Unlock** and follow the instructions.

### Face Unlock

- Use your face to quickly unlock your device.
- To set up, go to **Settings > Security > Face Unlock** and follow the instructions.

### Private Space

This feature allows you to hide sensitive applications and data, providing an extra layer of privacy. Access and manage your Private Space through the device settings.

## SPECIAL FEATURES

### 120 Lumen LED Flashlight

The OUKITEL C59 includes a powerful 120 lumen LED flashlight, activated via a physical button. This feature is versatile for various situations:

- Searching for items in the dark.
- Emergency lighting during disasters.
- Outdoor activities like mountain climbing or camping, eliminating the need for a separate light.

# 暗闇も迷わない—— 120ルーメン LED 懐中電灯

大容量バッテリー&高輝度の懐中電灯で、  
日常もアウトドアも安心サポート



The OUKITEL C59's 120 lumen LED flashlight is useful in dark conditions.

## MAINTENANCE

- Cleaning:** Use a soft, lint-free cloth to clean the screen and body. Avoid harsh chemicals or abrasive materials.
- Software Updates:** Regularly check for and install system updates to ensure optimal performance, security, and access to new features. Go to **Settings > System > System Update**.
- Storage Management:** Periodically clear unnecessary files, cache data, and uninstall unused apps to free up storage space and maintain device speed.
- Battery Care:** Avoid extreme temperatures. Do not fully discharge the battery frequently.

## TROUBLESHOOTING

### Device Not Turning On

- Ensure the battery is charged. Connect the device to the charger for at least 10-15 minutes.
- Press and hold the Power button for 10-15 seconds to perform a forced restart.

## Charging Issues

- Check if the charging cable and adapter are securely connected and undamaged.
- Try using a different compatible charger and cable.
- Ensure the charging port is clean and free of debris.

## Network/Connectivity Problems

- **No Signal:** Check if your SIM card is properly inserted. Try restarting the device. Verify your network settings (**Settings > Network & internet > Mobile network**).
- **Wi-Fi Connection Issues:** Restart your router. Forget the Wi-Fi network on your phone and reconnect.
- **Bluetooth Pairing Issues:** Ensure both devices are in pairing mode and within range. Try restarting both devices.

## Slow Performance

- Close unused applications running in the background.
- Clear cache data from apps (**Settings > Apps > [App Name] > Storage & cache > Clear cache**).
- Consider uninstalling rarely used applications.
- If issues persist, a factory reset might be necessary (**Settings > System > Reset options > Erase all data (factory reset)**). **Note:** This will erase all data on your phone. Back up important data before proceeding.

## SPECIFICATIONS

<b>Model</b>	C59
<b>Operating System</b>	Android 15
<b>Display</b>	6.88-inch HD+ (1640x720), 90Hz Refresh Rate, 450nit Peak Brightness
<b>Processor</b>	Octa-core
<b>RAM</b>	16GB (4GB Physical + 12GB Virtual)
<b>Internal Storage (ROM)</b>	128GB
<b>Expandable Storage</b>	Up to 2TB via microSD card
<b>Rear Camera</b>	13MP (F2.2 aperture)
<b>Front Camera</b>	5MP
<b>Battery Capacity</b>	10000mAh
<b>Charging</b>	18W Fast Charging, Reverse Charging (OTG)
<b>Connectivity</b>	Global 4G, Wi-Fi (2.4G/5G), Bluetooth 5.0, GPS (GPS+GLONASS+BeiDou+Galileo)
<b>SIM Card</b>	Dual Nano-SIM

Security	Fingerprint Unlock, Face Unlock
Water Resistance	IP54 (Life Water-Resistant)
Special Features	120 Lumen LED Flashlight



Memory and storage configuration of the OUKITEL C59.

# 6.88" HD+ シネマディックフル ディスプレイ

滑らかな動作、鮮やかな発色、省エネ性能を実現



**90Hz**

リフレッシュレート

**450nit**

輝度

**1640\*720**

解像度

The OUKITEL C59 features a 6.88-inch HD+ display.

## WARRANTY AND SUPPORT

OUKITEL is committed to providing excellent customer service and product support.

- 30-Day Free Return:** Enjoy a 30-day free return policy from the date of purchase.
- 1-Year Free Long-Term Warranty:** Your OUKITEL C59 comes with a 1-year free long-term warranty.
- Warranty Extension:** You can extend the 1-year warranty to a 2-year warranty by contacting the seller on Amazon.
- Customer Support:** OUKITEL provides year-round customer support and 24-hour online customer service, available in English and Japanese.

If you encounter any issues or have questions regarding your OUKITEL C59 smartphone, please do not hesitate to contact our customer service team for assistance.

