

[Manuals.plus](#) /

› [GTPLAYER](#) /

› GTPLAYER Electric Standing Desk with Drawers (Model DTS118-NEW) - User Manual

GTPLAYER DTS118-NEW

GTPLAYER Electric Standing Desk with Drawers - User Manual

Model: DTS118-NEW

1. INTRODUCTION

Thank you for choosing the GTPLAYER Electric Standing Desk. This manual provides essential information for the safe and efficient assembly, operation, and maintenance of your new desk. Please read it thoroughly before use and retain it for future reference.



Image: The GTPLAYER Electric Standing Desk, designed for an ergonomic workspace suitable for people of any height.

Safety Information

Important: Ensure the desk is properly assembled and does not exceed the maximum weight recommendation of 176 pounds to maintain stability and prevent accidents.

2. SETUP AND ASSEMBLY

The GTPLAYER Electric Standing Desk is designed for straightforward assembly. Follow the clear instructions provided in the packaging. All necessary tools are included.

Assembly Steps:

1. Unpack all components and verify against the parts list.
2. Assemble the desk frame according to the diagram.
3. Attach the desktop to the assembled frame.
4. Install the control panel and connect all cables.
5. Install the monitor stand, drawers, and side hooks.
6. Perform initial calibration as described in the operating section.

For visual guidance, an installation video is available. Refer to the QR code or link provided in your physical instruction booklet.

3. OPERATING INSTRUCTIONS

Your GTPLAYER Electric Standing Desk features an intuitive LED control panel for easy height adjustments and memory presets.

Height Adjustment:

- Use the **Up (▲)** and **Down (▼)** arrows on the control panel to manually adjust the desk height. The current height will be displayed on the LED screen.
- The desk can be adjusted from 28.3 inches to 48 inches.
- The motor operates quietly (under 55dB) for minimal disturbance.



Image: Demonstrating the height adjustability of the desk, allowing users to customize their desired working height between sitting and standing positions.

Memory Presets:

- The control panel features three memory preset buttons (1, 2, 3).
- To save a height: Adjust the desk to your desired height, then press the **S** button followed by the desired preset number (1, 2, or 3). The height is now saved.
- To recall a saved height: Press the corresponding preset number (1, 2, or 3). The desk will automatically move to the saved position.



Image: The multifunction control panel with an ultra-clear digital display, up/down height adjustment, three memory preset buttons, and an 'S' button for setup and locking.

Additional Features:

- **Monitor Stand:** The integrated monitor stand helps raise your screen height, promoting better posture and saving workspace.
- **Laptop/Tablet/Book Stand:** An adjustable stand is included to hold laptops, tablets, or books at an ergonomic angle.
- **Storage Drawer:** An embedded drawer provides convenient storage for desktop essentials.
- **Side Hooks:** Two side hooks offer additional storage for bags or headphones.



Image: Detailed view of the control panel, a convenient side hook for accessories, and integrated cable management solutions.

Official Product Videos:

Your browser does not support the video tag.

Video: Demonstrates the height adjustment functionality of the GTPLAYER Standing Desk for home and office use.

Your browser does not support the video tag.

Video: Showcases the features of the Electric Standing Desk with Drawers, including its design and functionality.

4. MAINTENANCE

Regular maintenance ensures the longevity and optimal performance of your standing desk.

- **Cleaning:** Wipe the desk surface with a soft, damp cloth. Avoid harsh chemicals or abrasive cleaners.
- **Motor Care:** The electric motor is maintenance-free. Do not attempt to open or lubricate it.
- **Cable Management:** Periodically check all cables for wear or damage. Ensure they are neatly routed to prevent snagging during height adjustments.
- **Weight Limit:** Do not exceed the maximum weight capacity of 176 pounds.

5. TROUBLESHOOTING

If you encounter any issues with your GTPLAYER Electric Standing Desk, refer to the following common solutions:

Problem	Possible Cause	Solution
Desk does not move	Power cable disconnected; Overload; Motor error	Check power connection; Reduce weight on desk; Unplug for 10 seconds and plug back in to reset.
Uneven height adjustment	Obstruction; Calibration needed	Remove any obstructions; Perform a reset/calibration (refer to specific instructions in your physical manual).
Memory presets not working	Not saved correctly	Re-save the desired height by pressing 'S' then the preset number.

If the problem persists, please contact customer support.

6. SPECIFICATIONS

Detailed specifications for the GTPLAYER Electric Standing Desk (Model DTS118-NEW).



Image: Product dimension diagram illustrating the overall size, monitor stand, and drawer measurements.

Feature	Detail
Model Number	DTS118-NEW
Product Dimensions	24"D x 55"W x 28"H

Feature	Detail
Adjustable Height Range	28.3" to 48"
Maximum Weight Capacity	176 pounds
Motor Noise Level	Under 55dB
Material (Top)	FSC-Certified Wood
Material (Base)	Stainless Steel / Alloy Steel
Number of Drawers	1
Special Features	Adjustable Height, Electric, Monitor Stand, Laptop Stand, Utility Drawer, Side Hooks

7. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the documentation included with your product or visit the official GTPLAYER website. Keep your purchase receipt as proof of purchase for any warranty claims.

- **Customer Service:** For assistance with assembly, operation, or troubleshooting, please contact GTPLAYER customer support.
- **Returns:** Refer to your retailer's return policy for details on product returns.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

