

[Manuals.plus](#) /

› [BANTI](#) /

› BANTI 40x24 Inch Electric Standing Desk User Manual

BANTI B-SDE-DJSX-V1

BANTI 40x24 Inch Electric Standing Desk User Manual

Model: B-SDE-DJSX-V1

INTRODUCTION

Thank you for choosing the BANTI Electric Height Adjustable Standing Desk. This manual provides essential information for the safe assembly, operation, and maintenance of your new desk. Please read these instructions carefully before use and retain them for future reference.

SAFETY INFORMATION

WARNING:

- Always keep hands and objects away from the desk's moving parts during height adjustment.
- Ensure there are no obstructions above or below the desk when adjusting its height.
- Follow the provided instructions precisely for safe assembly and use.
- Do not overload the desk. While robust, excessive weight can affect performance and stability.
- Keep children and pets away from the desk during operation.

PACKAGE CONTENTS

Before assembly, verify that all components are present and undamaged. If any parts are missing or damaged, please contact customer support.

- Desk Frame (Alloy Steel)
- Desktop (Laminated Wood, Light Rustic)
- Control Panel with LED Display
- Motor and Power Adapter
- Assembly Hardware (screws, bolts, etc.)
- Assembly Tools
- Headphone Hook

SETUP AND ASSEMBLY

Assembly is required. All necessary tools and detailed instructions are provided. For optimal safety and ease, it is recommended to have two people for certain steps, especially when lifting and turning the desk frame.

1. **Unpack Components:** Carefully remove all parts from the packaging. Lay them out on a clean, soft surface to prevent scratches.
2. **Assemble Desk Frame:** Follow the step-by-step diagrams in the included assembly guide to connect the legs to the crossbar and feet. Ensure all screws are tightened securely.
3. **Attach Desktop:** Carefully place the desktop upside down on a soft surface. Align the desk frame with the pre-drilled holes on the desktop and secure it with the provided screws.
4. **Install Control Panel:** Mount the control panel to the underside of the desktop in the designated location. Connect the motor and control panel cables as instructed.
5. **Connect Power:** Plug the power adapter into the desk and then into a wall outlet.
6. **Initial Test:** Before placing items on the desk, perform an initial height adjustment test to ensure smooth operation.



Figure 1: Product Dimensions and Available Colors. The desk measures approximately 39.37 inches wide, 23.62 inches deep, with a height adjustable from 28.3 inches to 46.5 inches.

OPERATING INSTRUCTIONS

Your BANTI standing desk features an electric height adjustment system with a convenient control panel.



Figure 2: Control Panel. Features an LED display for real-time height, up/down buttons, and four programmable memory height settings.

Basic Height Adjustment:

- Use the **Up** (▲) and **Down** (▼) buttons to manually adjust the desk height. The LED display will show the current height.
- The desk can be adjusted smoothly from a minimum height of 28 inches to a maximum height of 46 inches.

Memory Presets:

The desk is equipped with four programmable memory height settings (1, 2, 3, 4).

1. **Set a Memory Height:** Adjust the desk to your desired height using the Up/Down buttons. Press the "**M**" button (if present, or a similar 'Set' button) followed by the desired number button (1, 2, 3, or 4). The display will confirm the setting.
2. **Recall a Memory Height:** Press the corresponding number button (1, 2, 3, or 4) to automatically move the desk to the saved height.

Anti-Collision Feature:

The desk includes an anti-collision system. If the desk encounters an obstacle during height adjustment, it will automatically reverse approximately 2 cm to prevent damage to the desk or objects.

Convenient Controller



LED Display

Easy-to-read
real-time height display



Up/Down Buttons

Smooth up-and-down
control with a single press



4 Memory Heights

Smooth up-and-down
control with a single press

Figure 3: Anti-Collision Technology. The desk automatically reverses if an obstruction is detected during movement.

Quiet Operation:

The desk operates with a motor that produces less than 50 dB of noise, ensuring a quiet working environment.

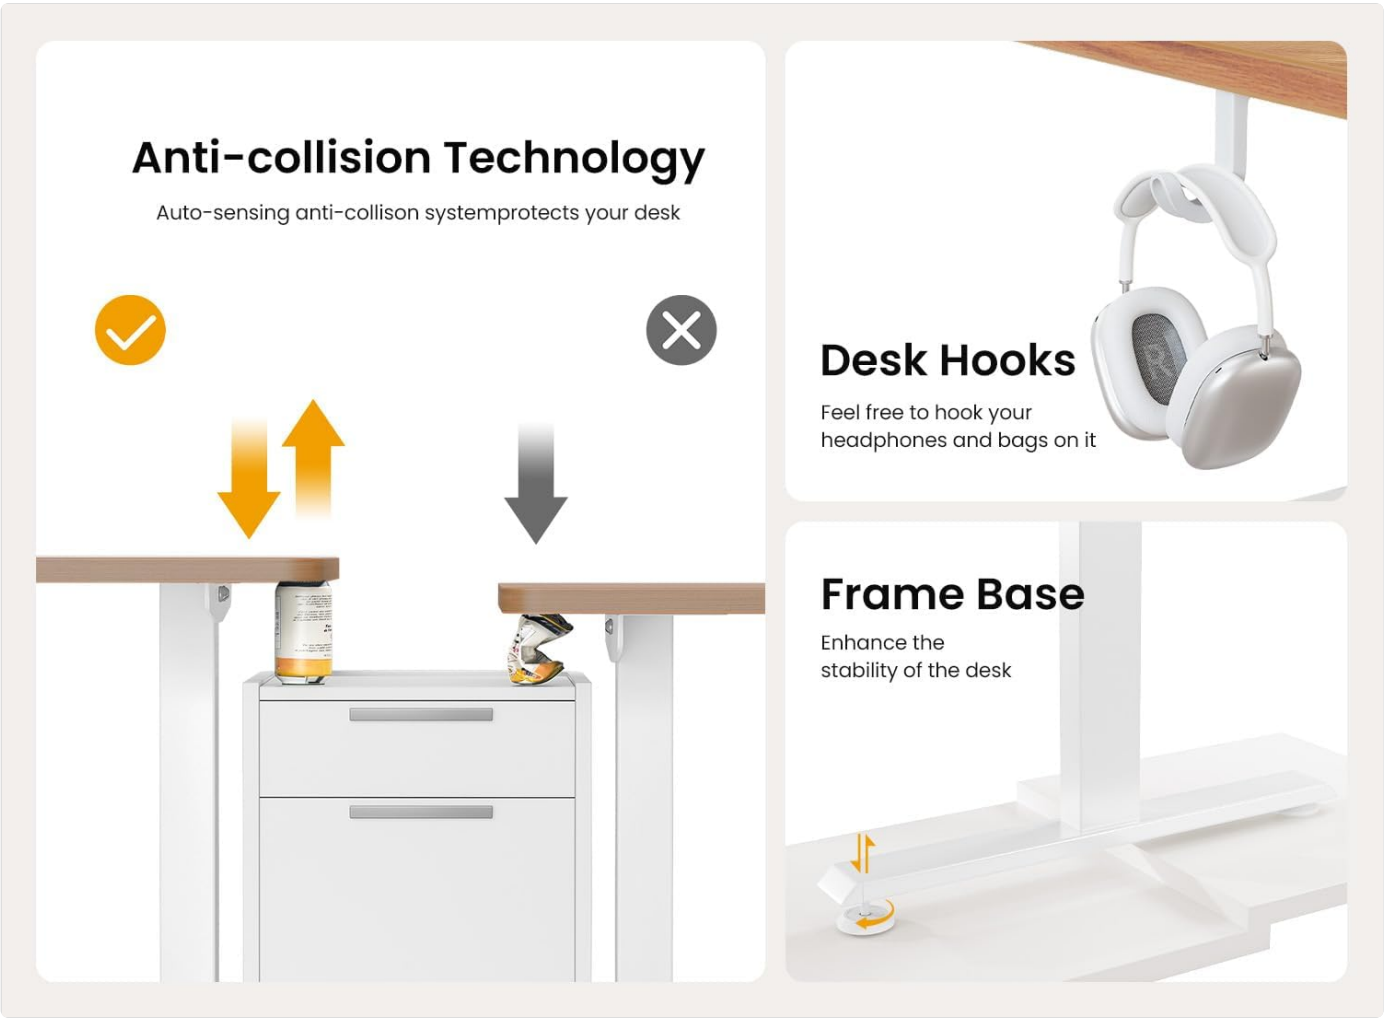


Figure 4: Quiet and Smooth Lift. The desk's motor operates below 50 dB for minimal disturbance.

MAINTENANCE

To ensure the longevity and optimal performance of your BANTI standing desk, follow these simple maintenance guidelines:

- **Cleaning:** Wipe the desk surfaces with a dry cloth. Avoid abrasive cleaners or harsh chemicals that could damage the finish.
- **Inspections:** Periodically check all screws and connections to ensure they remain tight. Retighten if necessary.
- **Cable Management:** Ensure all cables are neatly managed and not pinched or tangled, especially during height adjustments.
- **Weight Distribution:** Distribute weight evenly across the desktop to maintain stability and prevent strain on the motor.

TROUBLESHOOTING

If you encounter any issues with your BANTI standing desk, please refer to the following common solutions:

Problem	Possible Cause	Solution
Desk does not move.	Power cable disconnected; motor error.	Check power connections. Unplug and replug the power cable. If the issue persists, contact support.

Problem	Possible Cause	Solution
Desk moves unevenly or makes unusual noise.	Loose connections; uneven weight distribution.	Ensure all assembly screws are tight. Redistribute items on the desktop.
Anti-collision feature triggers too often.	Obstruction present; sensor sensitivity.	Clear any objects from the desk's path. Refer to the full manual for sensor sensitivity adjustment if available.
Memory presets not working.	Presets not saved correctly.	Re-save your desired memory heights following the "Operating Instructions" section.

If these solutions do not resolve the issue, please contact BANTI customer support for further assistance.

SPECIFICATIONS

Feature	Detail
Brand	BANTI
Model Number	B-SDE-DJSX-V1
Desk Design	Electric Standing Desk, Computer Desk
Product Dimensions (D x W x H)	24"D x 40"W x 28"H (Minimum)
Adjustable Height Range	28" to 46"
Desktop Material	Wood (Laminated, Light Rustic finish)
Frame Material	Alloy Steel
Item Weight	40 Pounds
Special Features	Electric Height Adjustment, Ergonomic, Anti-collision, 4 Memory Presets, Quiet Operation (<50dB), Rust Resistant
Assembly Required	Yes (Tools included)
Care Instructions	Wipe with Dry Cloth

WARRANTY AND SUPPORT

BANTI is committed to providing quality products and customer satisfaction. While specific warranty details are not provided in this document, please retain your proof of purchase for any warranty claims.

For technical support, missing parts, or any questions regarding your BANTI Electric Standing Desk, please contact BANTI customer service through the retailer where you purchased the product or visit the official BANTI website for contact information.

Our dedicated technical support team is available to ensure a hassle-free experience.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0FSRCWTPX>

More documents and user manuals: <https://manuals.plus/>