

43328

Harbr Breeze Summersville 52-inch Outdoor Ceiling Fan with Light and Remote

Model: 43328 | Item #: 3856486

1. INTRODUCTION

This instruction manual provides comprehensive guidance for the installation, operation, and maintenance of your Harbr Breeze Summersville 52-inch Outdoor Ceiling Fan. This fan features a textured black finish, five reversible driftwood/auburn blades, an integrated light kit with clear seeded glass, and a convenient remote control. Designed for both indoor and covered outdoor spaces, this fan enhances comfort and style.



Figure 1.1: Harbr Breeze Summersville ceiling fan installed on a covered patio, showcasing its textured black finish and driftwood blades.

2. IMPORTANT SAFETY INFORMATION

Please read and understand all instructions before beginning installation. Failure to follow these instructions may result in electric shock, fire, or personal injury.

- **Electrical Safety:** Always disconnect power at the main circuit breaker before installing, cleaning, or servicing the fan. Ensure all electrical connections comply with local codes and ordinances.
- **Mounting:** The fan must be mounted to a structurally sound ceiling joist or outlet box capable of supporting the fan's weight (approximately 25 lbs). Use only outlet boxes marked "Acceptable for Fan Support."
- **Blade Clearance:** Ensure there is adequate clearance from the fan blades to any walls or obstructions. A minimum of 7 feet (2.1 meters) from the floor to the blade is recommended.
- **Damp Rating:** This fan is ETL listed as damp rated, suitable for indoor use and covered outdoor spaces such as patios, pergolas, garages, and breezeways. Do not expose to direct water spray.
- **Light Bulbs:** Use only the specified E26 B11 LED bulbs (included) or equivalent. Ensure bulbs are securely installed before operation.
- **Remote Control:** Keep the remote control away from water and extreme temperatures. Replace batteries as needed.

3. PACKAGE CONTENTS

Verify that all components are present before beginning installation. If any parts are missing or damaged, contact customer service.

- 1pc 52-inch Outdoor Textured Black Ceiling Fan with Light
- 5 Reversible Driftwood/Auburn Blades
- Remote Control
- 4-inch Downrod
- 3 E26 B11 LED Bulbs (Dimmable, 500 lumens, 5.5 watts, 2700K color temperature)
- Mounting Hardware



Figure 3.1: Main components of the ceiling fan, showing the textured black motor housing and one side of the reversible blades.

4. SETUP AND INSTALLATION

Professional installation is recommended. Ensure power is disconnected at the circuit breaker before proceeding.

4.1 Fan Dimensions

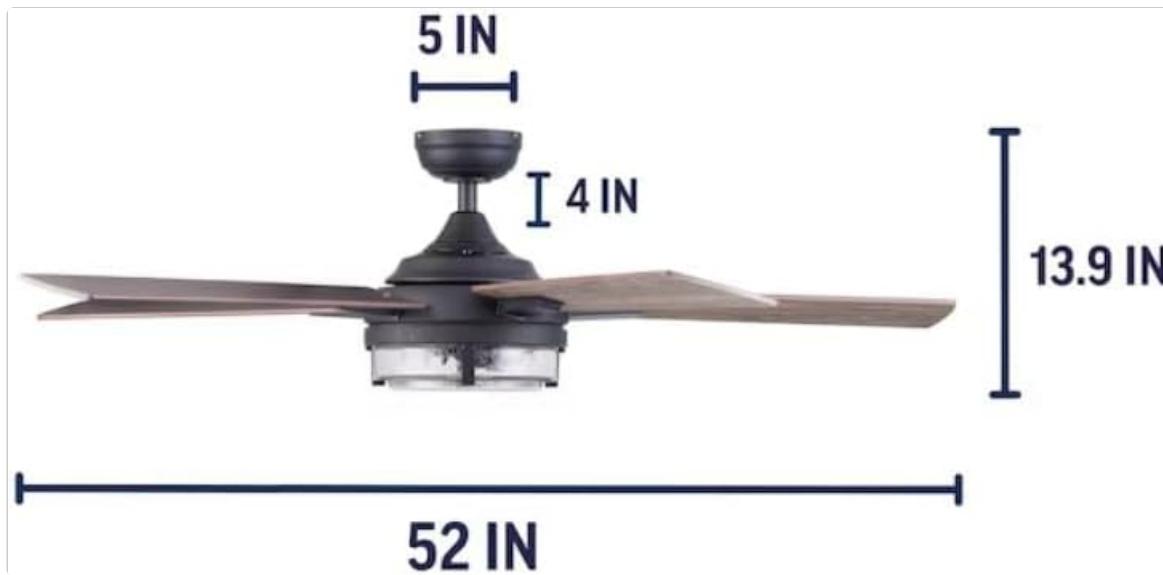


Figure 4.1: Key dimensions of the Harbor Breeze Summersville ceiling fan.

- 1. Prepare Mounting Location:** Securely attach the mounting bracket to an approved ceiling fan electrical junction box. Ensure the box is rated for fan support.
- 2. Assemble Downrod:** Insert the downrod through the canopy and connect it to the fan motor housing. Secure with the provided pin and screw.
- 3. Hang Fan:** Carefully lift the fan assembly and hang it from the mounting bracket using the hook provided on the downrod.
- 4. Electrical Wiring:** Connect the fan's electrical wires to the household wiring according to the wiring diagram in the full installation guide (not included here, refer to product packaging for detailed wiring instructions). Ensure all connections are secure.
- 5. Attach Blades:** Secure each of the five fan blades to the motor housing using the provided screws. Ensure the desired blade finish (driftwood or auburn) is facing downwards.
- 6. Install Light Kit:** Connect the light kit wiring and attach the light kit assembly to the bottom of the fan motor housing. Install the three E26 B11 LED bulbs.
- 7. Install Glass Globe:** Secure the clear seeded glass globe to the light kit.
- 8. Final Check:** Ensure all connections are tight and the fan is securely mounted. Restore power at the circuit breaker.



Figure 4.2: Detail of the light kit and blade attachment point.

5. OPERATING INSTRUCTIONS

Your Harbr Breeze Summersville ceiling fan is operated using the included remote control.

5.1 Remote Control Functions

- **Fan ON/OFF:** Press the fan button to turn the fan on or off.
- **Fan Speed:** Use the speed buttons to adjust the fan speed (low, medium, high).
- **Light ON/OFF:** Press the light button to turn the light on or off.
- **Light Dimming:** Hold the light button to dim or brighten the light.
- **Reverse Function:** The remote control typically includes a button to reverse the fan's direction. This function can also be found on the fan motor housing itself.

5.2 Reversible Motor for Seasonal Use

The fan features a quiet, reversible motor to optimize air circulation throughout the year.

- **Summer Operation (Downward Airflow):** Set the fan to rotate counter-clockwise. This creates a downward breeze, producing a cooling effect.
- **Winter Operation (Upward Airflow):** Set the fan to rotate clockwise. This draws cool air up towards the ceiling, circulating warm air downwards and helping to reduce heating costs.



Figure 5.1: Ceiling fan with the integrated light illuminated.



Figure 5.2: Fan showcasing the auburn finish of the reversible blades.

6. MAINTENANCE

Regular maintenance ensures optimal performance and extends the life of your ceiling fan.

- **Cleaning:** Periodically clean the fan blades and motor housing with a soft, damp cloth. Do not use abrasive cleaners or solvents. Ensure power is off before cleaning.
- **Tighten Fasteners:** Check all screws and fasteners annually to ensure they are secure. Loose connections can cause wobbling or noise.
- **Bulb Replacement:** When replacing bulbs, ensure power is off. Allow bulbs to cool before handling. Use E26 B11 LED bulbs or equivalent.
- **Blade Balance:** If the fan wobbles, ensure all blades are securely attached and balanced. A blade balancing kit (sold separately) can be used if necessary.

7. TROUBLESHOOTING

Before attempting any repairs, ensure power is disconnected at the main circuit breaker.

Problem	Possible Cause	Solution
Fan does not start	<ul style="list-style-type: none">◦ No power to the fan.◦ Loose wire connections.◦ Remote control battery is dead.	<ul style="list-style-type: none">◦ Check circuit breaker and wall switch.◦ Verify all wire connections are secure.◦ Replace remote control battery.

Problem	Possible Cause	Solution
Light does not work	<ul style="list-style-type: none"> Loose wire connection in light kit. Bulbs are faulty or loose. 	<ul style="list-style-type: none"> Check light kit wiring. Tighten or replace bulbs.
Fan wobbles	<ul style="list-style-type: none"> Loose blade screws. Unbalanced blades. Loose mounting bracket. 	<ul style="list-style-type: none"> Tighten all blade screws. Use a blade balancing kit. Ensure mounting bracket is securely fastened.
Noisy operation	<ul style="list-style-type: none"> Loose screws. Motor hum (normal for some fans). Blades hitting an obstruction. 	<ul style="list-style-type: none"> Check and tighten all screws. Ensure no obstructions are in the blade path.

8. SPECIFICATIONS

Brand	Generic
Model Name	43328
Item Model Number	3856486
Product Dimensions	52"D x 52"W x 13.9"H
Item Weight	25 pounds
Color	Textured Black
Blade Finish	Reversible Driftwood/Auburn
Number of Blades	5
Room Type	Indoor/Outdoor (Damp Rated)
Indoor/Outdoor (Damp Rated)	
Power Source	Electric
Control Method	Remote
Light Kit	Integrated, Clear Seeded Glass
Bulb Type	3 x E26 B11 LED (Dimmable, 500 lumens, 5.5 watts, 2700K)
Wattage	16.5 watts (fan motor)
Special Feature	Quiet, reversible motor
Installation Type	Ceiling mount (Downrod)

9. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the documentation included with your purchase or contact the seller directly. Keep your proof of purchase for any warranty claims.

