Manuals+

Q & A | Deep Search | Upload

manuals.plus /

- , KISLOT /
- > KISLOT 31.5" Sideboard Buffet Cabinet with Storage (Model: KJWTSB008) User Manual

KISLOT KJWTSB008

KISLOT 31.5" Sideboard Buffet Cabinet with Storage (Model: KJWTSB008) User Manual

Model: KJWTSB008 | Brand: KISLOT

1. Introduction

This manual provides comprehensive instructions for the assembly, operation, and maintenance of your KISLOT 31.5" Sideboard Buffet Cabinet with Storage. Please read this manual thoroughly before assembly and use to ensure safe and efficient operation. Keep this manual for future reference.



Figure 1: KISLOT 31.5" Sideboard Buffet Cabinet (Black)

2. SAFETY INFORMATION

- WARNING: Always follow assembly instructions carefully. Incorrect assembly can lead to instability and potential injury.
- Do not overload the cabinet or shelves. Refer to specifications for weight limits.
- Ensure the cabinet is placed on a flat, stable surface to prevent tipping.
- For added stability, especially in households with children or pets, consider securing the cabinet to a wall using the provided anti-tip hardware.
- Keep small parts and packaging materials away from children.

3. PACKAGE CONTENTS

Before beginning assembly, ensure all parts are present and undamaged. Refer to the included parts list in your packaging for detailed component identification. Typically, your package will include:

- Cabinet panels (top, bottom, sides, back, doors)
- Adjustable shelf(ves)
- Hardware pack (screws, dowels, hinges, anti-tip kit)
- · Assembly tools (e.g., Allen wrench, if required)

4. ASSEMBLY AND SETUP

Assembly is required for this product. It is recommended to have two people for assembly. Please follow the step-by-step instructions provided in the separate assembly guide included with your product. A typical assembly process involves:

- 1. **Unpacking:** Carefully remove all components from the packaging and lay them out on a clean, soft surface to prevent scratches.
- 2. Frame Assembly: Connect the side panels, top, and bottom panels using the provided hardware.
- 3. **Back Panel Installation:** Secure the back panel to the assembled frame.
- 4. Shelf Installation: Insert the adjustable shelf pins into the desired height holes and place the shelf.
- 5. **Door Installation:** Attach the soft-close hinges to the doors and then to the cabinet frame. Adjust hinges for proper door alignment.
- 6. Cable Management: Utilize the integrated cable holes for organizing wires if using the cabinet for electronics.
- 7. Anti-Tip Kit: Secure the cabinet to the wall using the anti-tip hardware as per instructions.

PRODUCT SPECIFICATIONS

COLOR OAK | WALNUT | BLACK

MATERIAL Engineered Wood | Metal

SIZE 31.5" x 15.7" x 34.6" inches

INSTALLATION It takes one people about 10-30 minutes





Figure 2: Product Dimensions and Internal Structure



Figure 3: Cable Management Holes

5. OPERATING INSTRUCTIONS

- Opening/Closing Doors: The cabinet features soft-close hinges. Gently push the doors to close them; they will close smoothly and quietly. To open, pull the doors from the embedded pull handles.
- . Adjusting Shelves: The internal shelf is adjustable to three different levels or can be removed entirely to accommodate

larger items. To adjust, remove the shelf, reposition the shelf pins to the desired height, and then place the shelf back on the pins.

• Cable Management: Use the two cable holes located at the back of the cabinet to route power cords and other cables, keeping your space tidy.



Figure 4: Adjustable and Removable Shelves

6. MAINTENANCE

- Cleaning: Wipe surfaces with a soft, damp cloth. Avoid harsh chemicals or abrasive cleaners, which can damage the finish.
- Spills: Immediately wipe up any spills to prevent moisture damage to the engineered wood.
- Inspection: Periodically check all screws and connections to ensure they remain tight. Retighten as necessary.
- Sunlight Exposure: Avoid prolonged exposure to direct sunlight to prevent fading or discoloration of the finish.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Doors do not close properly or are misaligned.	Hinges are loose or improperly adjusted.	Adjust the screws on the soft-close hinges to align the doors. Refer to the assembly guide for hinge adjustment details.
Cabinet feels wobbly or unstable.	Loose connections or uneven floor.	Ensure all assembly screws are tightened. Place the cabinet on a level surface. Utilize the anti-tip kit for enhanced stability.
Shelf is not level.	Shelf pins are not inserted correctly or are at different heights.	Remove the shelf and ensure both shelf pins are fully inserted into corresponding holes at the same height.

8. SPECIFICATIONS

Feature	Detail
Brand	KISLOT
Model Number	KJWTSB008
Color	Black
Material	Engineered Wood
Product Dimensions (D x W x H)	15.7"D x 31.5"W x 34.6"H

Feature	Detail
Item Weight	58 Pounds
Number of Shelves	2 (1 adjustable)
Special Feature	Adjustable Shelf, Soft-Close Hinges, Cable Management Holes
Mounting Type	Floor Mount (with optional wall anchor)
Assembly Required	Yes

9. WARRANTY AND SUPPORT

For warranty information, product support, or to order replacement parts, please refer to the contact information provided in your product packaging or visit the official KISLOT website. Please have your model number (KJWTSB008) and purchase date ready when contacting support.

Documents - KISLOT – KJWTSB008 no relevant documents