

SICOTAS 72" Tall Pantry Cabinet (B0FSRVWYRW)

SICOTAS 72" Tall Pantry Cabinet Instruction Manual

Model: 72" Tall Pantry Cabinet (B0FSRVWYRW)

1. PRODUCT OVERVIEW

The SICOTAS 72" Tall Pantry Cabinet is a versatile storage solution designed to complement various home styles, including boho, vintage, rustic, farmhouse, and coastal. This two-piece freestanding unit features unique woven rattan elements and a classic woodgrain finish, offering both aesthetic appeal and practical functionality for kitchens, dining rooms, living rooms, studies, or bathrooms.

Key Features:

- **Boho Rattan Aesthetic:** Unique woven rattan elements combined with classic woodgrain designs.
- **Flexible Storage Options:** Upper cabinet doors feature 6 door shelves for condiments and small items. Both upper and bottom storage cabinets include 2 adjustable shelves each.
- **Versatile Large Pantry:** Measures 15.4"D x 29.9"W x 72.1"H, with 2 large-capacity storage cabinets and a spacious drawer (13.23"D x 25"W x 3.11"H).
- **Ultra Durability:** Constructed with premium FSC-certified engineered wood panels for robustness and stability.

Overall Pantry Dimension



Image 1: Overall dimensions of the SICOTAS 72 inch Tall Pantry Cabinet, showing a depth of 15.4 inches, width of 29.9 inches, and height of 72.1 inches. The image also details the dimensions of the door shelves and the large drawer.

Unique Rattan Style

Adding a touch of natural farmhouse charm

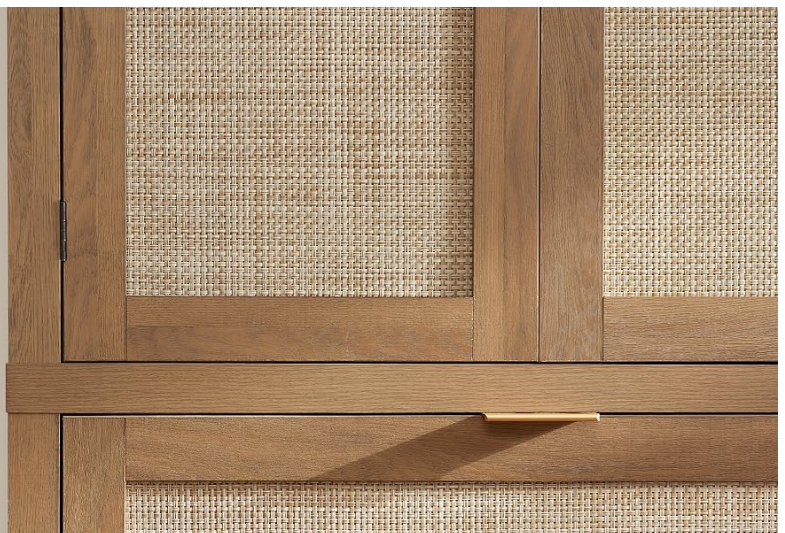


Image 2: A close-up view highlighting the unique rattan style integrated into the cabinet doors, adding a natural farmhouse charm.

2. SAFETY INFORMATION

Please read and understand all instructions before assembly and use. Failure to follow these instructions may result in injury or damage to the product.

- Keep all small parts and packaging materials away from children and pets.
- Assemble the unit on a soft, clean surface to prevent scratches.
- Ensure all connections are securely fastened before use. Periodically check and re-tighten fasteners as needed.
- Do not overload shelves or drawers. Distribute weight evenly.
- For stability, consider anchoring the cabinet to a wall, especially if children are present. Wall anchoring hardware may be included or purchased separately.
- Avoid placing hot items directly on the cabinet surface.

3. ASSEMBLY INSTRUCTIONS

Assembly is required for this product. Complete hardware and detailed instructions are included in the packaging. Please follow the step-by-step guide provided with your product for a smooth assembly process.

1. **Unpack:** Carefully remove all components from the packaging and lay them out on a clean, soft surface. Verify all parts against the included parts list.
2. **Identify Hardware:** Separate and identify all hardware components (screws, dowels, cam locks, etc.) using the provided diagram.
3. **Follow Steps:** Adhere strictly to the numbered assembly steps in the instruction booklet. Do not skip steps.
4. **Secure Connections:** Ensure all screws, cam locks, and other fasteners are tightened securely. Do not overtighten.
5. **Install Doors and Drawers:** Attach doors and drawers according to the instructions, ensuring proper alignment and smooth operation.
6. **Final Placement:** Once assembled, carefully move the cabinet to its desired location.

Your browser does not support the video tag.

Video 1: A product showcase video demonstrating the features and appearance of the SICOTAS Rattan Kitchen Storage Cabinet. This video provides a visual overview of the assembled product.

4. OPERATING INSTRUCTIONS

This pantry cabinet is designed for intuitive use and flexible storage.

- **Doors:** Gently open and close the cabinet doors using the metal handles. The magnetic door catches ensure secure closure.
- **Drawers:** Pull the large storage drawer open and push it closed smoothly. Avoid slamming the drawer.
- **Adjustable Shelves:** The upper and bottom cabinets each contain 2 adjustable shelves. To adjust, carefully remove items, lift the shelf, and reposition the shelf pegs to the desired height. Ensure the shelf is level and securely seated before placing items back.
- **Door Shelves:** Utilize the 6 door shelves for smaller items like spices, condiments, or beverages to maximize space.

6 Door Shelves Design

Maximize storage space for easy access



Image 3: An interior view of the upper cabinet, highlighting the six door shelves designed to maximize storage space for small items like spices and condiments.

Large Storage Drawer

Flexible for Different Storage Needs



Image 4: The large storage drawer pulled open, displaying plates and cutlery, demonstrating its capacity for various storage needs.



Image 5: A view of the cabinet's interior showing the adjustable and removable shelves, indicating flexibility for organizing items of different sizes.

Your browser does not support the video tag.

Video 2: A video showcasing the SICOTAS Rattan Pantry, demonstrating its storage capabilities and design in a home setting.

5. MAINTENANCE

Proper care will ensure the longevity and appearance of your SICOTAS pantry cabinet.

- **Cleaning:** Wipe surfaces with a soft, damp cloth. Avoid abrasive cleaners, harsh chemicals, or excessive moisture, which can damage the engineered wood and rattan.
- **Spills:** Clean spills immediately with a dry cloth to prevent staining or water damage.
- **Sunlight:** Avoid prolonged exposure to direct sunlight to prevent fading or discoloration of the wood and

rattan.

- **Humidity:** Maintain a stable humidity level in the room to prevent warping or cracking of the wood.
- **Hardware:** Periodically check and tighten all hardware connections to ensure stability.

6. TROUBLESHOOTING

If you encounter any issues with your pantry cabinet, refer to the following common solutions:

- **Wobbly Cabinet:** Ensure the cabinet is placed on a level surface. Check all assembly screws and tighten them if loose. If included, adjust the leveling feet.
- **Doors Not Closing Properly:** Check door hinges for proper alignment. Adjust hinges as needed according to the assembly instructions. Ensure no items are obstructing the door's path.
- **Drawer Sticking:** Ensure the drawer slides are clean and free of debris. Check that the drawer is correctly installed on its runners.
- **Scratches/Minor Damage:** For minor scratches on the wood, a wood repair marker or furniture polish may help.

If problems persist, please contact SICOTAS customer support.

7. SPECIFICATIONS

Feature	Detail
Brand	SICOTAS
Model Number	B0FSRVWYRW
Color	Reclaimed Caramel Oak
Material	Engineered Wood
Product Dimensions (D x W x H)	15.4"D x 29.9"W x 72.1"H
Number of Doors	4
Number of Drawers	1
Number of Shelves	10 (including door shelves)
Installation Type	Freestanding
Required Assembly	Yes
Style Name	Farmhouse

8. WARRANTY AND SUPPORT

For warranty information or assistance with your SICOTAS 72" Tall Pantry Cabinet, please refer to the warranty card included with your purchase or contact SICOTAS customer support directly. Our team is available to help with any questions regarding assembly, parts, or product functionality.

Contact Information: Please visit the official SICOTAS website or refer to your purchase documentation for the most current contact details.

