

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

> [ANPABO](#) /

> [ANPABO Licensed Ford F-150 24V Ride-On Car User Manual \(Model S323\)](#)

ANPABO S323

ANPABO Licensed Ford F-150 24V Ride-On Car User Manual (Model S323)

Your guide to assembly, operation, and maintenance.

1. INTRODUCTION

Thank you for choosing the ANPABO Licensed Ford F-150 24V Ride-On Car. This manual provides essential information for the safe assembly, operation, and maintenance of your new electric vehicle. Please read it thoroughly before use and retain it for future reference.



Figure 1: The ANPABO Licensed Ford F-150 24V Ride-On Car, showcasing its classic design.

This 2-seater electric car is designed to replicate the classic 1973 Ford F-150, offering a realistic driving experience for children aged 3-8. It features a 24V battery, 4x100W motors, three-speed adjustments, a large storage box, and a music player with Bluetooth, FM radio, and USB connectivity.

2. SAFETY INFORMATION

WARNING: Adult assembly required. Keep children away from small parts during assembly.

- Always supervise children during operation.
- Ensure all safety belts are securely fastened before driving.
- Do not operate the vehicle near stairs, steep inclines, roads, or swimming pools.
- Only use the provided charger and battery.
- Regularly inspect the vehicle for damage or loose parts.
- The remote control features an emergency stop button for parental intervention.
- Recommended age: 3-8 years. Maximum weight capacity: 130 lbs.



Figure 2: Emphasizing safety features like 3-point seatbelts, parental remote control with emergency brake, and lockable doors.

3. PACKAGE CONTENTS

Before assembly, please verify that all parts listed below are present:

- 1 x ANPABO Licensed Ford F-150 Ride-On Car (main body)
- 1 x Remote Control (requires 2*1.5 AAA batteries, not included)
- 1 x Charger
- 4 x Wheels
- 2 x Seats with 3-point seatbelts
- 1 x Steering Wheel
- 1 x Roll Bar Assembly
- Various screws, washers, and tools for assembly

4. SETUP AND ASSEMBLY

Follow these steps carefully for proper assembly. An adult must perform all assembly procedures.

1. **Unpacking:** Carefully remove all components from the packaging.
2. **Connect Internal Wiring:** Locate the main wiring harness inside the car body. Connect the corresponding plugs.
3. **Install Dashboard/Control Panel:** Secure the dashboard panel into its designated slot, ensuring all wires are connected and screws are tightened.
4. **Install Rear Axle and Motors:** Attach the rear axle assembly, including the motors, to the underside of the car. Secure with provided nuts and bolts. Connect the motor wiring.
5. **Attach Wheels:** Slide the wheels onto the axles. Secure each wheel with a washer and nut, then attach the hubcaps.
6. **Install Battery:** Place the 24V battery in its compartment and connect the terminals. Secure the battery cover.
7. **Install Seats:** Place the seats into their positions and secure them with screws. Ensure the 3-point seatbelts are properly routed.
8. **Install Steering Wheel:** Connect the steering wheel to the steering column, ensuring any electrical connections for horn/music are made. Secure with the provided screw.
9. **Install Roll Bar:** Assemble the chrome roll bar and attach it to the rear of the car body using the provided screws.
10. **Remote Control Setup:** Open the battery compartment on the remote control and insert 2x AAA batteries (not included).

Your browser does not support the video tag.

Video 1: Detailed installation guide for the ANPABO Licensed Ford F-150 Ride-On Car. This video demonstrates step-by-step assembly of the vehicle's components, including wiring, wheels, seats, and the roll bar.



Figure 3: Illustration of the vehicle's power components, including the 24V battery and 4x100W motors, contributing to its powerful performance.

5. OPERATING INSTRUCTIONS

5.1 Starting the Vehicle

- Press the "One Button Start" button on the dashboard to power on the vehicle. You will hear an engine sound.
- Use the gear shifter to select Forward or Reverse.
- Press the foot pedal to accelerate. The vehicle features soft-start technology for smooth acceleration.

5.2 Music and Entertainment

- The integrated music player offers built-in songs and FM radio.
- Connect your device via Bluetooth or USB to play custom audio.
- Use the "Song Switch" buttons to navigate tracks.
- The steering wheel includes a working horn for added realism.

5.3 Remote Control Operation

The parental remote control allows adults to fully control the vehicle, which is ideal for younger children or for safety intervention.

- **Pairing:** Follow the instructions in the remote control's specific manual to pair it with the vehicle.
- **Driving:** Use the directional buttons to steer and control forward/reverse movement.
- **Speed:** The remote can adjust between three speed settings.
- **Emergency Stop:** Press the 'P' button on the remote for an immediate emergency stop.



Figure 4: Demonstrating both child-driven and parent-controlled operation modes for enhanced safety and enjoyment.

6. MAINTENANCE

6.1 Battery Care

- Charge the battery for 8-12 hours before first use. Do not overcharge.
- Recharge the battery after each use.
- If the vehicle is not used for an extended period, charge the battery at least once a month to prolong its lifespan.

- Do not store the battery in extreme temperatures.

6.2 Cleaning and Storage

- Clean the vehicle with a soft, damp cloth. Do not use abrasive cleaners.
- Store the vehicle in a dry, cool place away from direct sunlight.
- Protect the vehicle from rain and moisture.

7. TROUBLESHOOTING

If you encounter any issues, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Vehicle does not move.	Battery is low or disconnected. Fuse is blown. Motor wiring is loose.	Charge the battery. Check all wiring connections. Replace fuse if necessary.
Vehicle runs slowly.	Low battery. Overloaded vehicle. Operating on rough terrain.	Charge the battery. Reduce load. Move to a smoother surface.
Remote control not working.	Remote batteries are dead. Remote not paired. Interference.	Replace remote batteries. Re-pair the remote. Move away from interference sources.
No sound from music player.	Volume is too low. Connections are loose.	Increase volume. Check audio connections.

If the problem persists after trying these solutions, please contact ANPABO customer support.

8. SPECIFICATIONS

- **Model Number:** S323
- **Brand:** ANPABO
- **Product Dimensions:** 47.25 x 25.59 x 24.4 inches
- **Item Weight:** 60.6 pounds
- **Battery:** 24V 7Ah (included)
- **Motors:** 4 x 100W
- **Maximum Speed:** 4.3 mph
- **Run Time:** 70-130 minutes (depending on usage)
- **Maximum Load Capacity:** 130 lbs
- **Recommended Age:** 3-8 years
- **Seat Dimensions:** 20 x 14 x 7.1 inches (2-seater)



Figure 5: Key dimensions and specifications for the ride-on car, including age and weight limits.

9. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the documentation included with your product or visit the official ANPABO website. You may also contact the seller, OutdoorXplore, directly for assistance.

Seller: OutdoorXplore

Customer Support: Refer to product packaging or seller's contact information for details.

Returns: Returnable until Jan 31, 2026 (as per purchase date).