

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

> [GreenPan](#) /

> [GreenPan Electric 6QT Slow Cooker Instruction Manual](#)

GreenPan CC010567-001

GreenPan Electric 6QT Slow Cooker Instruction Manual

Model: CC010567-001

1. INTRODUCTION

Thank you for purchasing the GreenPan Electric 6QT Slow Cooker. This appliance is designed for versatile cooking, offering 5-in-1 multifunctionality including slow cooking, in-pot browning, and a keep warm setting. Its ceramic nonstick, PFAS-free removable pot ensures healthier cooking and easy cleanup. Please read this manual thoroughly before use to ensure safe and optimal performance.

2. IMPORTANT SAFETY INFORMATION

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, and/or injury to persons.

- Read all instructions before operating the slow cooker.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse the base unit, cord, or plug in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended household use.
- The removable pot is oven safe. Do not place the main heating unit in the oven.

3. PRODUCT OVERVIEW

Familiarize yourself with the components of your GreenPan Electric Slow Cooker.



Image 3.1: The GreenPan Electric 6QT Slow Cooker with its lid. This image shows the overall appearance of the slow cooker, including the main unit, the lid, and the control panel.

- **Main Unit:** The outer housing containing the heating element and control panel.
- **Removable Pot:** The 6-quart ceramic nonstick inner pot, PFAS-free, dishwasher and oven safe.
- **Glass Lid:** Tempered glass lid with a handle, allowing you to monitor cooking progress.
- **Control Panel:** Digital display and buttons for various functions (Menu, Temp, Time, Delay Timer, Brown/Sauté, Start/Stop, Keep Warm).



Image 3.2: A close-up of the removable inner pot, highlighting its nonstick surface. This pot is designed for easy cleaning and can be used in the oven.

4. SETUP AND FIRST USE

1. **Unpack:** Carefully remove all packaging materials and promotional labels from the slow cooker.
2. **Clean:** Wash the removable pot and glass lid with warm, soapy water. Rinse thoroughly and dry completely. Wipe the exterior of the main unit with a damp cloth. Do not immerse the main unit in water.
3. **Placement:** Place the slow cooker on a dry, level, heat-resistant surface, away from walls and other appliances to ensure proper ventilation.
4. **Insert Pot:** Place the clean, dry removable pot into the main unit.
5. **Power:** Plug the power cord into a standard 100-volt electrical outlet. The display will illuminate.

5. OPERATING INSTRUCTIONS

Your GreenPan Slow Cooker offers multiple cooking functions for various recipes.

5.1. Control Panel Functions

- **MENU:** Cycles through preset cooking modes (e.g., Slow Cook, Roast, Steam).
- **TEMP:** Adjusts cooking temperature (Low, Medium, High, Simmer, Reheat).
- **TIME +/-:** Adjusts cooking time in increments.
- **DELAY TIMER:** Sets a delay before cooking begins.
- **BROWN/SAUTÉ:** Activates the browning/sauté function for searing ingredients directly in the pot.
- **START/STOP:** Begins or ends a cooking cycle.
- **KEEP WARM:** Automatically switches to keep warm mode after cooking, or can be selected manually.

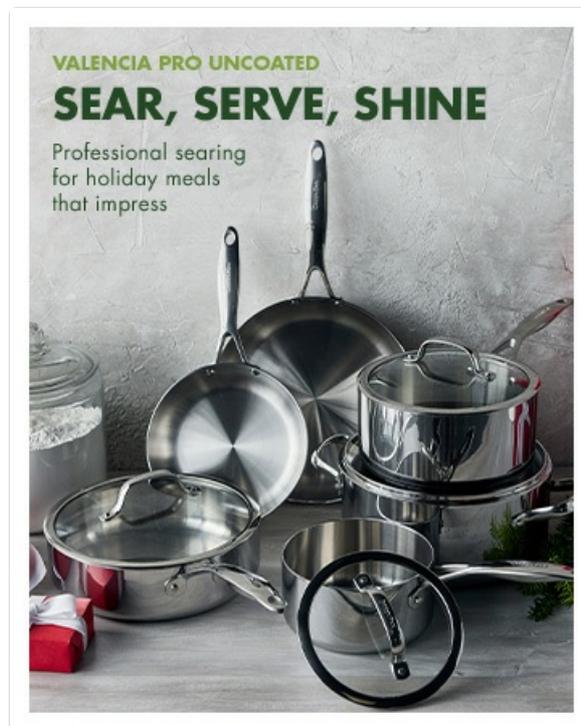


Image 5.1: A close-up of the digital control panel, showing the various buttons and display for setting time, temperature, and cooking modes.

5.2. Slow Cooking

1. Add ingredients to the removable pot.
2. Place the lid on the pot.
3. Press the **MENU** button to select "Slow Cook" or set desired temperature using **TEMP** (Low, Medium, High).
4. Use **TIME +/-** to set the cooking duration.
5. Press **START/STOP** to begin. The unit will automatically switch to "Keep Warm" when cooking is complete.

5.3. In-Pot Browning/Sautéing

1. Ensure the removable pot is in the main unit.
2. Press the **BROWN/SAUTÉ** button.
3. Add a small amount of oil if desired, then add ingredients to brown or sauté.
4. Stir occasionally until desired browning is achieved.
5. Press **START/STOP** to end the browning cycle, then proceed with slow cooking or other functions.

5.4. Keep Warm Function

The slow cooker automatically enters "Keep Warm" mode after a cooking cycle. You can also manually select this function by pressing the **KEEP WARM** button. This function is designed to keep food at a serving temperature, not to cook or reheat cold food.

5.5. Delay Timer

1. Set your desired cooking mode and time.
2. Press the **DELAY TIMER** button.
3. Use **TIME +/-** to set the delay duration before cooking begins.
4. Press **START/STOP**. The timer will count down, and then the cooking cycle will automatically start.

6. CLEANING AND MAINTENANCE

Proper cleaning ensures the longevity and performance of your slow cooker.

- Always unplug the appliance and allow it to cool completely before cleaning.
- **Removable Pot and Lid:** The ceramic nonstick removable pot and glass lid are dishwasher safe. For best results and to prolong the life of the nonstick coating, hand washing with warm, soapy water and a non-abrasive sponge is recommended.
- **Main Unit:** Wipe the exterior of the main unit with a damp cloth. Do not use abrasive cleaners or scouring pads. Never immerse the main unit in water or any other liquid.
- **Storage:** Ensure all parts are clean and dry before storing. Store the slow cooker with the lid inverted on the pot to prevent odors and allow air circulation.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Appliance does not turn on.	Not plugged in; power outage; faulty outlet.	Ensure plug is securely in outlet; check circuit breaker; try a different outlet.
Food not cooking properly.	Incorrect temperature/time setting; lid not sealed properly; too much liquid.	Verify settings; ensure lid is seated correctly; adjust liquid amount as per recipe.
Food sticking to the pot.	Insufficient oil (for browning); food cooked too long on high heat.	Use a small amount of oil for browning; ensure proper temperature and cooking time for slow cooking. The ceramic nonstick surface is designed to minimize sticking.
Display shows an error code.	Internal malfunction.	Unplug the unit, wait 5 minutes, then plug back in. If the error persists, contact customer support.

8. PRODUCT SPECIFICATIONS

Brand: GreenPan

Model Number: CC010567-001

Capacity: 6 Quarts

Color: Graphite

Material: Ceramic, Plastic, Stainless Steel, Tempered Glass

Product Dimensions: 13.39"D x 18.11"W x 10.47"H

Item Weight: 14.55 pounds

Voltage: 100 Volts

Control Method: Push Button

Number of Settings: 5 (Multifunction Design)

Dishwasher Safe: Yes (Removable Pot and Lid)

Oven Safe: Yes (Removable Pot)

UPC: 885837056068

9. WARRANTY AND CUSTOMER SUPPORT

For warranty information, product registration, or customer support, please refer to the warranty card included with your purchase or visit the official GreenPan website. Keep your proof of purchase for warranty claims.

Online Support: www.greenpan.com



© 2025 GreenPan. All rights reserved.