

[Manuals.plus](#) /

› [VINGLI](#) /

› VINGLI Fireplace TV Stand with Electric Fireplace Heater and LED Light (Model BL0BL5H)

VINGLI BL0BL5H

VINGLI Fireplace TV Stand with Electric Fireplace Heater and LED Light

Model: BL0BL5H

INTRODUCTION

This instruction manual provides essential information for the safe assembly, operation, and maintenance of your VINGLI Fireplace TV Stand. Please read this manual thoroughly before installation and retain it for future reference.

IMPORTANT SAFETY INFORMATION

- Ensure all components are present before assembly.
- Do not overtighten screws during assembly.
- Place the unit on a flat, stable surface.
- Keep flammable materials at least 3 feet (0.9 meters) away from the front of the fireplace heater.
- Do not block air vents of the electric fireplace.
- Unplug the fireplace heater before cleaning or maintenance.
- This appliance is for indoor use only.

PACKAGE CONTENTS

Your VINGLI Fireplace TV Stand package includes the following items:

- 58" Fireplace TV Stand components
- 24" Electric Fireplace Insert
- Remote Control for Fireplace
- Remote Control for LED Strip
- Assembly Hardware
- Instruction Manual



Image: The TV stand and fireplace insert may arrive in two separate packages.

SETUP AND ASSEMBLY

Assembly of the VINGLI Fireplace TV Stand requires careful attention to detail. It is recommended that two adults perform the assembly. Please follow the included detailed assembly instructions provided in the separate manual for the TV stand components.

Placement Considerations:

- Choose a location with a stable, level floor.
- Ensure adequate clearance around the unit for ventilation and safety.
- Position the stand near a grounded electrical outlet for the fireplace heater and LED lights.
- The stand is designed to accommodate TVs up to 65 inches. Ensure your TV's base fits within the top surface dimensions.



Image: VINGLI Fireplace TV Stand in a living room setting, showcasing its design and function.



Image: Dimensional diagram indicating the stand's measurements and suitability for various TV sizes.

OPERATING INSTRUCTIONS

Electric Fireplace Heater Operation:

The 24-inch electric fireplace insert provides both visual flame effects and supplemental heating. It can be controlled via the included remote control or the touch panel on the unit.

- **Power On/Off:** Press the power button on the remote or touch panel.
- **Flame Colors:** Cycle through 12 flame colors using the dedicated button.
- **Brightness Levels:** Adjust flame brightness (5 levels) to your preference.
- **Temperature Control:** Set the desired temperature between 62°F and 95°F.
- **Timer Function:** Utilize the timer for automatic shut-off (0.5 to 6 hours).
- **Overheat Protection:** The unit is equipped with an automatic shut-off feature if it overheats.



Image: Detailed view of the 24-inch electric fireplace insert, highlighting its features and controls.



Image: Visual representation of the 12 available flame colors for the electric fireplace.

LED Strip Light Operation:

The integrated full-color LED light strip can be controlled via its dedicated remote or a smart application on your mobile device.

- **Color Selection:** Choose from millions of colors.
- **Music Sync Mode:** Lights can synchronize with ambient sound.
- **Timer Function:** Set timers for automatic on/off.
- **App Control:** Download the specified smart APP for advanced control features.



Image: The TV stand with its LED strip lights illuminated, demonstrating APP and remote control capabilities.

MAINTENANCE

- **Cleaning:** Dust the surfaces with a soft, dry cloth. For stubborn marks, use a slightly damp cloth and mild detergent, then wipe dry immediately. Do not use abrasive cleaners.
- **Fireplace Insert:** Ensure the fireplace is unplugged and cool before cleaning. Wipe the glass panel with a soft cloth. Do not spray water directly onto the unit.
- **Ventilation:** Periodically check that the air intake and exhaust vents of the fireplace heater are clear of dust and obstructions.
- **Hardware:** Periodically check all assembly hardware to ensure it remains tight. Retighten if necessary.

TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Fireplace does not turn on.	Not plugged in; power outlet malfunction; overheat protection activated.	Ensure unit is securely plugged into a working outlet. Check circuit breaker. Allow unit to cool down if overheat protection was triggered.
No heat output.	Heater function not activated; temperature setting too low.	Activate heater function via remote or touch panel. Increase desired temperature setting.
LED lights not working.	LED strip not connected; remote battery low; APP connection issue.	Check LED strip connections. Replace remote batteries. Re-establish APP connection.
Unit is unstable or wobbles.	Uneven floor; loose assembly hardware.	Relocate to a level surface or use shims. Retighten all assembly screws.

SPECIFICATIONS

Feature	Detail
Brand	VINGLI
Model Number	BL0BL5H
Product Dimensions (WxDxH)	58.11"W x 13.7"D x 32.48"H
Material	Engineered Wood
Color	Walnut
Power Source	Corded Electric
Heat Output	1400 Watts
Fireplace Insert Size	24 inches (width)
Temperature Range	62°F to 95°F
Timer	0.5 - 6 hours
TV Compatibility	Up to 65 inches
Item Weight	107.7 Pounds

WARRANTY AND SUPPORT

VINGLI provides a 1-year quality service warranty for this product. For any issues or inquiries, please contact VINGLI customer support.

- **Warranty Period:** 1 Year Quality Service
- **Customer Support:** Refer to the contact information provided with your purchase or visit the official VINGLI website.



Image: VINGLI's commitment to 1-year quality service and 24/7 professional support.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0FSSGPTY3>

More documents and user manuals: <https://manuals.plus/>