

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [BLACK+DECKER](#) /

› [BLACK+DECKER 23L Air Fry Toaster Oven Instruction Manual - Model TO6235-0SDLA](#)

BLACK+DECKER TO6235-0SDLA

BLACK+DECKER 23L Air Fry Toaster Oven Instruction Manual

Model: TO6235-0SDLA

1. INTRODUCTION

Thank you for choosing the BLACK+DECKER 23L Air Fry Toaster Oven. This appliance is designed to provide versatile cooking options, including air frying, baking, toasting, broiling, warming, and pizza preparation. Please read this manual thoroughly before operating your new appliance to ensure safe and efficient use. Keep this manual for future reference.



Image 1: The BLACK+DECKER 23L Air Fry Toaster Oven, showcasing its sleek design and front controls.

2. IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury, including the following:

- Read all instructions.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse cord, plugs, or appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner. Contact customer support for assistance.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- To disconnect, turn any control to OFF, then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- Use extreme caution when removing tray or disposing of hot grease.
- Do not clean with metal scouring pads. Pieces can break off the pad and touch electrical parts, creating a risk of electric

shock.

- Do not store any materials, other than manufacturer's recommended accessories, in this oven when not in use.
- Do not place any of the following materials in the oven: paper, cardboard, plastic, or any materials not specifically designed for oven use.
- Do not cover crumb tray or any part of the oven with metal foil. This will cause overheating of the oven.
- Oversize foods or metal utensils must not be inserted in a toaster oven as they may create a fire or risk of electric shock.
- A fire may occur if the toaster oven is covered or touching flammable material, including curtains, drapes, walls, and the like, when in operation.
- Always wear protective, insulated oven mitts when inserting or removing items from the hot oven.

3. PACKAGE CONTENTS

Verify that all items are present and in good condition upon opening the package:

- BLACK+DECKER 23L Air Fry Toaster Oven (Model TO6235-0SDLA)
- Air Fry Basket
- Baking Pan
- Wire Rack
- Removable Crumb Tray
- Instruction Manual



Image 2: The air fry basket, baking pan, wire rack, and crumb tray included with the toaster oven.

4. PRODUCT FEATURES

The BLACK+DECKER 23L Air Fry Toaster Oven is equipped with advanced features to enhance your cooking experience:

- **Large 23L Capacity:** Accommodates up to 6 slices of bread or a 30 cm pizza, suitable for family meals.
- **6 Automatic Functions:** Versatile cooking modes including Air Fry, Bake, Broil, Toast, Keep Warm, and Pizza.
- **1500W Power:** Ensures high performance and efficient cooking.
- **60-Minute Automatic Timer:** Features a stay-on function for longer cooking tasks and a dedicated toast timer for precise browning.
- **4 Rack Positions:** Offers flexibility to cook various dishes simultaneously or adjust for different food sizes.
- **Removable Crumb Tray:** Facilitates easy cleaning and prevents food debris from burning.



**Acomoda
una pizza
de 30 cm**

**Cocina tu pizza favorita
sin complicaciones**

Image 3: A visual representation of the diverse meals that can be prepared using the oven's six automatic functions, including empanadas, salmon, cookies, toast, chicken wings, and pizza.

4.1. Capacity Overview

The generous 23-liter interior is designed to handle a variety of cooking needs:

- **6 Slices of Bread:** Ideal for preparing breakfast or snacks for the whole family.
- **30 cm Pizza:** Easily fits a standard frozen or homemade pizza.



**Acomoda
6 rebanadas
de pan**

Perfecto para tostar
pan para todos
al mismo tiempo

Image 4: The oven easily accommodates 6 slices of bread for toasting.



Tecnología MAXSPACE

40% más de capacidad
para freír con aire*
ocupando el mismo
espacio de la encimera

*vs el modelo TO3217SS del horno BLACK+DECKER®

Image 5: A 30 cm pizza fits comfortably inside the oven for baking.

4.2. Rack Positions

The oven features four distinct rack positions, allowing for optimal cooking based on food type and desired browning:

- **Position 1 (Bottom):** Ideal for baking larger items or for gentle heating.
- **Position 2:** Suitable for most baking and air frying tasks.
- **Position 3:** Best for toasting and broiling, bringing food closer to the heating elements.
- **Position 4 (Top):** For intense broiling or quick browning.



**Rejilla con
4 posiciones**

**Para mayor flexibilidad
al cocinar**

Image 6: The interior of the oven highlighting the four available rack positions for versatile cooking.

5. SETUP

Before first use, follow these steps:

1. Remove all packaging materials, stickers, and plastic bands from the oven.
2. Remove all accessories from the oven cavity.
3. Wash the air fry basket, baking pan, wire rack, and crumb tray in warm, soapy water. Rinse and dry thoroughly.
4. Wipe the interior and exterior of the oven with a damp cloth. Dry thoroughly.
5. Place the oven on a stable, level, heat-resistant surface, ensuring at least 15 cm (6 inches) of space on all sides for proper ventilation.
6. Plug the power cord into a standard electrical outlet.

Your browser does not support the video tag.

Video 1: An unboxing video demonstrating the initial setup and components of a similar toaster oven model. This video provides a visual guide to unpacking and preparing the appliance for first use.

6. OPERATING INSTRUCTIONS

This section details how to use the various functions of your BLACK+DECKER Air Fry Toaster Oven.

6.1. General Operation

1. **Temperature Control:** Use the top knob to set the desired cooking temperature (e.g., 150°C to 230°C / 300°F to 450°F).
2. **Function Selector:** Use the middle knob to select the cooking function (Air Fry, Bake, Broil, Toast, Keep Warm, Pizza).
3. **Timer Control:** Use the bottom knob to set the cooking time. For continuous operation, turn the knob past the 60-minute mark to the 'Stay On' position. For toasting, use the dedicated toast timer settings.
4. **Preheating:** For best results, preheat the oven for 5-10 minutes before placing food inside, especially for baking and air frying.

6.2. Using the Functions

Refer to the following guidelines for each cooking function:

- **Air Fry:** Place food in the air fry basket, positioned on the wire rack. Select 'Air Fry' function, set temperature and time. This function uses convection to circulate hot air for crispy results with little to no oil.
- **Bake:** Place food in the baking pan or an oven-safe dish on the wire rack. Select 'Bake' function, set temperature and time. Ideal for cakes, cookies, and casseroles.
- **Broil:** Place food directly on the wire rack or in the baking pan, positioned closer to the top heating elements. Select 'Broil' function, set time. Use for browning, melting cheese, or cooking thin cuts of meat.
- **Toast:** Place bread or bagels directly on the wire rack. Select 'Toast' function and adjust the toast shade timer. The oven will automatically shut off when toasting is complete.
- **Keep Warm:** Select 'Keep Warm' function. This setting maintains a low temperature to keep cooked food warm without overcooking.
- **Pizza:** Place pizza directly on the wire rack or in a pizza pan. Select 'Pizza' function, set temperature and time according to pizza instructions.

Your browser does not support the video tag.

Video 2: A close-up video demonstrating the controls and various functions of a similar toaster oven, providing a visual guide to setting temperature, function, and timer.

7. COOKING TIPS

- For even cooking, rotate food halfway through the cooking cycle.
- When air frying, do not overcrowd the basket to allow for proper air circulation and crisping. Cook in batches if necessary.
- Always use oven-safe bakeware.
- Adjust cooking times and temperatures as needed, as individual ovens may vary.
- Use the crumb tray to catch drips and crumbs, making cleanup easier.

8. MAINTENANCE AND CLEANING

Regular cleaning ensures optimal performance and longevity of your appliance.

1. Always unplug the oven and allow it to cool completely before cleaning.
2. **Crumb Tray:** Pull out the removable crumb tray from the bottom of the oven. Discard crumbs and wash the tray in warm, soapy water. Rinse and dry thoroughly.
3. **Accessories (Air Fry Basket, Baking Pan, Wire Rack):** Wash in warm, soapy water. For stubborn food residue, soak in hot water before cleaning. These accessories are generally dishwasher-safe, but hand washing is recommended for best care.
4. **Interior:** Wipe the interior walls with a damp cloth and mild detergent. Do not use abrasive cleaners or metal scouring pads.
5. **Exterior:** Wipe the exterior with a damp cloth and dry thoroughly.
6. Do not immerse the oven body, cord, or plug in water or any other liquid.



**6 funciones
automáticas**

Freír con aire, asar, hornear,
tostar, calentar, pizza

Image 7: Demonstrating the removal of the crumb tray for easy cleaning, showing accumulated crumbs.

9. TROUBLESHOOTING

If you encounter any issues, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Oven does not turn on.	Not plugged in; power outage; timer not set.	Ensure plug is securely in outlet; check household circuit breaker; set timer to desired cooking time or 'Stay On'.
Food is not cooking evenly.	Incorrect rack position; overcrowding; uneven food placement.	Adjust rack position; cook in smaller batches; arrange food in a single layer.
Smoke coming from the oven.	Food residue on heating elements; excessive grease; crumb tray full.	Clean interior and accessories thoroughly; empty and clean crumb tray.
Toast is too light/dark.	Toast timer setting incorrect.	Adjust the toast shade selector to a lighter or darker setting.

10. SPECIFICATIONS

Feature	Detail
Brand	BLACK+DECKER
Model Number	TO6235-0SDLA
Color	Silver
Product Dimensions	50.5 x 40 x 33 cm (19.9 x 15.7 x 13 inches)
Capacity	23 Liters
Power	1500 Watts
Material	Stainless Steel
Special Features	Removable Crumb Tray, Large Capacity, Timer
Weight	7.18 Kilograms (15.83 lbs)

11. WARRANTY AND SUPPORT

This BLACK+DECKER appliance comes with a limited warranty. Please refer to the warranty card included in your package for specific terms and conditions. For technical support, replacement parts, or service inquiries, please contact BLACK+DECKER customer service through their official website or the contact information provided in your warranty documentation.