

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Bxmgr](#) /
- › [Bxmgr AKB76046602 MR25GA LG TV Remote Control User Manual](#)

Bxmgr MR25GA

Bxmgr AKB76046602 MR25GA LG TV Remote Control User Manual

Model: MR25GA | Part Number: AKB76046602

1. PRODUCT OVERVIEW

The Bxmgr AKB76046602 MR25GA is a replacement Magic Remote Control designed for compatible LG Smart TVs. It features AI voice recognition, a pointer function, and pre-set hot keys for convenient access to popular streaming services and functions.





Image: Front view of the Bxmgr AKB76046602 MR25GA remote control, showcasing its buttons and ergonomic design.

2. COMPATIBILITY

This remote control is compatible with various LG OLED C5, B5, G5, and M5 Series models. Please verify your TV model against the list below to ensure compatibility.

Compatible LG TV Models:

- OLED42C5PUA
- OLED48B5PUA
- OLED65B5PUA
- OLED65G5WUA
- And other compatible smart TV models.

AN-MR25GA Magic Remote Compatible Chart

32LR600BZUC	50QNED92AUA	65QNED9MAAUA	86UA7700AAUA	OLED55M5PUA	OLED80B59LA.aeu
43QNED82AAA	50QNED92AUA	65UA7500ZUA	86UA7700AUA	OLED65A5AUA	OLED83B53LA.aeu
43QNED82AUA	50QNED9MAAUA	65UA7700AAUA	86UA7700PUA	OLED65B53LA.aeu	OLED83B56LA
43QNED85AAA	50UA7500ZUA	65UA7700AUA	86UA7700PUB	OLED65B56LA	OLED83B59LA.aeu
43QNED85AU	50UA7700AAUA	65UA7700PUA	100QNED82AAA	OLED65B59LA.aeu	OLED83B5PUA
43QNED85AUA	50UA7700AUA	65UA7700PUB	100QNED82AUA	OLED65B5AUA	OLED83C5AUA
43QNED91AAA	50UA7700PUA	75QNED82AAA	100QNED85AAA	OLED65B5PUA	OLED83C5PUA
43QNED91AUA	50UA7700PUB	75QNED82AUA	100QNED85AU	OLED65C5AUA	OLED83G5PUA
43QNED92AUA	55QNED82AAA	75QNED85AAA	100QNED92AUA	OLED65C5AUA	OLED83G5WUA
43QNED92AUA	55QNED82AUA	75QNED85AU	100QNED9MAAUA	OLED65C5PUA	OLED83M5
43QNED9MAAUA	55QNED85AAA	75QNED85AUA	100UA7500ZUA	OLED65C5PUA	OLED86A5AUA
43UA7500ZUA	55QNED85AU	75QNED91AAA	100UA7700AUA	OLED65G5PUA	OLED86B5AUA
43UA7700AAUA	55QNED85AUA	75QNED91AUA	100UA7700PUA	OLED65G5WUA	OLED86C5AUA
43UA7700AUA	55QNED91AAA	75QNED92AUA	OLED42C5PUA	OLED65M5	OLED86C5PUA
43UA7700PUA	55QNED91AUA	75QNED92AUA	OLED48C5PUA	OLED65M5PUA	OLED86M5PUA
43UA7700PUB	55QNED92AUA	75QNED9MAAUA	OLED50A5AUA	OLED75A5AUA	OLED97G2CUA
48QNED82AAA	55QNED92AUA	75UA7500ZUA	OLED50B5AUA	OLED75B5AUA	OLED97G5WUA
48QNED82AUA	55QNED9MAAUA	75UA7700AAUA	OLED50C5AUA	OLED75C5AUA	OLED97M5
48QNED85AAA	55UA7500ZUA	75UA7700AUA	OLED50C5PUA	OLED75C5PUA	
48QNED85AU	55UA7700AAUA	75UA7700PUA	OLED50M5PUA	OLED75M5PUA	
48QNED92AUA	55UA7700AUA	75UA7700PUB	OLED55A5AUA	OLED77B53LA.aeu	
48QNED9MAAUA	55UA7700PUA	86QNED82AAA	OLED55B53LA.aeu	OLED77B56LA	
48UA7500ZUA	55UA7700PUB	86QNED82AUA	OLED55B56LA	OLED77B59LA.aeu	
48UA7700AUA	65QNED82AAA	86QNED85AAA	OLED55B59LA.aeu	OLED77B5PUA	
48UA7700PUA	65QNED82AUA	86QNED85AU	OLED55B5AUA	OLED77C5AUA	
50QNED82AAA	65QNED85AAA	86QNED85AUA	OLED55B5PUA	OLED77C5PUA	
50QNED82AUA	65QNED85AU	86QNED91AAA	OLED55C5AUA	OLED77G5PUA	
50QNED85AAA	65QNED85AUA	86QNED91AUA	OLED55C5AUA	OLED77G5WUA	
50QNED85AU	65QNED91AAA	86QNED92AUA	OLED55C5PUA	OLED77M5	
50QNED85AUA	65QNED91AUA	86QNED92AUA	OLED55C5PUA	OLED77M5PUA	
50QNED91AAA	65QNED92AUA	86QNED9MAAUA	OLED55G5PUA	OLED80B53LA.aeu	
50QNED91AUA	65QNED92AUA	86UA7500ZUA	OLED55G5WUA	OLED80B56LA	

Includes, but is not limited to, the above compatible models

Image: A detailed chart listing numerous compatible LG TV models for the AN-MR25GA Magic Remote.

3. SETUP AND PAIRING

3.1. Battery Installation

Before first use, install two AAA batteries (not included) into the remote control.

1. Locate the battery compartment on the back of the remote.
2. Slide down the battery cover to open it.
3. Insert two AAA batteries, ensuring correct polarity (+/-).
4. Close the battery cover securely.

3.2. Initial Pairing with Your LG TV

The remote control needs to be paired with your LG TV to enable all functions, including AI voice and pointer features.

1. Ensure your LG TV is powered on.

2. Point the remote control towards the TV.
3. Press and hold the **Voice button** (microphone icon) on the remote.
4. Your TV screen will display a prompt instructing you to press the **Wheel (OK) button**.
5. Press the **Wheel (OK) button** to complete the pairing process.
6. A confirmation message will appear on your TV screen indicating successful pairing.

How To Pair The Magic Remote

Pairing the Magic Remote with your TV for the first time

- 1** *Put the batteries in the magic remote and turn the TV on*
- 2** *Press power button, the TV will indicate to press the Wheel(OK) Button.*



NOTE: If you fail to pair successfully, try again after turning the TV off and back on.

Image: Step-by-step visual guide on how to install batteries and pair the remote control with an LG TV, showing the voice button and wheel (OK) button.

3.3. Unpairing (If Previously Paired)

If you need to unpair a previously connected remote or are experiencing pairing issues, follow these steps:

- Simultaneously press and hold the **HOME button** and the **BACK button** on the remote control.
- Continue holding until the indicator light on the remote illuminates, signifying that the previous pairing has been cleared.
- You can then proceed with the initial pairing steps (Section 3.2) to pair the remote again.

4. OPERATING INSTRUCTIONS

4.1. Basic Functions

- **Power Button:** Located at the top of the remote, typically red. Turns the TV on or off.
- **Volume Up/Down (+/-):** Adjusts the TV volume.
- **Channel Up/Down:** Changes TV channels.
- **Home Button:** Accesses the TV's home screen or smart menu.
- **Back Button:** Returns to the previous screen or menu.

4.2. AI Voice Recognition

The remote features AI voice recognition, allowing you to control your TV using voice commands.

1. Press and hold the **Voice button** (microphone icon).
2. Speak your command clearly into the remote.
3. Release the **Voice button** when finished speaking.

MR25GA AKB76046602
Replaceable Models 2025

AI Voice

AI voice recognition and pointers so you can control your TV with your voice at any time

comes with pre-set 6 hot keys for one-click access

The advertisement features a black remote control on the left. A red power button is at the top. Below it are buttons for home, AI (with a microphone icon), LIST, and AD/SAP. A central directional pad is surrounded by volume and channel buttons. At the bottom, three hot keys are highlighted with a red glow: 'N prime', 'D channels', and 'S alx'. A circular microphone icon is shown in the center, and a TV screen in the background displays the text 'AI Voice'. A couple is seen from behind, watching the TV.

Image: Illustration highlighting the AI Voice feature of the MR25GA remote, showing a microphone icon and text indicating voice control capability.

4.3. Pointer Function (Air Mouse)

The pointer function allows you to navigate the TV screen by moving the remote in the air, similar to a mouse.

- Move the remote control in the air to move the on-screen pointer.
- Use the **Wheel (OK) button** to select items or confirm actions.



Image: Demonstrates the pointer function, showing a hand holding the remote and moving an on-screen cursor, along with a description of the wheel keys for selection.

4.4. Hot Keys

The remote includes pre-set hot keys for quick access to popular applications or functions.

- **Netflix Hot Key (N icon):** Directly launches Netflix.
- **Prime Video Hot Key (Prime icon):** Directly launches Amazon Prime Video.
- **Channels Hot Key (D icon):** Accesses TV channels.
- **Alexa Hot Key (S icon):** Activates Alexa voice assistant.
- Additional hot keys may be present depending on the remote version.

5. MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the remote control. Avoid using liquid cleaners or abrasive materials.
- **Battery Replacement:** Replace batteries when the remote's responsiveness decreases or it stops functioning. Always replace both batteries at the same time with new ones of the same type (AAA).
- **Storage:** Store the remote in a dry place away from direct sunlight and extreme temperatures.
- **Avoid Drops:** Protect the remote from physical impact, as drops can damage internal components.

6. TROUBLESHOOTING

- **Remote Not Responding:**

- Check if the batteries are correctly installed and have sufficient charge. Replace if necessary.
- Ensure there are no obstructions between the remote and the TV's sensor.
- Re-pair the remote control with the TV following the steps in Section 3.2.

- **Pointer Not Appearing or Working:**

- Ensure the remote is properly paired.
- Try shaking the remote gently to reactivate the pointer.
- If the issue persists, try unpairing and re-pairing the remote (Section 3.3 and 3.2).

- **Voice Recognition Not Working:**

- Confirm the remote is paired.
- Ensure you are pressing and holding the Voice button while speaking.
- Speak clearly and directly into the remote's microphone.
- Check your TV's settings to ensure voice recognition features are enabled.

- **Hot Keys Not Launching Apps:**

- Ensure your TV is connected to the internet.
- Verify that the respective applications (e.g., Netflix, Prime Video) are installed and updated on your LG TV.

If troubleshooting steps do not resolve the issue, please refer to the support information in Section 8.

7. SPECIFICATIONS

Model Number	MR25GA
Part Number	AKB76046602
Brand	Bxmgr
Compatible Devices	LG Televisions (OLED C5, B5, G5, M5 Series)
Special Feature	AI Voice Search, Pointer Function
Color	Black
Item Weight	3.2 ounces
Package Dimensions	7.24 x 2.17 x 0.94 inches

8. WARRANTY AND SUPPORT

The Bxmgr AKB76046602 MR25GA Magic Remote Control comes with a 5-year after-sales service. For any assistance, questions, or concerns regarding your product, please contact Bxmgr customer support.

- **Customer Support:** Contact information is typically provided with your purchase or can be found on the Bxmgr official website.
- **Service Hours:** Support is available 24 hours a day.
- **Return and Exchange:** A 365-day return and exchange service is provided.

Please retain your proof of purchase for warranty claims.