

B0FSWLKM

Generic Waterproof Mini Relaxation Device User Manual

Model: B0FSWLKM

1. INTRODUCTION

Thank you for choosing the Generic Waterproof Mini Relaxation Device. This compact and portable device is designed to provide a relaxing experience with its advanced suction and vibration functions. Crafted from high-quality, skin-soft silicone, it offers comfort and durability. Please read this manual thoroughly before first use to ensure proper operation and maintenance.

2. KEY FEATURES

- Compact & Portable:** Designed for easy handling and discreet travel.
- Waterproof & Easy to Clean:** Fully submersible for use in wet environments and simple cleaning.
- Comfort Grip:** Ergonomically shaped for a secure and comfortable hold.
- USB Rechargeable & Long Runtime:** Convenient charging and extended usage time.
- Multiple Modes:** Features 10 distinct suction frequencies and 10 vibration frequencies for a personalized experience.

3. PACKAGE CONTENTS

Upon unpacking, please ensure all items listed below are present:

- 1 x Mini Relaxation Device
- 1 x USB Charging Cable
- 1 x User Manual

4. SETUP AND CHARGING

4.1 Initial Charge

Before first use, fully charge the device. The device features a magnetic charging port for convenience.

- Locate the magnetic charging port on the device.
- Connect the provided USB charging cable to the device's magnetic port.

3. Plug the USB end of the cable into a compatible USB power source (e.g., computer, power bank, USB wall adapter).
4. The indicator light will illuminate during charging and turn off or change color when fully charged.
5. A full charge typically takes approximately 2 hours and provides up to 120 minutes of playtime.

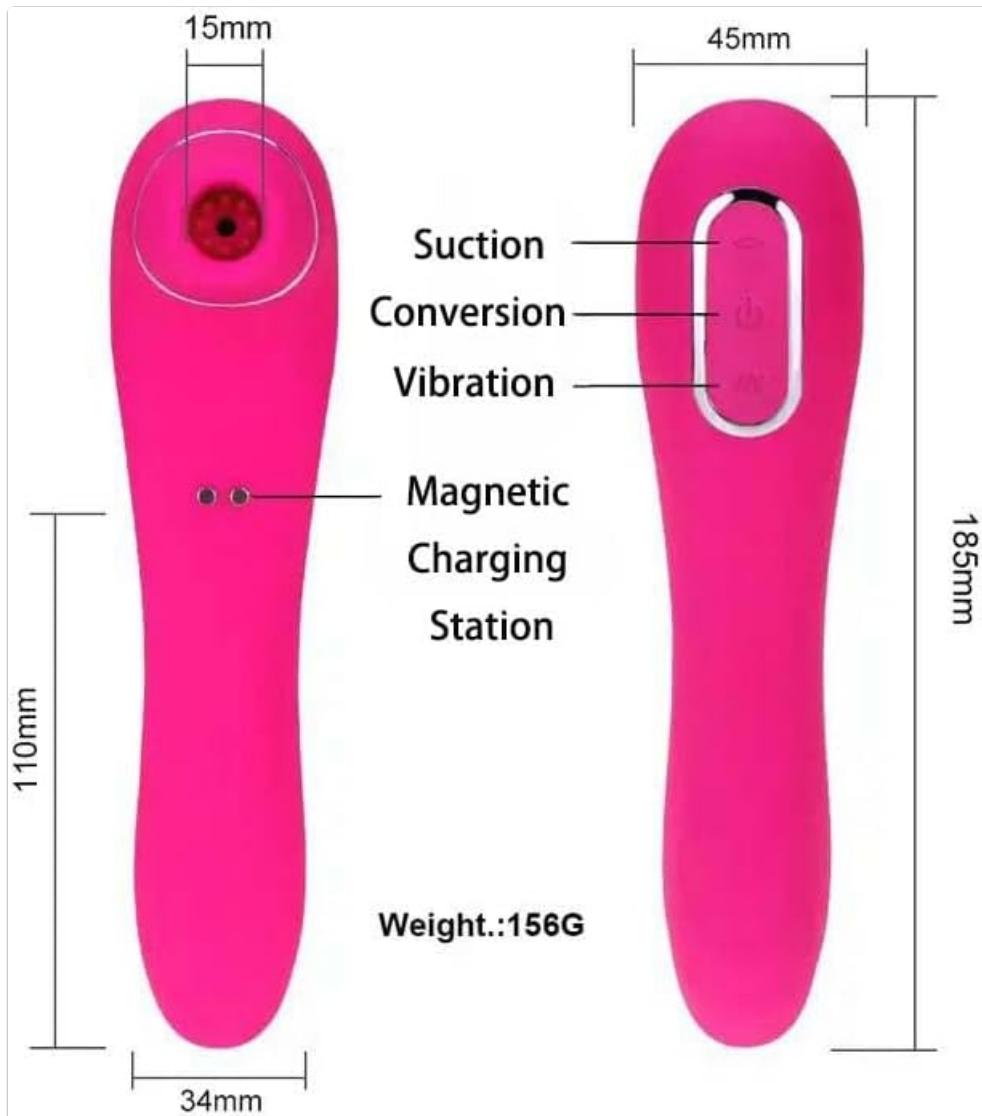


Figure 1: Device controls and charging options. The image displays the device with labels for On/Off, suction frequency toggle, and vibration frequency toggle buttons. It also illustrates the magnetic charging port and compatible USB power sources.

5. OPERATING INSTRUCTIONS

5.1 Power On/Off

- To turn the device **ON**, press and hold the power button (center button) for 3 seconds. The indicator light will illuminate.
- To turn the device **OFF**, press and hold the power button for 3 seconds. The indicator light will turn off.

5.2 Adjusting Modes and Intensity

The device offers 10 suction frequencies and 10 vibration frequencies.

- To toggle through **suction frequencies**, press the top button (labeled with suction icon).
- To toggle through **vibration frequencies**, press the bottom button (labeled with vibration icon).

- Experiment with different modes to find your preferred setting.

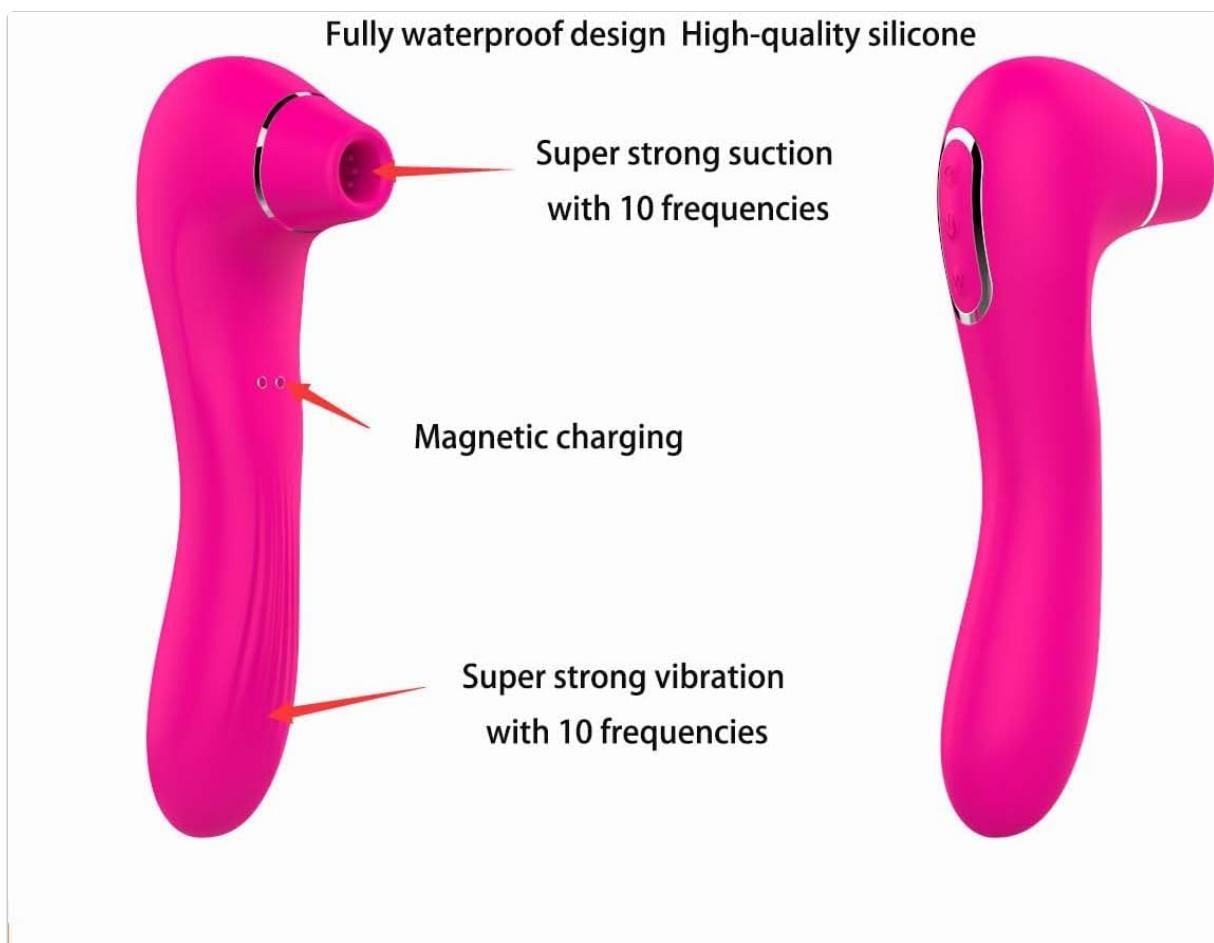


Figure 2: Device features highlighting waterproof design, silicone material, and multiple suction/vibration frequencies.



Figure 3: Internal view demonstrating the 10-frequency vibration mechanism.

6. MAINTENANCE AND CARE

6.1 Cleaning

The device is fully waterproof, making cleaning simple and hygienic.

1. After each use, wash the device with warm water and a mild, toy-specific cleaner.
2. Rinse thoroughly to remove all soap residue.
3. Dry the device completely with a lint-free cloth before storing.
4. Do not use cleaners containing alcohol, petroleum, or acetone, as these can damage the silicone material.

6.2 Storage

- Store the device in a cool, dry place, away from direct sunlight and extreme temperatures.
- Keep it separate from other toys made of different materials to prevent material degradation.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Device does not turn on.	Low battery or not charged.	Ensure the device is fully charged using the provided USB cable. Verify the charging indicator light is active during charging.
Device does not charge.	Improper connection or faulty cable/adapter.	Check that the magnetic charging cable is securely connected to both the device and the power source. Try a different USB port or adapter.
Weak suction/vibration.	Low battery or incorrect mode selected.	Recharge the device. Cycle through the different suction and vibration frequencies to find a stronger setting.

8. SPECIFICATIONS

- Model:** B0FSWLKM
- Brand:** Generic
- Material:** Acrylonitrile Butadiene Styrene (ABS) and Silicone
- Color:** Purple
- Product Dimensions:** 7.28 x 1.76 x 2.6 inches
- Charging:** USB Rechargeable
- Battery Life:** Up to 120 minutes (approx. 2 hours) on a full charge
- Waterproof:** Yes

9. PRODUCT VIDEO DEMONSTRATION

Your browser does not support the video tag.

Video 1: This video demonstrates the suction power of the device. It shows the device in operation, highlighting its functionality and intensity. This demonstration is provided by the seller, RUICHUAN.

10. WARRANTY AND SUPPORT

10.1 Warranty Information

For specific warranty details, please refer to the product packaging or contact the seller directly. Keep your proof of purchase for any warranty claims.

10.2 Customer Support

If you encounter any issues or have questions regarding your device, please contact the seller through the platform where you made your purchase. Provide your order number and a detailed description of the issue for prompt assistance.

