

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

> [LIK CUT](#) /

> [LIK CUT S41 Vinyl Cutter Machine User Manual](#)

LIK CUT S41

LIK CUT S41 Vinyl Cutter Machine User Manual

Model: S41

1. INTRODUCTION

The LIK CUT S41 Vinyl Cutter Machine is designed for precision cutting of various materials, enabling users to create custom designs for stickers, heat transfer vinyl (HTV), cardstock, and more. This manual provides essential information for setting up, operating, maintaining, and troubleshooting your S41 machine to ensure optimal performance and creative output.



Image: The LIKCUT S41 Vinyl Cutter Machine, a compact device for creative projects.

Product Overview Video

Your browser does not support the video tag.

Video: A general overview and demonstration of the LIKCUT S41 Vinyl Cutter Machine's capabilities.

2. SAFETY INSTRUCTIONS

- Always operate the machine on a stable, flat surface.
- Keep hands and loose clothing clear of moving parts during operation.
- Do not attempt to open or repair the machine yourself. Refer to qualified service personnel.
- Keep out of reach of children.
- Use only LIKCUT approved accessories and power adapters.

3. PACKAGE CONTENTS

Verify that all items are present in the package before proceeding with setup:

- 1 x LIKCUT S41 Cutting Machine

- 1 x Power Adapter
- 1 x USB-C Cable
- 1 x Vinyl Bundle (includes various materials for initial projects)
- 1 x Watercolor Pen Black (0.4mm)
- 1 x Hook Weeder Tool
- 1 x Standard Cutting Mat (8.5" x 12")
- 2 x Smart Adhesive Vinyl (8.5" x 12")
- 4 x Adhesive Vinyl Sheet (8.5" x 12")
- 1 x Transfer Tape (4.5" x 6.5")

Learn. Craft.
Inspire



Image: The LIKCUT S41 Vinyl Cutter Machine with its complete set of included components and starter materials.

4. GETTING STARTED (SETUP)

4.1 Physical Setup

1. Unpack the LIKCUT S41 machine and all accessories from the box.
2. Place the machine on a clean, flat, and stable surface. Ensure there is enough space around the machine for material loading and unloading.
3. Connect the power adapter to the machine and plug it into a power outlet.

4.2 Software Installation

The LIKCUT S41 requires dedicated software for design and cutting operations. Download the official LIKCUT software from the manufacturer's website. Follow the on-screen instructions for installation.

4.3 Connecting the Machine

The S41 supports both wired (USB) and wireless (Bluetooth) connections.

- **USB Connection:** Connect the provided USB-C cable from the machine to your computer.
- **Bluetooth Connection:** Turn on the machine. On your device (computer, tablet, or smartphone), enable Bluetooth and search for the LIKCUT S41. Pair the devices as prompted.

Stable Connection, Smooth Creation



Image: The LIKCUT S41 highlighting its dual-mode connectivity via Bluetooth 5.0 and USB 2.0 for stable operation.

5. OPERATING INSTRUCTIONS

5.1 Basic Workflow

The LIKCUT S41 simplifies the crafting process into a three-step workflow:

1. **Design:** Create or import your design using the LIKCUT software on your connected device.
2. **Prepare:** Place your material onto the cutting mat and load it into the machine.
3. **Cut:** Send the design to the machine from the software. The machine will perform the cut.



Image: A visual representation of the simple 3-step workflow for using the LIKCUT S41 Vinyl Cutter Machine.

5.2 Loading Materials

Ensure your material is securely placed on the cutting mat. Align the mat with the guides on the machine and press the 'Load/Unload' button (often indicated by an arrow icon) to feed the mat into the machine.

5.3 Cutting Process and Precision

The S41 features micro-precision control with an accuracy tolerance of 0.2mm. Its sensor and smart algorithm system automatically calibrates the cutting path for stable and precise results. The machine optimizes cut orders for efficiency.

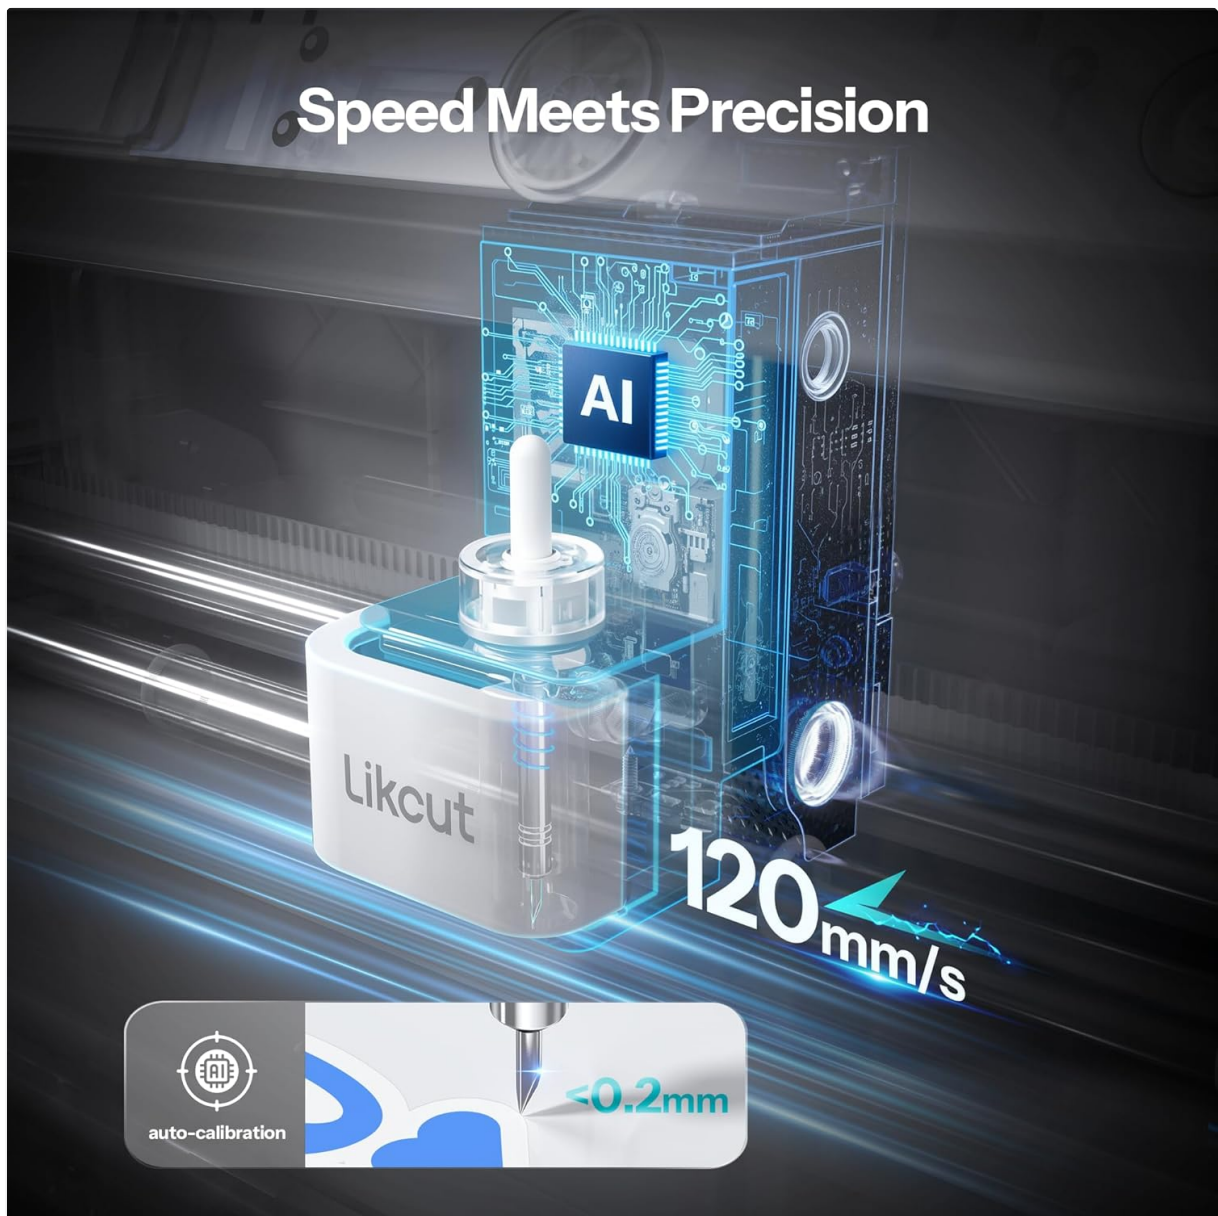


Image: The LIKUCUT S41's cutting mechanism, illustrating its AI-driven micro-precision control for accurate cuts at 120mm/s.

5.4 Print Then Cut Feature

The S41 supports 'Print Then Cut' functionality, allowing you to print designs using an inkjet printer and then cut them precisely with the S41. This is ideal for creating detailed stickers and labels.



Print Then Cut



Image: The 'Print Then Cut' feature in action, demonstrating how the LIKUT S41 precisely cuts around pre-printed designs.

5.5 Expanded Cutting Width

The LIKUT S41 offers an expanded cutting width of up to 8.5 inches, accommodating US Letter size materials. This allows for larger designs to be cut in a single process, reducing the need for manual partitioning.



Maximum Cutting Width

Go Wider, Create Freer

Image: A comparison illustrating the LIKCUT S41's 8.5-inch maximum cutting width, allowing for larger projects.

5.6 Control Panel Overview (One-Touch Mastery)

The S41 features an easy-to-read screen that displays real-time status and provides clear guidance. Essential functions like Start/Stop and Load/Unload are accessible directly on the machine for immediate use.

One Tap, Clear View



Image: The LIKUT S41's control panel, detailing its display for real-time status and one-touch buttons for key operations.

6. MAINTENANCE

6.1 Cleaning

- Regularly wipe the exterior of the machine with a soft, dry cloth.
- Periodically clean the cutting mat to maintain its adhesive properties.
- Ensure no debris or small material scraps accumulate around the blade housing or rollers.

6.2 Blade Care

- Replace the blade when cuts become inconsistent or ragged.
- Handle blades with care as they are sharp.
- Store spare blades in a safe container.

7. TROUBLESHOOTING

If you encounter issues with your LIKUT S41, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Machine not powering on	Power cable not connected; Power outlet issue	Check power connections; Try a different outlet
Connectivity issues (Bluetooth/USB)	Incorrect pairing; Cable fault; Software driver issue	Ensure Bluetooth is enabled and paired; Try a different USB port/cable; Reinstall software drivers
Poor cut quality or errors	Dull blade; Incorrect material settings; Material not properly adhered to mat	Replace blade; Adjust cut settings in software; Ensure material is flat and secure on mat
Software issues (e.g., crashes, unresponsive)	Outdated software; System incompatibility; Corrupted installation	Update software to the latest version; Check system requirements; Reinstall software

For further assistance, refer to the official LIKCUT support resources or contact customer service.

8. SPECIFICATIONS

Feature	Detail
Brand	LIKCUT
Model Number	S41
Active Surface Area	8.5 x 11 inches
Operation Mode	Automatic
Print Media Compatibility	Back print film, Card stock, Glossy film, Paper (plain)
Item Weight	8.58 pounds
Package Dimensions	16.5 x 9.53 x 7.87 inches
Included Components	1 Cutting Machine, 1 Adapter, 1 USB C Cable, Vinyl Bundle

9. WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the documentation included with your product or visit the official LIKCUT website. Customer service contact details can typically be found on the manufacturer's website.