

BE-5678

# Bea.utiful 4 Quart Slow Cooker with Hinged Locking Lid, Touch Display - Instruction Manual

Model: BE-5678

## 1. INTRODUCTION

This manual provides essential information for the safe and efficient operation of your Bea.utiful 4 Quart Slow Cooker. Designed for convenience and style, this appliance features a user-friendly touch display, multiple heat and timer settings, and a hinged locking lid. Please read all instructions carefully before first use and retain this manual for future reference.



Figure 1: Bea.utiful 4 Quart Slow Cooker, Wildflower Black model, with its glass lid and touch control panel.

## 2. IMPORTANT SAFETY INFORMATION

- Read all instructions before operating the slow cooker.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse the base unit, cord, or plug in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off

parts.

- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to 'OFF', then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- Avoid sudden temperature changes, such as adding refrigerated foods into a heated pot.

### 3. PRODUCT COMPONENTS

---

Your Bea.utiful Slow Cooker consists of several key components designed for ease of use and durability:

- **Main Housing:** Durable steel housing with a matte finish, featuring the touch display control panel.
- **Removable Cooking Pot:** 4-quart capacity, dishwasher-safe for easy cleaning.
- **Hinged Tempered Glass Lid:** Allows for easy access and monitoring of food, prevents spills during transport, and is dishwasher-safe.
- **Cool-Touch Handles:** Designed for safe carrying, even when the unit is hot.
- **Touch Display Control Panel:** User-friendly interface for setting heat and timer options.
- **Non-Skid Feet:** Provides stability on countertops.



Figure 2: The slow cooker with its hinged lid open, highlighting the cool-touch handles for portability.



Figure 3: The removable cooking pot lifted from the main housing, demonstrating its easy-to-clean design.

## 4. SETUP

---

1. **Unpacking:** Carefully remove all packaging materials and any promotional labels from the slow cooker.
2. **Initial Cleaning:** Before first use, wash the removable cooking pot and tempered glass lid in warm, soapy water. Rinse thoroughly and dry. Wipe the exterior of the main housing with a damp cloth. Do not immerse the main housing in water.
3. **Placement:** Place the slow cooker on a flat, stable, heat-resistant surface, away from walls or cabinets to allow for proper ventilation. Ensure the power cord is not dangling where it can be pulled or tripped over.
4. **Insert Pot:** Place the clean removable cooking pot into the main housing.

## 5. OPERATING INSTRUCTIONS

---

The Bea.utiful Slow Cooker features a touch-activated illuminated display for easy control.



Figure 4: Detailed view of the touch display with 'High', 'Low', 'Warm', timer, mode, and power buttons.

1. **Power On:** Plug the slow cooker into a standard electrical outlet. The power button will illuminate. Touch the power button to turn the unit on.
2. **Select Heat Setting:** Touch the 'Mode' button to cycle through the available heat settings: 'Low', 'High', and 'Warm'. The selected setting will illuminate.
3. **Set Timer:** Use the '+' and '-' buttons to adjust the cooking time. Available timer options are 4, 6, 8, or 10 hours. The selected time will be displayed.
4. **Start Cooking:** Once the desired heat setting and timer are selected, the slow cooker will begin cooking.
5. **Automatic Warm Function:** After the set cooking time has elapsed, the slow cooker will automatically switch to the 'Warm' setting for 2 hours. This ensures your food remains at an ideal serving temperature without overcooking.
6. **Power Off:** To turn off the slow cooker at any time, touch and hold the power button until the display turns off.

## Product Overview Video

Your browser does not support the video tag.

*Video 1: An official product overview demonstrating the features and functionality of a similar slow cooker model.*

## 6. COOKING TIPS

- **Preheating:** While not always necessary, preheating the slow cooker on 'High' for 20-30 minutes before adding ingredients can help reduce overall cooking time.
- **Liquid Levels:** Do not overfill the cooking pot. Ensure there is enough liquid to cover ingredients, but leave at least one inch of space from the rim to prevent boiling over.
- **Lid Placement:** Keep the lid on during cooking to maintain consistent temperature and moisture. Removing the lid frequently can extend cooking times.
- **Browning Meat:** For enhanced flavor, brown meat in a separate pan before adding it to the slow cooker.
- **Vegetables:** Root vegetables typically cook slower than meat. Place them at the bottom of the pot, closer to the heat source.

## 7. MAINTENANCE AND CLEANING

Proper cleaning and maintenance will ensure the longevity and performance of your slow cooker.

1. **Unplug and Cool:** Always unplug the slow cooker from the electrical outlet and allow it to cool completely before cleaning.
2. **Dishwasher Safe Parts:** The removable cooking pot and tempered glass lid are dishwasher safe. For best results, place them on the top rack.
3. **Hand Washing:** If hand washing, use warm, soapy water and a non-abrasive sponge or cloth. Rinse thoroughly.
4. **Main Housing:** Wipe the exterior of the main housing with a soft, damp cloth. Do not use abrasive cleaners or scouring pads. Never immerse the main housing in water or any other liquid.
5. **Storage:** Ensure all parts are completely dry before storing. Store the slow cooker in a cool, dry place.

## 8. TROUBLESHOOTING

- **Slow Cooker Not Turning On:** Ensure the power cord is securely plugged into a working electrical outlet. Check if the power button on the touch display has been pressed.
- **Food Not Cooking Properly:** Verify that the correct heat setting (Low or High) and cooking time have been selected. Ensure the lid is properly seated to retain heat. Avoid frequently lifting the lid during cooking.
- **Lid Not Sealing:** Check for any food debris or residue around the rim of the cooking pot or lid that might prevent a proper seal. Ensure the hinged lid is fully closed and locked for transport if applicable.
- **Food Sticking to Pot:** While the pot is designed for easy cleaning, some recipes may cause sticking. Ensure adequate liquid is used and consider lightly greasing the pot for certain dishes.

## 9. SPECIFICATIONS


Feature	Specification
Brand	Generic (Beautiful)
Model Number	BE-5678
Capacity	4 Quarts





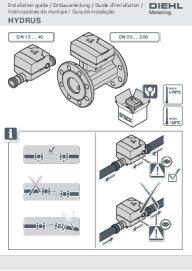
Feature	Specification
Color	Wildflower Black
Material	Glass, Steel
Product Dimensions	10"D x 12"W x 14.88"H
Wattage	300 watts
Item Weight	8 Pounds
Dishwasher Safe Parts	Removable Pot, Lid
Voltage	120 Volts
Control Method	Touch Display
Heat Settings	Low, High, Warm
Timer Settings	4, 6, 8, 10 Hours
Automatic Warm Function	2 Hours

## 10. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the documentation included with your purchase or contact the manufacturer directly. Keep your proof of purchase for any warranty claims.

### Related Documents - BE-5678

<div>Redmi AirDots 2 真无线蓝牙耳机 使用说明书</div> <div></div>	<div><a href="#">Redmi AirDots 2</a> - Xiaomi</div> <div>Redmi AirDots 2</div>
---	--

 <p>DST Setting Guide 5678 First, make sure it's in the Daylight Saving Mode.</p> <p>1. Press the [MODE] button to enter the Time Setting Mode.</p> <p>2. Press the [FWD] button to move the cursor to the DST setting.</p> <p>3. Press the [MODE] button to enter the DST setting mode.</p>	<p><a href="#">Casio G-Shock 5678 DST Setting Guide</a></p> <p>Learn how to set Daylight Saving Time (DST) on your Casio G-Shock 5678 watch. This guide explains the steps to adjust DST settings to AUTO, OFF, or ON.</p>
 <p>Qilive Deep fryer Q.5678</p> <ul style="list-style-type: none"><li>● Features</li><li>● Controls</li><li>● Filtration system</li><li>● Temperature</li><li>● Oil level</li><li>● Temperature</li><li>● Temperature</li></ul>	<p><a href="#">Qilive Deep Fryer User Manual and Safety Instructions</a></p> <p>Comprehensive guide to operating and maintaining your Qilive deep fryer. Includes safety precautions, technical specifications, operating instructions, and cleaning guidelines.</p>
 <p>vttech Instruction Manual Animal Rhymes Storytime™</p>	<p><a href="#">VTech Animal Rhymes Storytime Instruction Manual</a></p> <p>Instruction manual for the VTech Animal Rhymes Storytime toy, detailing features, setup, activities, and care instructions. Learn about animal sounds, songs, and melodies.</p>
 <p>ASSEMBLY INSTRUCTIONS INSTRUCCIONES DE MONTAJE</p> <p>COMPUTER DESK Escritorio</p>	<p><a href="#">Vera Computer Desk Assembly Instructions   ELI 5679 Manual</a></p> <p>Comprehensive assembly guide for the Vera Computer Desk (also referred to as Manaos Computer Desk, models ELW 5677, ELZ 5678, ELI 5679). This document provides detailed step-by-step instructions, a list of all parts and hardware, required tools, important safety recommendations, and the warranty policy. Follow these instructions carefully to ensure proper and safe assembly of your new computer desk.</p>
 <p>Installation guide / Installationsanleitung / Guide d'installation / Instrucciones de montaje / Guida all'installazione HYDRUS</p> <p>DIEHL HYDRUS</p>	<p><a href="#">HYDRUS Ultrasonic Water Meter Installation Guide</a></p> <p>Comprehensive installation guide for the DIEHL Metering HYDRUS ultrasonic water meter, detailing setup, technical specifications, wiring, and operational information.</p>