



[Manuals.plus](#) /

› [EYYTHUNG](#) /

› EYYTHUNG Floating Wall Mounted TV Stand (Model YC179) Instruction Manual

EYYTHUNG YC179

EYYTHUNG Floating Wall Mounted TV Stand Instruction Manual

Model: YC179

[Product Overview](#) [Safety Information](#) [Package Contents](#) [Specifications](#) [Setup & Assembly](#) [Operation](#) [Maintenance](#) [Troubleshooting](#) [Warranty & Support](#)

1. PRODUCT OVERVIEW

The EYYTHUNG Floating Wall Mounted TV Stand (Model YC179) is a modern media console designed to save floor space and enhance your living area. This 65-inch unit features a sleek, handle-free design with three storage compartments and integrated cable management holes, suitable for TVs up to 80 inches. Constructed from strengthened MDF, it offers a sturdy and stylish solution for organizing your entertainment devices.



Image 1.1: The EYYTHUNG Floating Wall Mounted TV Stand, Model YC179, in Natural Oak finish, mounted on a wall beneath a television.

2. SAFETY INFORMATION

Please read and understand all safety instructions before assembly and use. Failure to follow these instructions may result in injury or product damage.

- Always assemble and install the product according to the provided instructions.
- Ensure the product is securely attached to the wall to prevent tip-over. Use appropriate wall anchors for your wall type.
- Do not attempt to move the product once it is fully loaded with items to avoid potential injuries.
- Do not exceed the recommended weight limits for the top surface (22 lbs) and internal shelves (11 lbs each).
- Keep small parts and hardware away from children to prevent choking hazards.

3. PACKAGE CONTENTS

Verify that all components are present before beginning assembly. If any parts are missing or damaged, please contact customer support.

- Main TV Stand Panels (Top, Bottom, Sides, Dividers, Doors)
- Assembly Hardware (Screws, Dowels, Hinges, Wall Mounting Brackets)
- Instruction Manual

4. SPECIFICATIONS

Feature	Detail
Model Number	YC179
Dimensions (L x W x H)	65 x 11.8 x 11.8 inches
Material	Engineered Wood, Metal
Color	Natural Oak
Item Weight	45 pounds
Max TV Size Supported	Up to 80 inches
Top Load Capacity	22 lbs
Shelf Load Capacity (each)	11 lbs
Special Features	4 Cable Management Holes, Handle-free Doors, Wall-mounted Design
Care Instructions	Wipe with Dry Cloth

Elevate Your Living Space with Sleekness



Recommended Load

Top: 22lbs

Each shelf: 11lbs

Inner Dimensions

65" (W) x 11.81" (D) x 11.81" (H)

Image 4.1: Visual representation of the TV stand's dimensions (65" L x 11.8" W x 11.8" H) and recommended load capacities (Top: 22 lbs, Each shelf: 11 lbs).

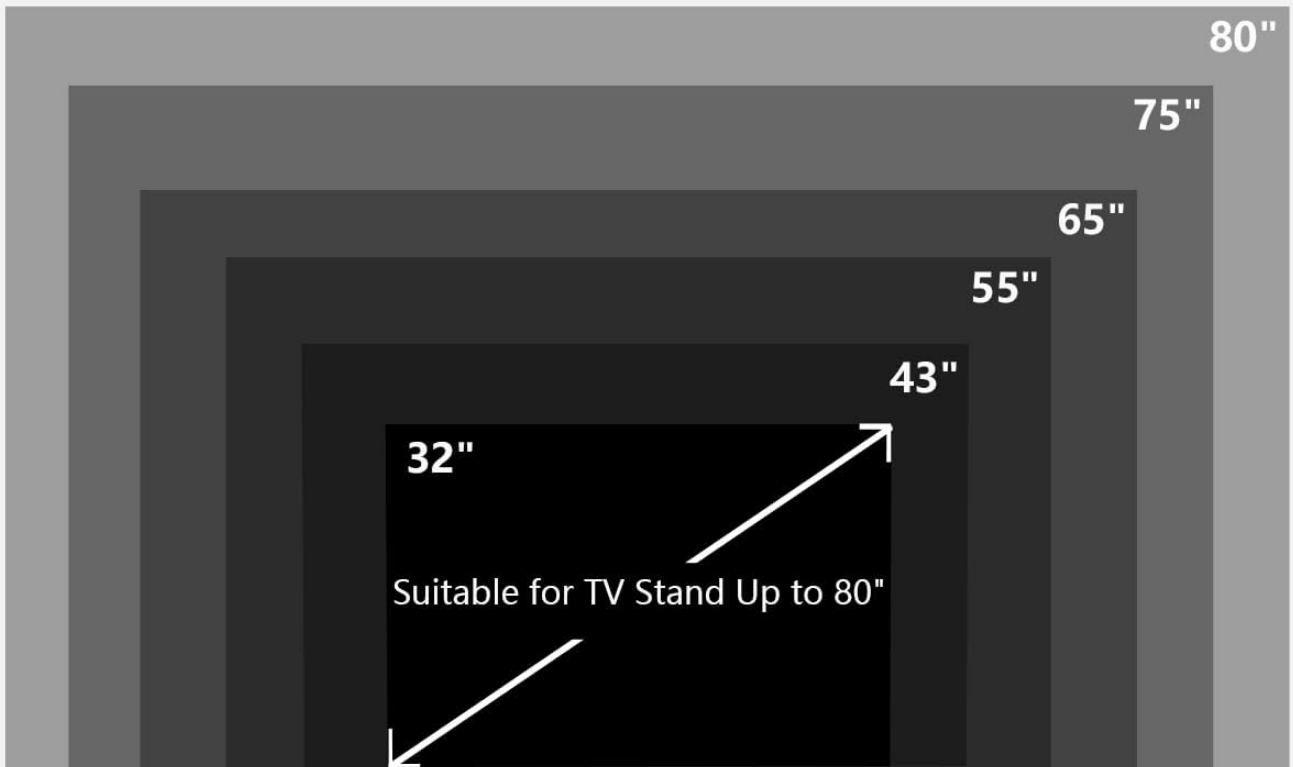


Image 4.2: Diagram illustrating the compatibility of the TV stand with various TV sizes, indicating suitability for TVs up to 80 inches.

5. SETUP & ASSEMBLY

The EYYTHUNG Floating Wall Mounted TV Stand requires assembly and secure wall mounting. Clear and detailed assembly instructions are provided in the package. Please follow them carefully.

5.1 Tools Required (Not Included)

- Phillips Head Screwdriver

- Drill (for wall mounting)
- Level
- Measuring Tape
- Pencil

5.2 Assembly Steps Overview

1. **Unpack and Identify Parts:** Lay out all panels and hardware. Compare with the parts list in the included manual.
2. **Assemble the Main Frame:** Follow the step-by-step diagrams to connect the top, bottom, and side panels using the provided hardware.
3. **Install Internal Dividers:** Secure the internal dividers to create the storage compartments.
4. **Attach Door Hinges:** Install hinges onto the doors and the main frame as instructed.
5. **Mount Doors:** Carefully attach the doors to the hinges, ensuring proper alignment and smooth operation.
6. **Prepare for Wall Mounting:** Determine the desired height and location on your wall. Use a level and pencil to mark the drilling points for the wall mounting brackets.
7. **Secure Wall Brackets:** Drill pilot holes and securely attach the wall mounting brackets to the wall using appropriate anchors for your wall type (e.g., drywall, concrete, studs).
8. **Mount the TV Stand:** With assistance, carefully lift the assembled TV stand and hook it onto the secured wall brackets. Ensure it is level and firmly seated.


Important: Always ensure the TV stand is securely mounted to wall studs or using heavy-duty wall anchors suitable for the weight of the unit and its contents. Professional installation is recommended if you are unsure about wall mounting procedures.



Wall-mounting Free Up Space Beneath



4 Cable Management Holes

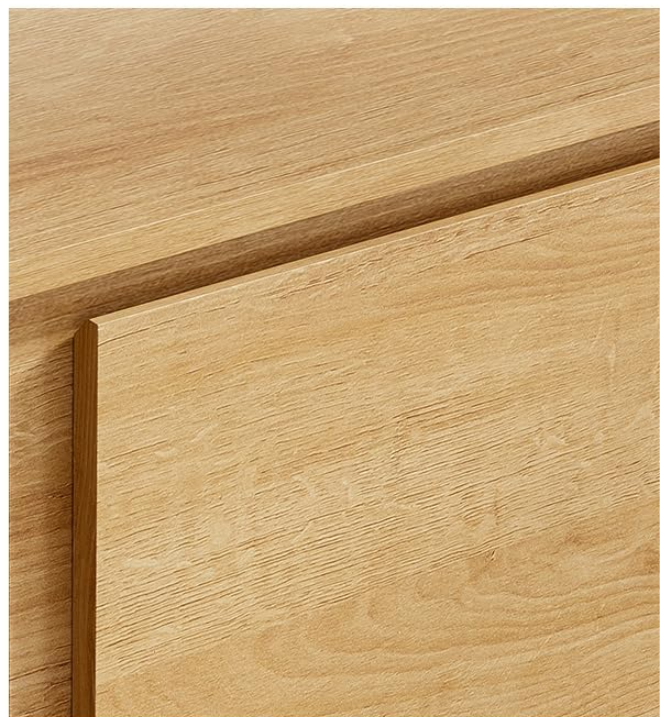

No Handle Design

Image 5.1: Close-up view highlighting the four cable management holes for organized wiring and the seamless, handle-free door design of the TV stand.

6. OPERATION

Once securely mounted, your EYYTHUNG Floating Wall Mounted TV Stand is ready for use.

- **Placing Your TV:** Position your television on the wall above the stand. Ensure the TV's weight does not rest on the stand itself, as this unit is designed to hold media devices and decor, not the TV directly.
- **Utilizing Storage:** Open the handle-free doors by gently pulling the cutout edges. Store media devices,

gaming consoles, remote controls, books, and other items within the three compartments.

- **Cable Management:** Route all power cords and signal cables through the integrated cable management holes located on the top and back panels to maintain a tidy appearance and prevent tangles.
- **Weight Distribution:** Distribute items evenly across the compartments and ensure not to exceed the maximum load capacities for the top surface (22 lbs) and individual shelves (11 lbs each).



Image 6.1: An interior view of one of the storage compartments with its handle-free door open, showing space for media devices or decorative items.

7. MAINTENANCE

Proper care will help maintain the appearance and longevity of your TV stand.

- **Cleaning:** Wipe the surfaces with a dry, soft cloth. Avoid using harsh chemicals, abrasive cleaners, or excessive moisture, as these can damage the finish.
- **Spills:** In case of spills, wipe immediately with a dry cloth to prevent staining or water damage. The material is waterproof, but prolonged exposure to liquids should be avoided.
- **Hardware Check:** Periodically check all screws and connections to ensure they remain tight. Retighten if necessary.
- **Sunlight Exposure:** Avoid prolonged direct sunlight exposure to prevent fading or discoloration of the wood finish.

8. TROUBLESHOOTING

If you encounter any issues with your TV stand, refer to the following common solutions:

- **Stand feels wobbly after mounting:** Ensure all wall mounting brackets are securely fastened to wall studs or appropriate heavy-duty anchors. Verify all internal assembly screws are tightened.
- **Doors do not align or close properly:** Check the hinge installation. Adjust hinge screws if necessary to align the doors. Ensure no items inside are obstructing the door's path.
- **Missing parts or damaged components:** Do not proceed with assembly. Contact EYYTHUNG customer support immediately for assistance and replacement parts.
- **Difficulty with assembly:** Review the detailed assembly instructions provided in your package. Ensure all steps are followed in order. If issues persist, contact customer support.

9. WARRANTY & SUPPORT

EYYTHUNG is committed to providing quality products. For any questions, concerns, or warranty claims, please contact our customer support team.

9.1 Customer Support

For assistance, please visit the EYYTHUNG store on Amazon or refer to the contact information provided with your purchase. Our team is available to help with assembly, missing parts, or product inquiries.

EYYTHUNG-US

Seller on Amazon.com

9.2 Protection Plans

Extended protection plans may be available for your product. Please check your purchase details or Amazon product page for options such as 2-Year or 3-Year Protection Plans, or the Complete Protect plan.