

[Manuals.plus](#) /

› [KIKETECH](#) /

› KIKETECH T18 Stick Vacuum Cleaner User Manual

KIKETECH T18

KIKETECH T18 Stick Vacuum Cleaner User Manual

Model: T18

1. IMPORTANT SAFETY INSTRUCTIONS

When using an electrical appliance, basic precautions should always be followed, including the following:

- Read all instructions before using this vacuum cleaner.
- To reduce the risk of electric shock, do not use outdoors or on wet surfaces.
- Do not allow to be used as a toy. Close attention is necessary when used by or near children.
- Use only as described in this manual. Use only manufacturer's recommended attachments.
- Do not use with a damaged cord or plug. If the appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, return it to a service center.
- Do not pull or carry by cord, use cord as a handle, close a door on cord, or pull cord around sharp edges or corners. Do not run appliance over cord. Keep cord away from heated surfaces.
- Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord.
- Do not handle plug or appliance with wet hands.
- Do not put any object into openings. Do not use with any opening blocked; keep free of dust, lint, hair, and anything that may reduce airflow.
- Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts.
- Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
- Do not use to pick up flammable or combustible liquids, such as gasoline, or use in areas where they may be present.
- Do not pick up toxic material (e.g., chlorine bleach, ammonia, drain cleaner).
- Do not use without dust cup and/or filters in place.
- Turn off all controls before unplugging.
- Use extra care when cleaning on stairs.
- Store your appliance indoors. Put the appliance away after use to prevent trip hazards.

2. PACKAGE CONTENTS

Please check the contents of the package to ensure all parts are present and undamaged:

- KIKETECH T18 Main Motor Unit (Handheld Vacuum)
- Extension Tube (Wand)
- Floor Brush Head
- Crevice Tool
- Brush Nozzle
- HEPA Filter (pre-installed)
- User Manual

3. PRODUCT OVERVIEW

The KIKETECH T18 is a versatile 2-in-1 corded stick vacuum cleaner designed for efficient cleaning of various surfaces. It can be used as a full-size stick vacuum for floors or easily converted into a handheld vacuum for smaller tasks and hard-to-reach areas.



Image: The KIKETECH T18 vacuum demonstrating its dual functionality as both a stick vacuum for floor cleaning and a compact handheld vacuum for elevated or confined spaces.

Key Components:

- **Main Motor Unit:** Contains the motor, dust cup, and HEPA filter. This is the core handheld unit.
- **Dust Cup:** Transparent container for collecting dust and debris.
- **HEPA Filter:** High-efficiency particulate air filter for trapping fine dust and allergens.
- **Power Switch:** On/Off button.
- **Cord:** 22 ft power cord for extended reach.
- **Extension Tube:** Connects the main unit to the floor brush for stick vacuum mode.
- **Floor Brush Head:** Designed for cleaning hard floors and carpets.
- **Accessory Kit:** Includes crevice tool and brush nozzle for specialized cleaning.

4. ASSEMBLY INSTRUCTIONS

The KIKETECH T18 can be assembled in two configurations: as a stick vacuum or as a handheld vacuum.

4.1. Assembling the Stick Vacuum

1. **Attach the Floor Brush Head:** Align the floor brush head with the bottom end of the extension tube. Push firmly until it clicks into place.
2. **Attach the Main Motor Unit:** Align the main motor unit (handheld vacuum) with the top end of the extension tube. Push firmly until it clicks into place.
3. **Cord Management:** Ensure the 22 ft power cord is untangled and ready for use.

4.2. Assembling the Handheld Vacuum

1. **Select Accessory:** Choose either the crevice tool or the brush nozzle based on your cleaning needs.
2. **Attach Accessory:** Insert the chosen accessory directly into the suction opening of the main motor unit. Push firmly until secure.

TWO MACHINES IN ONE

Stick vacuum, hand vacuum



Image: The KIKETECH T18 vacuum fully assembled in its stick configuration, ready for floor cleaning.

5. OPERATING INSTRUCTIONS

5.1. Powering On/Off

1. **Plug In:** Insert the power plug into a suitable electrical outlet.
2. **Turn On:** Press the power switch located on the main motor unit to turn the vacuum cleaner on.
3. **Turn Off:** Press the power switch again to turn the vacuum cleaner off.
4. **Unplug:** Always unplug the vacuum cleaner from the power outlet after use and before performing any maintenance.

5.2. Using as a Stick Vacuum

- Ensure the vacuum is assembled in stick mode with the extension tube and floor brush head.
- Plug in the power cord.

- Turn on the vacuum.
- Guide the floor brush head over the surface to be cleaned. The vacuum is suitable for hard floors and low-pile carpets.
- Move the vacuum slowly to allow the powerful suction to pick up debris effectively.

5.3. Using as a Handheld Vacuum

- Ensure the vacuum is assembled in handheld mode with the desired accessory (crevice tool or brush nozzle).
- Plug in the power cord.
- Turn on the vacuum.
- Use the handheld unit to clean upholstery, car interiors, stairs, shelves, or other hard-to-reach areas.

6. MAINTENANCE AND CLEANING

Regular maintenance ensures optimal performance and extends the life of your vacuum cleaner. Always unplug the appliance before cleaning or performing any maintenance.

6.1. Emptying the Dust Cup

1. **Unplug:** Ensure the vacuum cleaner is unplugged from the power outlet.
2. **Detach Dust Cup:** Locate the dust cup release button or latch on the main motor unit. Press it to detach the dust cup.
3. **Empty Contents:** Hold the dust cup over a trash bin and open the bottom lid (if applicable) or twist to separate the filter assembly. Empty all collected debris.
4. **Reattach:** Close the dust cup lid and reattach the dust cup to the main motor unit, ensuring it clicks securely into place.

It is recommended to empty the dust cup after each use or when the MAX fill line is reached.

6.2. Cleaning the HEPA Filter

The HEPA filter should be cleaned regularly to maintain suction power. Do not wash the HEPA filter with water unless specified by the manufacturer.

1. **Unplug and Detach:** Unplug the vacuum and detach the dust cup as described above.
2. **Remove Filter:** Carefully remove the HEPA filter from the dust cup assembly.
3. **Clean Filter:** Tap the filter gently over a trash bin to dislodge dust and debris. You may use a soft brush to remove stubborn particles.
4. **Reinstall:** Place the clean HEPA filter back into the dust cup assembly, ensuring it is correctly seated.
5. **Reattach Dust Cup:** Reattach the dust cup to the main motor unit.

Replace the HEPA filter every 3-6 months, or as needed, depending on usage.

6.3. Cleaning the Exterior

Wipe the exterior surfaces of the vacuum cleaner with a soft, damp cloth. Do not use harsh cleaners or solvents.

7. TROUBLESHOOTING

Before performing any troubleshooting, ensure the vacuum cleaner is unplugged.

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Vacuum does not turn on.	Not plugged in. Power outlet not working. Power switch is off.	Ensure the power cord is securely plugged into an electrical outlet. Test the outlet with another appliance. Press the power switch to the "ON" position.
Loss of suction.	Dust cup is full. HEPA filter is clogged. Hose/nozzle is blocked.	Empty the dust cup. Clean or replace the HEPA filter. Check the floor brush head, extension tube, and main unit's suction opening for blockages and remove them.
Unusual noise.	Blockage in the air path. Filter not properly installed.	Check for and remove any blockages in the floor brush, extension tube, or main unit. Ensure the HEPA filter and dust cup are correctly assembled.

8. SPECIFICATIONS

Brand	KIKETECH
Model Name	T18
Special Feature	HEPA Filter
Filter Type	HEPA Filter
Included Components	Accessory Kit (Crevice Tool, Brush Nozzle)
Is Cordless?	No (Corded Electric)
Capacity	1 Liters
Wattage	600 watts
Form Factor	Stick (2-in-1 Handheld)
Color	Dark Blue
Product Dimensions	16.93"L x 9.85"W x 4.33"H
Item Weight	4.85 pounds
Batteries Required	No
Surface Recommendation	Carpet, Hard Floor
Power Source	Corded Electric
Cord Length	22 Ft

9. WARRANTY AND SUPPORT

KIKETECH products are manufactured to high-quality standards. For any questions, technical support, or warranty claims, please contact KIKETECH customer service.

Please refer to your purchase documentation or the KIKETECH official website for specific warranty terms and contact information.

Manufacturer: Suzhou Atbest Electrical Technology co.,ltd

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0FSZRHG67>

More documents and user manuals: <https://manuals.plus/>