



[Manuals.plus](#) /

› [BOOX](#) /

› BOOX InkSense Plus Active Capacitive Stylus User Manual

BOOX InkSense Plus

BOOX InkSense Plus Active Capacitive Stylus User Manual

For BOOX Go Color 7 Gen2 and BOOX Go 7

1. INTRODUCTION

The BOOX InkSense Plus Active Capacitive Stylus is designed to enhance your interaction with compatible BOOX e-readers, offering precise writing, drawing, and navigation capabilities. This manual provides essential information for its proper use and maintenance.

Package Contents

- BOOX InkSense Plus Stylus
- 3 Replacement Nibs
- USB-C Charging Cable (not explicitly mentioned but implied by Type-C)
- Nib Replacement Tool



Image: BOOX InkSense Plus Stylus and its included accessories, neatly arranged in the product packaging.

2. SETUP AND CHARGING

Charging the Stylus

The BOOX InkSense Plus Stylus features a USB-C port for convenient charging. Connect the provided USB-C cable to the stylus and a compatible power source (e.g., computer USB port, wall adapter). A full charge ensures optimal performance.



Image: Close-up view of the BOOX InkSense Plus Stylus, highlighting its USB-C charging port for easy power replenishment.

Replacing Nibs

To maintain writing precision, replace the nib when it shows signs of wear. Use the included nib replacement tool to gently pull out the old nib and insert a new one.



Image: Detailed view of the BOOX InkSense Plus Stylus nib and the specialized tool used for its replacement.

Your browser does not support the video tag.

Video: Demonstration of stylus usage and how to replace the nib for continued optimal performance.

3. OPERATING THE STYLUS

Basic Usage

The BOOX InkSense Plus Stylus is designed for intuitive use with your compatible BOOX e-reader. Simply touch the stylus tip to the screen to write, draw, or navigate menus. The stylus offers pressure sensitivity for varied line thickness and shading in drawing applications.



Image: The BOOX InkSense Plus Stylus being used to write on a compatible BOOX e-reader, demonstrating its natural writing feel.

Compatibility

This stylus is specifically designed for use with the following BOOX devices:

- BOOX Go Color 7 Gen2
- BOOX Go 7

Ensure your device is updated to the latest firmware for optimal stylus performance.

4. MAINTENANCE

To ensure the longevity and performance of your BOOX InkSense Plus Stylus:

- Keep the stylus clean by wiping it with a soft, dry cloth.
- Avoid exposing the stylus to extreme temperatures or direct sunlight.
- Store the stylus in a safe place to prevent damage to the nib.
- Regularly check the nib for wear and replace it as needed.

5. TROUBLESHOOTING

Stylus Not Responding

- **Check Battery:** Ensure the stylus is sufficiently charged. Connect it to a power source using the USB-C cable.
- **Check Compatibility:** Verify that your BOOX device is listed as compatible (Go Color 7 Gen2, Go 7).
- **Restart Device:** Try restarting your BOOX e-reader.
- **Replace Nib:** A worn or damaged nib can affect performance. Replace it with a new one.

Inaccurate Input

- **Clean Screen:** Ensure your e-reader screen is clean and free of smudges or debris.
- **Check Nib:** A loose or damaged nib can cause inaccurate input. Ensure it is securely seated or replace it.
- **Recalibrate (if applicable):** Some devices may offer stylus calibration options in their settings. Consult your e-reader's manual.

6. SPECIFICATIONS

Feature	Detail
Model Number	InkSense Plus
Brand	BOOX
Material	Plastic
Color	Black
Compatible Devices	BOOX Go Color 7 Gen2, BOOX Go 7
Battery	1 C battery (included)
Connectivity	Type-C (for charging)

7. WARRANTY AND SUPPORT

Warranty Information

The BOOX InkSense Plus Stylus comes with a **1-year warranty** from the date of purchase. This warranty covers manufacturing defects under normal use. Please retain your proof of purchase for warranty claims.

Customer Support

For further assistance, technical support, or warranty inquiries, please visit the official BOOX website or contact their customer service department. You can often find FAQs, troubleshooting guides, and contact information on the manufacturer's support pages.

Official BOOX Website: [BOOX Store on Amazon.fr](#) (Please refer to your regional BOOX website for local support.)

