

[Manuals.plus](#) /

> [Alizen](#) /

> Alizen Replacement LG TV Magic Remote Instruction Manual for Models MR25-MR20

Alizen forLG MR25-MR20

Alizen Replacement LG TV Magic Remote Instruction Manual

Model: forLG MR25-MR20

INTRODUCTION

This Alizen Replacement LG TV Magic Remote is designed to provide comprehensive functionality for compatible LG Smart TVs manufactured between 2018 and 2025. It offers advanced features such as voice control, an intuitive pointer, and scroll capabilities, serving as a direct replacement for various original LG Magic Remote models.

SETUP AND PAIRING

Follow these steps to set up and pair your Alizen Replacement LG TV Magic Remote with your LG Smart TV:

1. **Install Batteries:** Open the battery compartment on the back of the remote and insert two (2) AAA batteries, ensuring correct polarity.
2. **Power On TV:** Turn on your LG Smart TV.
3. **Initial Pairing:** Press and hold the **Home** button and the **Back** button simultaneously for 5-7 seconds.
4. **Complete Pairing:** Aim the remote at the TV and press the middle **Wheel (OK)** button to finalize the pairing process.
5. **Voice and Pointer Activation:** After initial pairing, the remote should automatically register its voice and pointer functions. If not, ensure the remote is aimed at the TV and press the voice button.

If pairing fails, repeat Step 3 and 4. For optimal performance of voice and pointer functions, ensure the remote is properly paired.

Compatible with **LG** smart TV series
from 2025-2018

OLED TV

NanoCell TVs

QNED MiniLED TVs

4K Ultra HD TVs

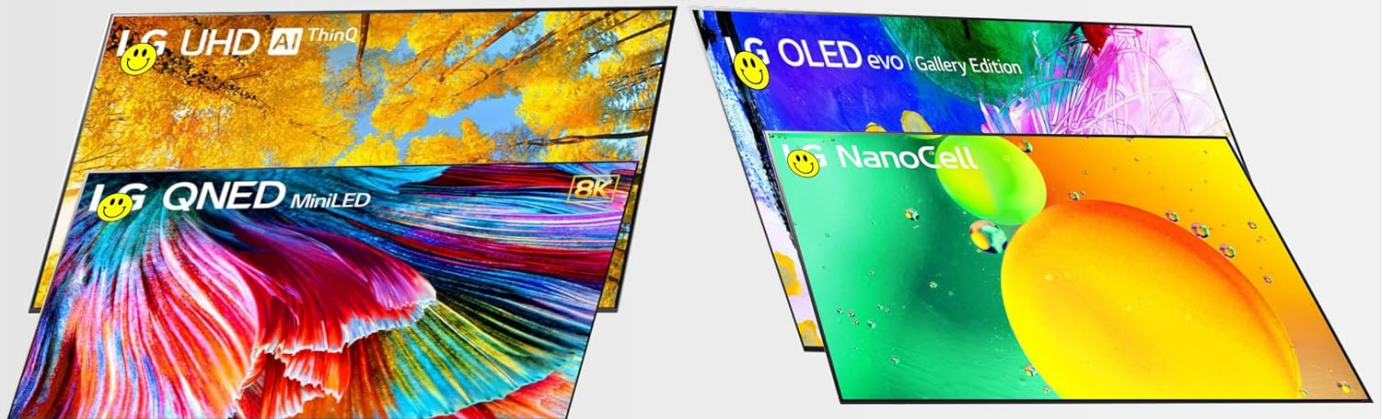 


Figure 1: Visual guide for pairing the remote by holding Home and Back buttons, then pressing the Wheel (OK) button.

Smooth Pointer and fast Wheel

Smooth Pointer and wheel make your TV greater again



Figure 2: Illustration of pressing the microphone button to activate voice control and pointer functionality after pairing.

OPERATING INSTRUCTIONS

The Alizen Replacement LG TV Magic Remote offers several advanced operating modes:

- **Intelligent Voice Control:** Once paired, press the dedicated microphone button to activate voice commands. Speak clearly into the remote to search for content, change settings, or control your TV. This feature is compatible with LG Smart TVs that support voice control from 2019-2025.
- **Pointer & Cursor Function:** Move the remote to control an on-screen cursor, allowing for intuitive navigation, selection, and scrolling. This function provides a mouse-like experience for interacting with your TV's interface.
- **Dedicated Hot-Keys:** The remote includes six dedicated shortcut buttons for quick access to popular streaming services and LG Channels.

Support **LG** Voice and Pointer

Need Register with LG TV

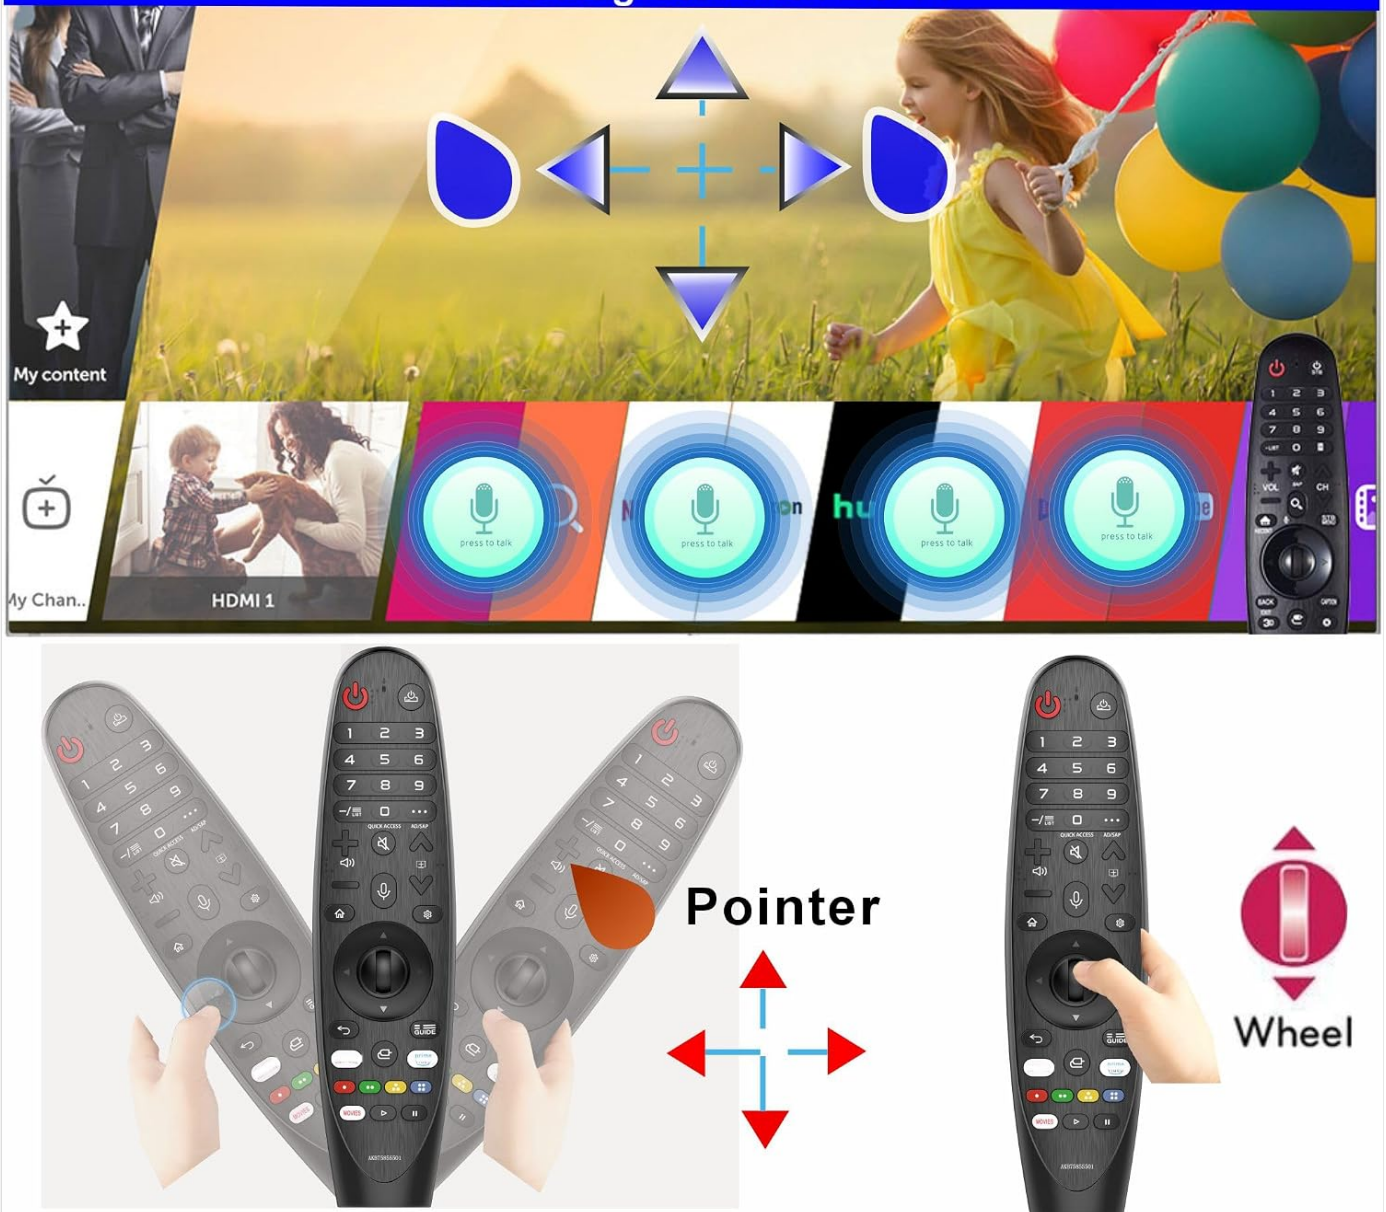 


Figure 3: The remote's voice and pointer functions in action, showing on-screen cursor and voice command interface.

Support **LG** Voice Function Alexa Voice Function



Need Register with LG TV

Figure 4: Detail of the remote's microphone button, indicating support for LG Voice and Alexa Voice functions.

2 Shortcut Buttons

Easier to watch your favorite video

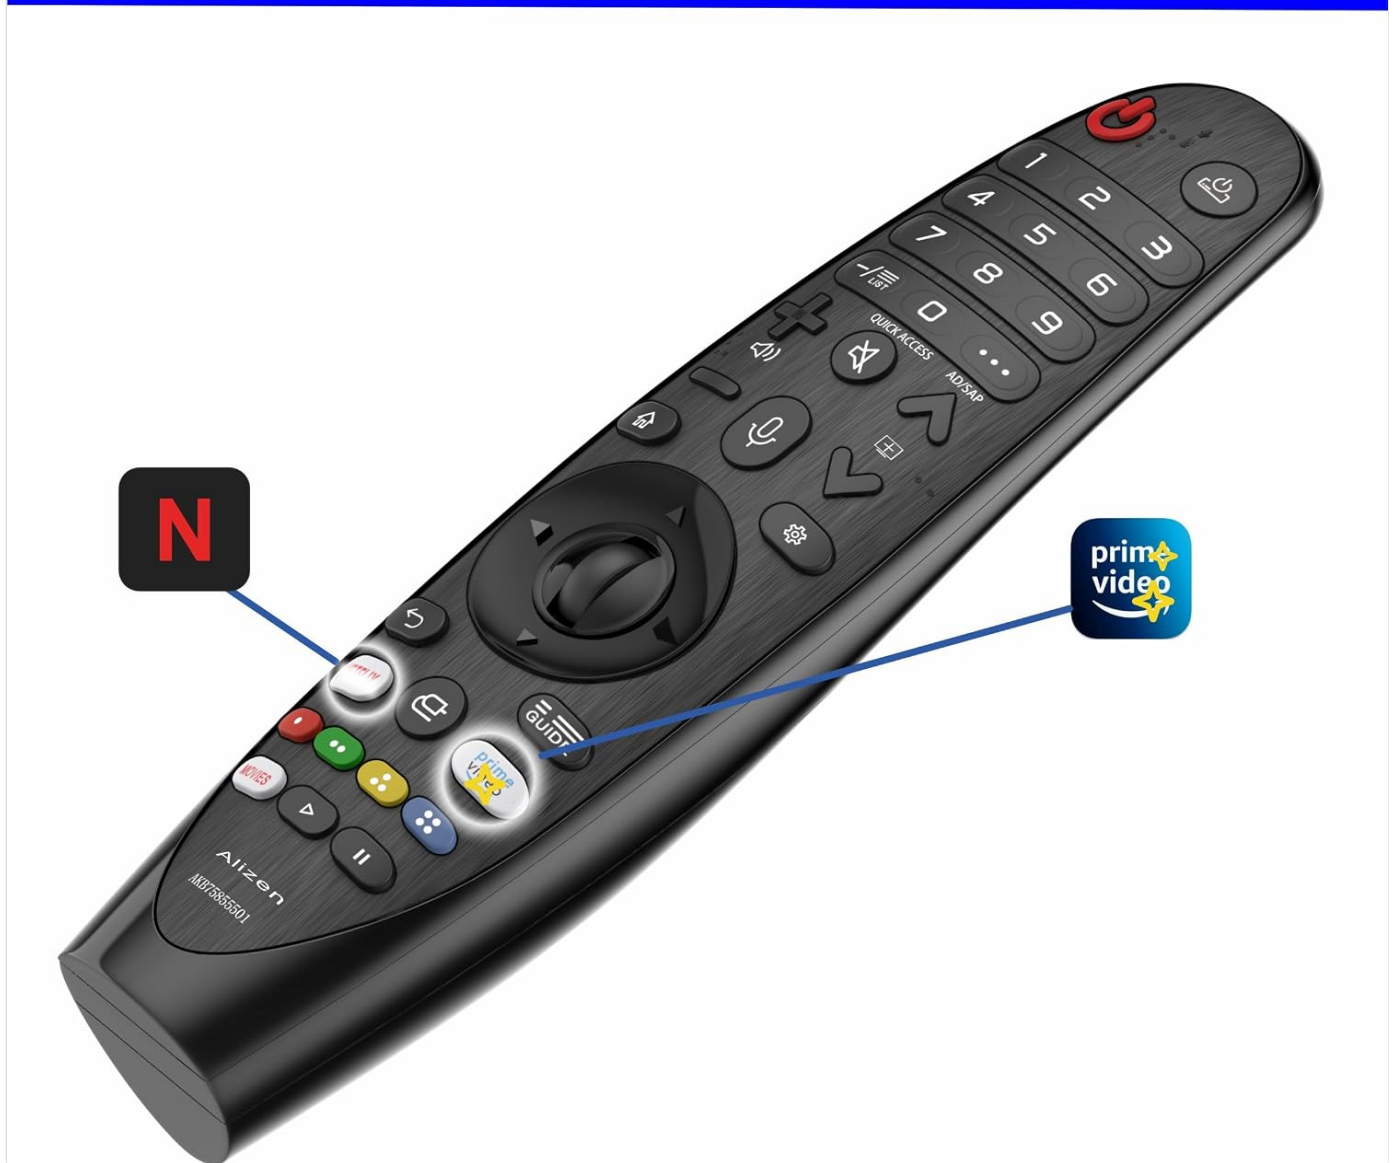 


Figure 5: The remote features two shortcut buttons for direct access to popular video streaming services.

COMPATIBILITY

This remote is broadly compatible with LG Smart TVs and Magic Remote models from 2018 to 2025.

Compatible LG TV Series:

- OLED TVs
- NanoCell TVs
- QNED MiniLED TVs
- 4K Ultra HD TVs

Compatible LG Magic Remote Models (including but not limited to):

- MR24GN/GA
- MR23GN/GA
- MR22GA/GN
- MR21GA/GC

- MR20GA
- MR19BA
- AKB75855501

Important Notice:

- For TV models that do not support voice control or were released before 2018, the voice search functionality may not work.
- This remote is designed exclusively for LG TVs and is not compatible with LG soundbars or external boxes.



Figure 6: A visual comparison of compatible LG Magic Remote models (e.g., MR24GN, MR23GN, MR22GA, MR21GA, MR20GA, MR19BA, MR18BA, MR650A) and incompatible models (e.g., MR500, MR600).



Figure 7: The remote is universally compatible with LG OLED, NanoCell, QNED MiniLED, and 4K Ultra HD TVs from 2018 to 2025.

MAINTENANCE

To ensure the longevity and optimal performance of your remote control:

- **Battery Replacement:** Replace the two (2) AAA batteries when the remote's response becomes sluggish or it stops functioning. Always use fresh batteries and dispose of old ones responsibly.
- **Cleaning:** Wipe the remote with a soft, dry cloth. Avoid using liquid cleaners or abrasive materials, as these can damage the surface or internal components.
- **Storage:** Store the remote in a cool, dry place away from direct sunlight and extreme temperatures.
- **Durability:** The remote is constructed from durable ABS materials, designed to withstand regular use.

TROUBLESHOOTING

If you encounter issues with your remote, refer to the following troubleshooting tips:

- **Remote Not Responding:**
 - Check if the batteries are correctly inserted and have sufficient charge. Replace them if necessary.
 - Ensure there are no obstructions between the remote and the TV.
- **Pairing Failure:** If the remote does not pair with the TV, repeat the pairing steps outlined in the "Setup and Pairing" section. Ensure you hold the Home and Back buttons for the specified duration and press the Wheel (OK) button while aiming at the TV.
- **Voice or Pointer Function Not Working:**
 - Confirm that the remote is successfully paired with the TV.
 - Verify that your LG TV model supports voice control and pointer functions (compatible with 2019-2025 LG Smart TVs). Older models or those without these features will not support them.
 - Ensure the remote's firmware is up to date if your TV prompts for an update.

- **Specific Buttons Not Working:** If only certain buttons are unresponsive, try re-pairing the remote. If the issue persists, contact customer support.

SPECIFICATIONS

Feature	Detail
Model Number	forLG MR25-MR20
Brand	Alizen
Product Dimensions	2 x 1 x 6 inches
Item Weight	3.84 ounces
Batteries Required	2 AAA batteries (not included)
Compatible Devices	LG TV 2018-2025
Special Feature	Universal, Voice Control, Pointer Function
Color	Black
Manufacturer	XINGYE

WARRANTY AND SUPPORT

2-Year Full Warranty: This product is covered by a 2-year full warranty from the date of purchase, ensuring protection against manufacturing defects and malfunctions under normal use.

Product Support: For any product-related inquiries, technical assistance, or warranty claims, please refer to your order history. Locate your order, click on "View order details," and then select "Ask Product Question" to contact the seller directly.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0FT26GKRM>

More documents and user manuals: <https://manuals.plus/>