

[Manuals.plus](#) /

› [HYSEYY](#) /

› HYSEYY HY-1324 Double Rods Rolling Clothing Rack Instruction Manual

## HYSEYY HY-1324

# HYSEYY HY-1324 Double Rods Rolling Clothing Rack Instruction Manual

Model: HY-1324 | Brand: HYSEYY

## INTRODUCTION

Thank you for choosing the HYSEYY HY-1324 Double Rods Rolling Clothing Rack. This manual provides essential information for the safe assembly, operation, and maintenance of your new garment rack. Please read these instructions carefully before use and retain them for future reference.

## SAFETY INFORMATION

- Ensure all parts are present and undamaged before assembly. Do not use if any parts are missing or broken.
- Assemble the rack on a soft, clean surface to prevent scratches.
- Do not exceed the maximum load capacity of 240 pounds (180 lbs on top double bars, 60 lbs on bottom). Overloading can cause instability and damage.
- Distribute weight evenly across the rods to maintain balance.
- Always lock the wheels when the rack is in a stationary position to prevent unintended movement.
- Keep children and pets away from the rack during assembly and when moving it.

## PACKING LIST

Please verify that all components listed below are included in your package:



*Image: Detailed diagram of all components for assembly, including lockable wheels, common wheels, screws, washers, wrench, and various frame bars.*

- A:** Lockable Wheels (x2)
- B:** Common Wheels (x2)
- C:** Screws (x8+1 spare)
- D:** Washers (x4+1 spare)
- E:** Washers (x4+1 spare)
- F:** Wrench (x1)
- G:** Base Frame Sides (x2)
- H:** Upper Horizontal Bars (x2)
- I:** Upper Side T-Bars (x2)
- J:** Lower Side T-Bars (x2)
- K:** Bottom Support Bars (x2)
- L:** Bottom Support Bars (x2)
- M:** Vertical Support Poles (x4)
- N:** Vertical Support Poles (x4)
- O:** Side Extension Rods (x2)

## SETUP & ASSEMBLY


---

The HYSEYY HY-1324 garment rack features a snap-together design for quick and easy assembly, typically taking around 8 minutes. No complex tools are required beyond the included wrench.

### Assembly Steps:

1. **Prepare the Base:** Connect the Bottom Support Bars (K and L) to the Base Frame Sides (G) using the provided screws (C) and washers (D, E). Ensure a snug fit.
2. **Attach Wheels:** Insert the Lockable Wheels (A) and Common Wheels (B) into the designated holes at the bottom of the base frame. Use the wrench (F) to tighten them securely.
3. **Install Vertical Supports:** Insert the lower Vertical Support Poles (M) into the base frame. These poles feature a snap-button mechanism for easy connection.
4. **Assemble Lower Rods:** Connect the Lower Side T-Bars (J) with one of the Upper Horizontal Bars (H) to form the lower hanging section.

5. **Assemble Upper Rods:** Connect the Upper Side T-Bars (I) with the remaining Upper Horizontal Bar (H) to form the upper hanging section.
6. **Attach Hanging Sections:** Insert the assembled lower hanging section onto the lower Vertical Support Poles (M). Then, extend the Vertical Support Poles (N) and insert them into the lower hanging section, followed by attaching the upper hanging section. Ensure all snap-buttons are engaged.
7. **Secure Connections:** Use the remaining screws (C) and washers (D, E) to secure the connections between the vertical poles and the horizontal bars. Tighten all screws with the wrench (F) to ensure stability.
8. **Final Adjustment:** Ensure the rack is level and vertical. You can slightly loosen the screws, adjust as needed, then re-tighten.

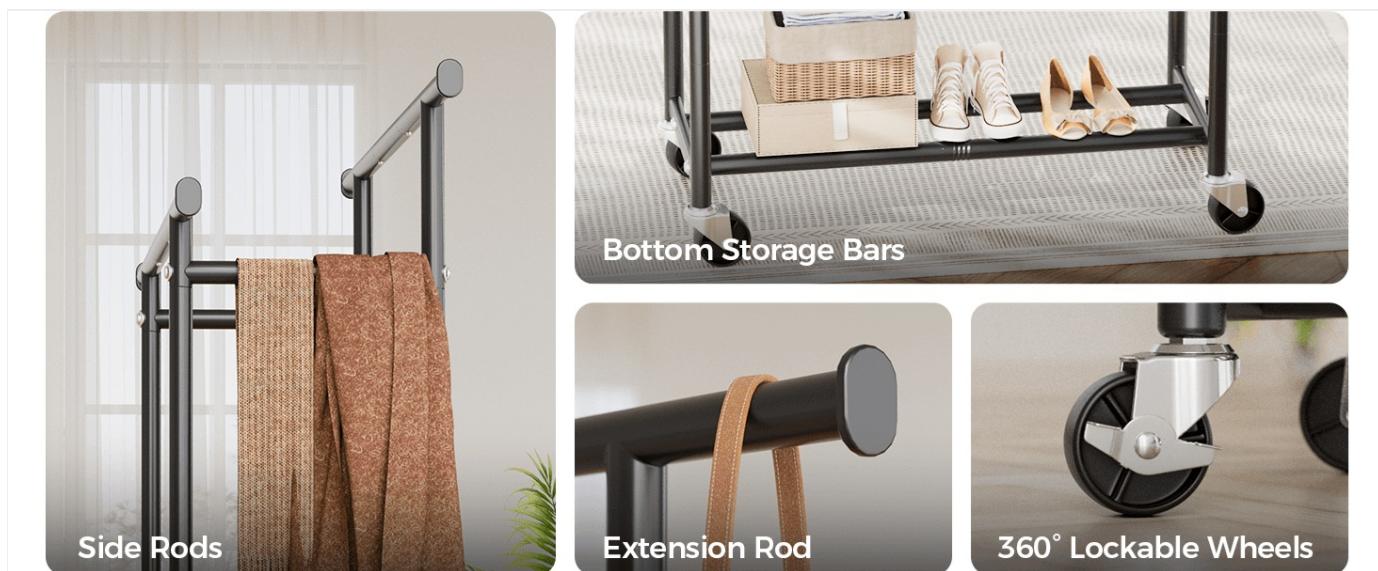

*Image: Snap-on Installation for tool-free and quick assembly.*

### Installation Video Guide:

Your browser does not support the video tag.

*Video: Official HYSEYY installation guide demonstrating the assembly process for the double clothes hanger.*

## OPERATING INSTRUCTIONS

### Hanging Clothes:

Utilize the dual-bar design to maximize storage. The upper rod is ideal for longer garments like dresses, coats, and pants, preventing them from dragging on the floor. The lower rod is suitable for shorter items such as shirts, jackets, and skirts.

# HYSEYY

## Garment Rack Max Load 240 LBS

Large Capacity ↗

Sturdy Design ↗

Easy to Assemble ↗



*Image: The double rods allow for organized hanging of various clothing types, maximizing storage capacity.*

### Using the Bottom Shelf:

The bottom bars provide a convenient shelf for storing shoes, storage bins, suitcases, or decorative boxes. This helps keep your space tidy and organized.



*Image: The bottom shelf provides additional storage for shoes, boxes, or other items.*

### Mobility and Locking Wheels:

The rack is equipped with four 360° swivel casters for smooth and easy movement across various floor types, including carpet and hard floors. Two of the wheels are lockable to secure the rack in place.

- To move the rack: Ensure the wheel locks are disengaged.
- To secure the rack: Push down the levers on the two lockable wheels until they click into place.

# Quick Assembly

Save 80% of the Assembly Time



**Ours**

**Snap-on Installation**



★ Tool-Free Installation



★ Install < 15 Mins

**Others**

**Screw Mounting**



⚠ Tool-Assisted Installation



⚠ Install > 40 Mins

*Image: The 360° swivel casters with lockable functionality ensure both mobility and stability.*

## MAINTENANCE

- **Cleaning:** Wipe down the carbon steel frame with a soft, damp cloth. Avoid abrasive cleaners or harsh chemicals that could damage the finish.
- **Inspection:** Periodically check all screws and connections to ensure they remain tight. Re-tighten if necessary to maintain stability.
- **Wheel Care:** Keep the wheels free of debris (hair, lint, etc.) to ensure smooth rolling.

## TROUBLESHOOTING

- **Rack is Wobbly:**
  - Ensure all screws are fully tightened.
  - Verify that the vertical poles are correctly inserted and their snap-buttons are engaged.
  - Check that the weight on the rack is evenly distributed and not exceeding the maximum load capacity.
- **Wheels Not Rolling Smoothly:**
  - Check if the wheel locks are engaged. Disengage them if necessary.
  - Remove any hair or debris that may be caught in the wheels.
  - Ensure the wheels are securely attached to the frame.
- **Difficulty Assembling:**
  - Refer to the step-by-step assembly instructions and the installation video.
  - Ensure you are using the correct parts for each step as indicated in the packing list.

## SPECIFICATIONS

| Feature      | Detail               |
|--------------|----------------------|
| Brand        | HYSEYY               |
| Model Number | HY-1324-Clothes Rack |
| Material     | Carbon Steel         |

|                                |                                                    |
|--------------------------------|----------------------------------------------------|
| Color                          | Black                                              |
| Product Dimensions (L x W x H) | 39" x 16.5" x 60.23"                               |
| Load Capacity                  | 240 Pounds (180 lbs on top bars, 60 lbs on bottom) |
| Installation Type              | Free Standing                                      |
| Special Features               | Lockable Wheels, Portable, Space Saver             |
| Assembly Required              | Yes (Approx. 8 minutes)                            |



# Extra-Large Capacity Clothing Rack

Fits the Whole Family's Hanging Needs.

- 

Coats  
30 pcs
- 

Jackets  
30 pcs
- 

Dresses  
60 pcs
- 

T-shirts  
150 pcs

Image: Product dimensions for the HYSEYY HY-1324 Double Rods Rolling Clothing Rack.

## WARRANTY AND SUPPORT

HYSEYY is committed to customer satisfaction. If you encounter any issues with your HY-1324 Double Rods Rolling Clothing Rack, please contact our dedicated customer support team. We offer 24/7 support and aim to respond to all inquiries within 24 hours.

For assistance, please visit the [HYSEYY Store on Amazon](#) or contact us directly through the platform.

### ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

**Question**

Example: How do I reset this device or fix this error?

**Details**

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question