

URBANMAX C1

URBANMAX C1 Electric Scooter User Manual

Model: C1

1. IMPORTANT SAFETY INFORMATION

Please read this manual thoroughly before operating your URBANMAX C1 Electric Scooter. Failure to follow instructions and safety warnings may result in serious injury or property damage.

- **Wear a Helmet:** Always wear an approved helmet and other protective gear (knee pads, elbow pads) when riding.
- **Local Regulations:** Be aware of and comply with all local laws and regulations regarding electric scooter usage.
- **Weight Limit:** Do not exceed the maximum weight limit of 265 pounds (120 kg).
- **Age Restriction:** This scooter is suitable for individuals 12 years old and above.
- **Weather Conditions:** Avoid riding in wet conditions, heavy rain, or on icy surfaces.
- **Braking:** Familiarize yourself with the front disc brake and rear drum brake for effective stopping.
- **Visibility:** Ensure the headlight and rear brake light are functional, especially when riding in low-light conditions.
- **Pre-Ride Check:** Before each ride, check tire pressure, brake function, and ensure all fasteners are secure.

2. PRODUCT OVERVIEW

The URBANMAX C1 Electric Scooter is designed for comfortable and efficient commuting. It features a powerful motor, long-range battery, and a wide anti-slip deck.

Key Components



This image displays the complete URBANMAX C1 Electric Scooter, highlighting its main features including the adjustable seat, rear storage basket, wide deck, and handlebar controls with a digital display.

- **Motor:** 450W powerful motor for efficient travel.
- **Range:** Up to 22 miles on a single charge.
- **Top Speed:** Maximum speed of 15.5 mph.
- **Seat:** Soft, breathable, and adjustable seat for comfortable riding.
- **Tires:** Thick and sturdy 12-inch pneumatic tires for shock absorption.
- **Deck:** 9.5-inch wide anti-slip deck providing ample foot space.

- **Brakes:** Effective front disc brake and rear drum brake for reliable stopping power.
- **Display:** LCD monitor for real-time riding information.
- **Portability:** Foldable handlebar for easy storage and transport.

3. ASSEMBLY AND INITIAL SETUP

3.1 Unpacking

Carefully remove all components from the packaging. Ensure all parts listed in the packing list are present. Keep packaging materials for future transport or storage.

3.2 Handlebar Installation

Unfold the handlebar stem until it locks into place. Secure any locking mechanisms as per the included quick-start guide. Ensure the handlebar is firmly attached and does not wobble.

3.3 Seat and Basket Attachment

Attach the seat post to the designated slot on the scooter frame. Adjust the seat height to a comfortable position for your height (5'1" to 6'1" recommended). Secure the detachable storage basket to the rear of the scooter using the provided hardware. Refer to the detailed diagrams in the included manual for specific steps.



This diagram illustrates the process of attaching the detachable storage basket to the rear of the scooter, showing the basket and necessary screws.



This image shows the adjustable saddle, demonstrating how to raise or lower the seat height to fit different riders.

3.4 Charging the Battery

Before first use, fully charge the scooter's battery. Connect the charger to the charging port on the scooter and then to a standard power outlet. The charging indicator light on the charger will change color (e.g., red to green) when fully charged. Charging typically takes 5 hours.

4. OPERATING YOUR URBANMAX C1 SCOOTER

4.1 Power On/Off

To power on the scooter, press and hold the power button on the digital display. To power off, press and hold the power button again until the display turns off.

4.2 Understanding the Digital Display

The LCD monitor provides essential riding information at a glance.



MEET DIFFERENT NEEDS



MULTIPLE SCENARIOS



This image shows a close-up of the scooter's LCD display, indicating current speed (15.5 mph), battery level, and mileage. The display is designed to be viewable even in daylight.

- **Battery Level:** Indicates the remaining battery charge.
- **Current Speed:** Shows your real-time speed.
- **Speed Mode:** Displays the currently selected speed mode.
- **Mileage:** Tracks single trip and total mileage.

4.3 Speed Modes

The scooter features multiple speed modes. Press the 'M' button on the display to cycle through the available modes:

- **Mode 1:** Approximately 9.3 mph
- **Mode 2:** Approximately 12.4 mph
- **Mode 3:** Approximately 15.5 mph (Maximum Speed)

4.4 Riding Guidelines

To begin riding, place one foot on the deck and push off with the other foot while simultaneously engaging the throttle. Maintain a balanced posture and keep both hands on the handlebars. Always be aware of your surroundings.

22 MILES
Max Range

15.6 MPH
Max Speed

270 WH
Battery



This image shows a person riding the URBANMAX C1 Electric Scooter on a paved path, demonstrating the comfortable riding position and the utility of the rear basket for carrying items or a small pet.

4.5 Braking System

The URBANMAX C1 is equipped with a front disc brake and a rear drum brake for reliable stopping. Apply both brakes gently and evenly for smooth, controlled deceleration. Avoid sudden, harsh braking, especially at high speeds.

LCD DAYLIGHT-VIEWABLE



Speed Status



Battery Status



Speed Modes



Single/Total Mileage



MODE 1

9.3MPH

MODE 2

12.4MPH

MODE 3

15.5MPH

This image provides a close-up view of the scooter's dual disc brakes, highlighting the effective braking mechanism on both the front and rear wheels.

4.6 Lighting System

The scooter includes a high-brightness headlight and a rear brake light for enhanced visibility and safety, particularly during evening or low-light rides. The rear light illuminates when brakes are applied.



This image shows the URBANMAX C1 Electric Scooter being ridden at dusk, with its bright headlight and rear brake light clearly visible, emphasizing safety features for night riding.

5. MAINTENANCE AND CARE

Regular maintenance ensures the longevity and optimal performance of your scooter.

5.1 Battery Care

- Charge the battery fully after each use.
- Avoid completely draining the battery.
- If storing the scooter for an extended period, charge the battery to 50-70% and recharge every 30-60 days.
- Store the scooter in a cool, dry place away from direct sunlight and extreme temperatures.

5.2 Tire Maintenance

- Regularly check tire pressure and inflate to the recommended PSI (refer to tire sidewall or quick-start guide).
- Inspect tires for wear, punctures, or damage before each ride.

5.3 Cleaning

- Wipe down the scooter with a damp cloth. Avoid using high-pressure water jets or harsh chemicals.
- Ensure the charging port cover is securely closed before cleaning.

5.4 Brake Adjustment

Periodically check the brake levers and cables for proper tension and responsiveness. If brakes feel loose or ineffective, consult a qualified technician or refer to the detailed adjustment instructions in the full manual.

6. TROUBLESHOOTING GUIDE

This section addresses common issues you might encounter with your URBANMAX C1 Electric Scooter.

Problem	Possible Cause	Solution
Scooter does not power on	Low battery; Loose connections; Faulty power button	Charge battery; Check all cable connections; Contact support if issue persists.
Reduced range or speed	Low tire pressure; Overloaded; Battery degradation; Riding uphill frequently	Inflate tires to correct PSI; Ensure rider weight is within limits; Charge battery fully; Adjust riding style.
Brakes feel weak	Brake cable loose; Worn brake pads	Adjust brake cable tension; Inspect and replace brake pads if necessary.
Unusual noises during operation	Loose components; Debris in wheels; Motor issue	Check all fasteners; Inspect wheels for obstructions; Contact support for motor issues.

7. PRODUCT SPECIFICATIONS

Detailed technical specifications for the URBANMAX C1 Electric Scooter.

Feature	Specification
Brand	URBANMAX
Model Name	C1
Motor Power	450W
Maximum Speed	15.5 mph
Maximum Distance Range	22 Miles

Feature	Specification
Weight Limit	265 Pounds
Item Weight	42.77 Pounds
Wheel Size	12 Inches
Wheel Material	Rubber
Frame Material	Aluminum
Brake Style	Rear Braking (Front Disc, Rear Drum)
Special Features	Digital Display, Foldable, Lights, Lightweight, Wide Platform
Dimensions (LxWxH)	48.8 x 18.9 x 38.66 inches
Included Components	Allen Keys, Charger, Electric Scooter, Manual

8. WARRANTY AND CUSTOMER SUPPORT

8.1 Warranty Information

The URBANMAX C1 Electric Scooter comes with a manufacturer's warranty:

- **Battery:** 6-month warranty.
- **Other Parts:** 1-year warranty.

Please retain your proof of purchase for warranty claims. The warranty covers manufacturing defects and does not cover damage caused by misuse, accidents, or normal wear and tear.

8.2 Contact Support

For technical assistance, warranty claims, or any questions regarding your URBANMAX C1 Electric Scooter, please refer to the contact information provided in your product packaging or visit the official URBANMAX website.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question