

[Manuals.plus](#) /

› [BAIJIALI](#) /

› BAIJIALI BJL-659 Portable Cassette Player AM/FM Bluetooth Radio User Manual

## BAIJIALI BJL-659

# BAIJIALI BJL-659 Portable Cassette Player AM/FM Bluetooth Radio User Manual

## 1. INTRODUCTION

Welcome to the user manual for your BAIJIALI BJL-659 Portable Cassette Player AM/FM Bluetooth Radio. This device combines classic audio playback with modern connectivity, allowing you to enjoy cassette tapes, AM/FM/SW radio, and Bluetooth audio. This manual provides essential information for setup, operation, maintenance, and troubleshooting to ensure optimal performance and longevity of your product.

## 2. PRODUCT OVERVIEW

### 2.1 Components and Controls

Familiarize yourself with the various parts and controls of your BJL-659 unit:

# Portable Cassette Tape Player

Comes with a lanyard for easy carrying take your music anywhere



This image highlights key features such as the retractable antenna, recorder function buttons, USB port, portable handle, radio tuning knob, SD card slot, clear scale dial, volume control, bass control, AM/FM/SW radio/BT/Tape selector, 3.5mm headphone jack, DC 6V input, and 5W speaker. It also shows the AC power input and the D-cell battery compartment.

- **Portable Handle:** For easy carrying.
- **Retractable Receiving Antenna:** For improved radio signal reception.
- **Radio Tuning Knob:** To select radio frequencies.
- **Clear Scale Dial:** Displays radio frequencies.
- **Volume Control:** Adjusts audio output level.
- **Bass Control:** Adjusts bass level.
- **Recorder Function Buttons:** Play, Stop, Fast Forward, Rewind, Record, Pause for cassette operation.
- **USB Port:** For playing audio from USB flash drives.
- **SD Card Slot:** For playing audio from SD memory cards.
- **AM/FM/SW Radio/BT/Tape Selector:** To switch between different modes.
- **3.5mm Headphone Jack:** For private listening.
- **DC 6V Input:** For external power adapter.
- **5W Speaker:** For audio output.

- **AC Power Input:** For connecting the AC power cable.
- **Battery Compartment:** For D-cell batteries.


### 3. SETUP

#### 3.1 Powering the Device

Your BJL-659 can be powered by either AC power or batteries.

##### 3.1.1 AC Power

To use AC power, connect the included AC power cable to the AC power input on the unit and then plug the other end into a standard wall outlet.

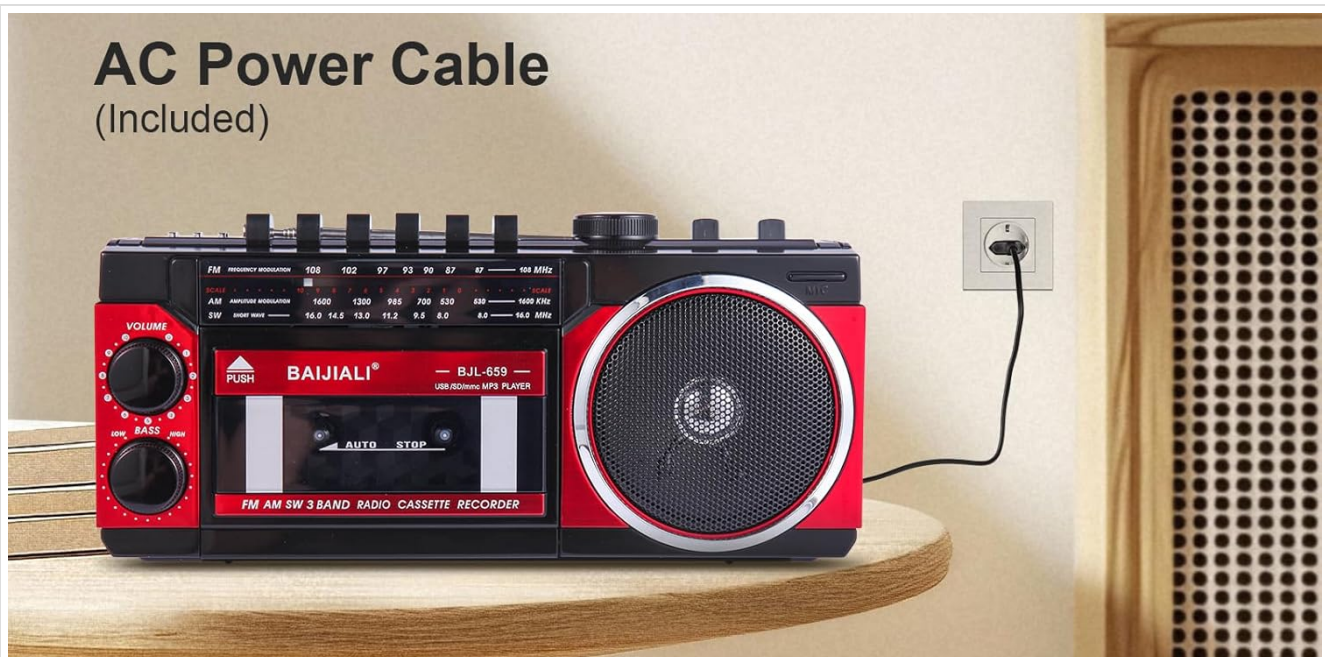

The device can be powered using the included AC power cable by plugging it into a standard wall outlet.

##### 3.1.2 Battery Power

For portable use, the unit requires four (4) D-cell (UM1) batteries (not included). Open the battery compartment cover on the back of the unit and insert the batteries, ensuring correct polarity (+/-) as indicated inside the compartment. Close the cover securely.

# Product Highlights



For portable use, the player requires four D-cell (UM1) batteries, which are not included. Insert them according to the polarity markings inside the compartment.

## 4. OPERATING INSTRUCTIONS

### 4.1 General Operation

- **Power On/Off:** Use the power switch or mode selector to turn the unit on or off.
- **Volume Adjustment:** Rotate the VOLUME knob to increase or decrease the sound level.
- **Bass Adjustment:** Rotate the BASS knob to adjust the bass intensity.

### 4.2 Cassette Player/Recorder

# Enjoy your leisure time



Music Time



News



Live Matches

To play a cassette, open the cassette compartment, insert the tape, and press the Play button. To record, ensure a blank tape is inserted and press the Record button while playing audio from the radio or using the built-in microphone.

- **Inserting a Cassette:** Press the EJECT button to open the cassette compartment. Insert a cassette tape with the open edge facing upwards. Close the compartment firmly.
- **Playing a Cassette:** Select the 'TAPE' mode. Press the PLAY button.
- **Stopping Playback:** Press the STOP button.
- **Fast Forward/Rewind:** Press the FF (Fast Forward) or REW (Rewind) buttons. Press STOP to disengage.
- **Recording:** Ensure a blank cassette is inserted. Select the desired input source (e.g., 'RADIO' or use the built-in microphone). Press the RECORD button (this will also engage PLAY simultaneously). Press STOP to end recording.

## 4.3 Radio Operation (AM/FM/SW)

- **Selecting Radio Mode:** Set the mode selector to 'RADIO'.
- **Selecting Band:** Use the AM/FM/SW switch to choose your desired radio band.
- **Tuning:** Rotate the TUNING knob to scan for radio stations. The clear scale dial will indicate the frequency.
- **Antenna Adjustment:** Extend and adjust the retractable antenna for optimal FM/SW reception. For AM

reception, rotate the unit for best signal.

#### 4.4 Bluetooth Mode

- **Activating Bluetooth:** Set the mode selector to 'BT'. The unit will enter pairing mode, indicated by an audible prompt or flashing indicator.
- **Pairing:** On your Bluetooth-enabled device (e.g., smartphone), search for available Bluetooth devices and select 'BJL-659'. Once paired, you will hear a confirmation sound.
- **Playing Audio:** Start playing audio on your paired device. The sound will be transmitted to the BJL-659.

#### 4.5 USB/SD Playback

- **Inserting Media:** Insert a USB flash drive into the USB port or an SD card into the SD card slot.
- **Playing Files:** The unit should automatically detect and begin playing compatible audio files (e.g., MP3). Use the playback controls (Play/Pause, Next/Previous) if available.

#### 4.6 Headphone Use

To listen privately, plug 3.5mm stereo headphones (not included) into the HEADPHONE jack. The speaker will automatically mute.

### 5. MAINTENANCE

- **Cleaning:** Wipe the unit with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- **Battery Care:** Remove batteries if the unit will not be used for an extended period to prevent leakage.
- **Cassette Head Cleaning:** Periodically clean the cassette player's heads and pinch rollers with a cotton swab lightly dampened with isopropyl alcohol to ensure optimal sound quality and prevent tape damage.
- **Storage:** Store the unit in a cool, dry place away from direct sunlight and extreme temperatures.

### 6. TROUBLESHOOTING

Problem	Possible Cause	Solution
No power	AC cable not connected; Batteries depleted or incorrectly inserted.	Ensure AC cable is securely plugged in. Replace batteries or check polarity.
No sound	Volume too low; Headphones connected; Incorrect mode selected.	Increase volume. Disconnect headphones. Select the correct mode (Tape, Radio, BT, USB/SD).
Radio static/poor reception	Antenna not extended/adjusted; Weak signal.	Fully extend and adjust the telescopic antenna. For AM, rotate the unit. Try moving to a different location.
Cassette not playing/recording	Tape damaged; Heads dirty; Incorrect buttons pressed.	Try a different tape. Clean cassette heads. Ensure PLAY or RECORD buttons are fully engaged.

Problem	Possible Cause	Solution
Bluetooth not connecting	Unit not in BT mode; Device too far; Already paired with another device.	Ensure unit is in 'BT' mode. Keep devices within range (approx. 10 meters). Disconnect from other devices and try pairing again.

## 7. SPECIFICATIONS

- **Brand:** BAIJIALI
- **Model:** BJL-659
- **Product Dimensions:** 27.79 x 11.3 x 14 cm
- **Item Weight:** 975 g
- **Power Source:** AC Power Adapter or 4 x D-cell (UM1) Batteries
- **Tuner Technology:** AM/FM/SW
- **Compatible Devices:** Earphone, Bluetooth-enabled devices, USB drives, SD cards
- **Special Features:** Portable, Cassette Player/Recorder, Bluetooth Connectivity, USB/SD Playback
- **Material:** Plastic
- **Connector Type:** USB
- **Mounting Hardware:** Cassette Player, Owner's Manual, Power Adapter

## 8. WARRANTY INFORMATION

For detailed warranty information, please refer to the product packaging or the official BAIJIALI website. Keep your purchase receipt as proof of purchase for any warranty claims.

## 9. CUSTOMER SUPPORT

If you encounter any issues not covered in this manual or require further assistance, please contact BAIJIALI customer support through their official website or the contact information provided with your product.