

FMART FM-009

FMART FM-009 Cordless Electric Floor Sweeper User Manual

Model: FM-009

1. PRODUCT OVERVIEW

The FMART FM-009 is a cordless electric floor sweeper designed for efficient cleaning of hard floors and low-pile carpets. Its lightweight design and flexible handle allow for easy maneuverability and one-handed operation.



The FMART FM-009 sweeper features smart sensor start and cordless operation for freedom of movement. Its ergonomic handle is 113cm long.

2. SETUP AND ASSEMBLY

Follow these steps to assemble your FMART FM-009 Cordless Electric Floor Sweeper:

1. **Handle Assembly:** Connect the three segments of the handle rods firmly using the provided connectors.
2. **Grip Attachment:** Attach the grip to the top of the assembled handle. The grip has a direct connection structure.
3. **Base Connection:** Insert the assembled handle into the main sweeper unit until it clicks securely into place.
4. **Initial Charge:** Before first use, ensure the sweeper is fully charged. Connect the charger to the charging port and a power outlet. The charging indicator light will show the charging status.



Connect the three segments of the handle rods firmly using the provided connectors.



The grip features a direct connection structure for easy attachment to the assembled handle.

3. OPERATING INSTRUCTIONS

The FMART FM-009 is designed for simple and effective cleaning.

3.1 Starting and Stopping

- To start the sweeper, simply tilt the handle backward. The smart sensor will activate the device.
- To stop the sweeper, return the handle to its upright position.

3.2 Cleaning Surfaces

- The high-speed roller brush is effective on both hard floors (wood, tile) and low-pile carpets.
- For thorough cleaning, move the sweeper in a consistent pattern across the desired area.
- The slim profile (3.35 inches) and flexible design allow the sweeper to glide under low furniture and reach tight corners.
- Edge bristles assist in cleaning along walls and in gaps.


Powerful & Efficient Cleaning

High-Speed Brush — Provides strong floor sweeping power

Edge Bristles — Cleans along walls and corners, reducing missed spots

VS Brush Design — Minimizes tangling, efficiently picks up debris, and prevents dust from scattering

Silicone Scraper — Designed to capture fine dust and small debris

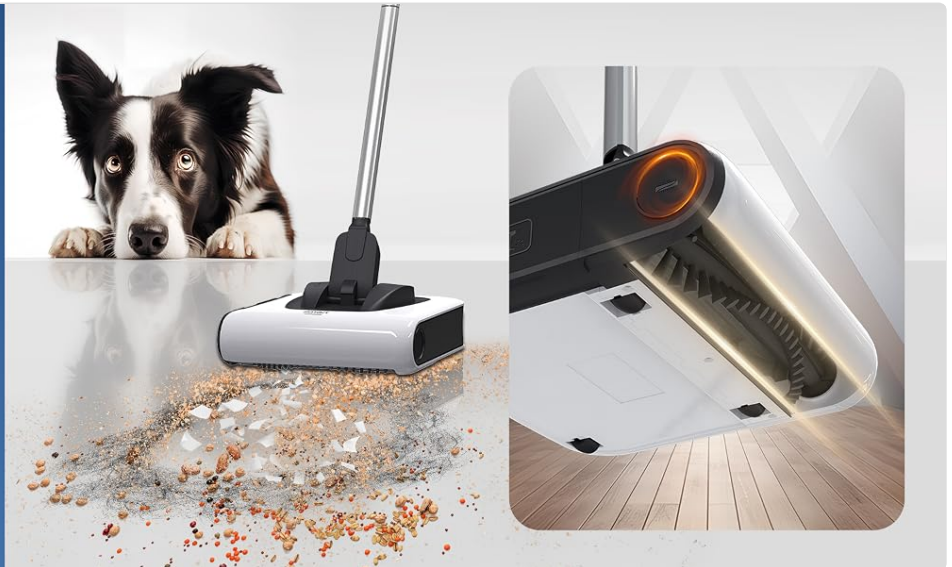

Equipped with a high-speed roller brush, the sweeper effectively cleans dust, pet hair, and debris from hard floors and low-pile carpets.

Stop Ignoring the Dirt Under Your Furniture

 
- 180° Flat Design & 3.3" Thin Body
- 5 mm Bio-Inspired Floor-Hugging Design: Lower profile. Improved small-debris pickup.
- Easily Cleans Under Your: Sofa, Bed, & Low Cabinets



The sweeper's flexible and agile design, with an ultra-thin body and edge cleaning bristles, allows it to reach under low furniture and turn easily in tight spaces.

3.3 Battery Life

A fully charged battery provides up to 50 minutes of continuous cleaning, suitable for daily use across multiple rooms.



A durable battery provides up to 50 minutes of continuous cleaning, sufficient for a week of typical use on a single charge.

3.4 Quiet Operation

The FM-009 operates quietly, minimizing disturbance to others in the household.

Quiet Power. Ready When You Are

A Floor Sweeper That Fits Your Life—Not Interrupts It

Crumbs, pet hair—clean them up fast, without the noise. Powerful cleaning meets whisper-quiet performance. Just grab and go.



The sweeper operates quietly, allowing for cleaning without disturbing household activities or pets.

3.5 How to Use the 009 (Video)

Your browser does not support the video tag.

This video provides a visual guide on how to operate the FMART FM-009 Cordless Electric Floor Sweeper, including starting the device and general usage.

4. MAINTENANCE

Regular maintenance ensures optimal performance of your sweeper.

4.1 Emptying the Dustbin

1. Locate the dustbin release mechanism on the sweeper unit.
2. Press the release button and pull the dustbin out.
3. Empty the collected debris into a waste bin.
4. Reinsert the dustbin until it clicks securely into place.

4.2 Cleaning the Roller Brush

1. Remove the dustbin as described above.
2. Pull out the roller brush from its compartment.
3. Remove any tangled hair or debris from the brush using scissors or a cleaning tool.
4. Reinstall the roller brush: Align one end with the drive shaft and press it into place with the latch facing up.
5. Reinsert the dustbin.

Pivot 360° Around Obstacle

Our swivel handle moves around furniture and tight spaces with zero hassle.



The dustbin and roller brush are designed for quick removal, easy emptying, and simple washing, ensuring hygienic maintenance.

4.3 Installing the Dustbin & Roller Brush (Video)

Your browser does not support the video tag.

This video demonstrates the correct procedure for installing and removing the dustbin and roller brush on the FMART FM-009 sweeper for cleaning and maintenance.

5. TROUBLESHOOTING

If you encounter issues with your FMART FM-009 sweeper, refer to the following common solutions:

- **Sweeper not turning on:** Ensure the battery is charged. Check that the handle is tilted back sufficiently to activate the smart sensor.
- **Poor sweeping performance:** Empty the dustbin. Clean the roller brush to remove any tangled hair or debris. Check for any obstructions in the brush area.
- **Battery not charging:** Verify that the charger is properly connected to both the sweeper and a working power outlet. Ensure the charging port is clean and free of debris.
- **Unusual noise during operation:** Turn off the sweeper and inspect the roller brush and dustbin area for any foreign objects or damage.

For persistent issues, please contact customer support.

6. SPECIFICATIONS

Feature	Specification
Brand	FMART
Model Name	FM-009
Power Source	Battery Powered
Battery Life / Runtime	Up to 50 minutes
Surface Recommendation	Hard Floor, Low-Pile Carpet
Special Features	Cordless, Edge-to-Edge Cleaning, Folds Flat, Auto-Start, Pivoting, Slim Profile

Feature	Specification
Item Dimensions (L x W x H)	8.98" x 8.66" x 4.45"
Minimum Clearance Required	3.35 inches
Included Components	Brush
Indoor Outdoor Usage	Indoor

7. WARRANTY AND SUPPORT

The FMART FM-009 Cordless Electric Floor Sweeper comes with a**365-day warranty** from the date of purchase.

For any questions, technical assistance, or warranty claims, please refer to this user manual or contact FMART customer support via email. Contact details can typically be found on the product packaging or the official FMART website.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question