

SEUNKWANG X7S

SEUNKWANG EWEADN X7S Wireless Keyboard Instruction Manual

Model: X7S | Brand: SEUNKWANG

1. INTRODUCTION

Thank you for choosing the SEUNKWANG EWEADN X7S Wireless Keyboard. This full-size keyboard is designed for comfort and efficiency, featuring a durable metal panel, white backlighting, and quiet operation. It connects wirelessly via 2.4G technology and is rechargeable, making it suitable for various computing environments.

Key features include:

- **2.4G Wireless Connectivity:** Stable connection up to 33 feet (10 meters) with a single USB receiver.
- **Rechargeable Battery:** Built-in battery with Type-C charging, allowing use while charging.
- **Premium Metal Panel:** Durable construction with a frosted matte finish for scratch resistance.
- **Single White Backlight:** Adjustable brightness (5 levels) and breathing light mode (5 speed settings).
- **Upgraded Water Drop Keycaps:** Concave and convex design for comfortable, quiet typing (95% quieter).
- **Ergonomic Design:** Adjustable feet for a 7° tilt angle and 4 non-slip pads.
- **26-Key Anti-Ghosting:** Ensures accurate input during rapid typing or gaming.
- **Universal Compatibility:** Works with Windows, Linux, Chrome OS, and Mac devices.

2. SETUP

2.1 Package Contents

Before proceeding, please ensure all items are present in the package:

- EWEADN X7S Wireless Keyboard
- USB 2.4G Receiver
- Type-C Charging Cable
- User Manual

2.2 Charging the Keyboard

The keyboard features a built-in rechargeable battery. For first-time use, it is recommended to fully charge the keyboard.

1. Locate the Type-C charging port on the keyboard.
2. Connect the provided Type-C cable to the keyboard and the other end to a USB power source (e.g., computer USB port, USB wall adapter).
3. A red indicator light will illuminate to show that the keyboard is charging. The light will turn off when fully charged.
4. The keyboard can be used while charging.

2.3 Connecting via 2.4G Wireless

The EWEADN X7S keyboard uses a 2.4G USB receiver for wireless connection.

1. Locate the USB 2.4G receiver. It may be stored in a compartment on the keyboard itself.
2. Insert the USB receiver into an available USB-A port on your computer or device.
3. Turn on the keyboard using the power switch, usually located on the side or back of the keyboard.
4. To pair the keyboard, press and hold the **ESC** key and the **+/=** key simultaneously for a few seconds. The keyboard's indicator light may flash to confirm pairing mode.
5. The keyboard should automatically connect to the receiver. If connection is not established, try re-inserting the receiver or repeating the pairing process.

TWO IN ONE

2.4G Wireless Rechargeable.



2.4G

Plug & Connect



Rechargeable

Image: The EWEADN X7S Wireless Keyboard connected via its 2.4G USB receiver to a laptop.



Image: Visual representation of the 2.4G Plug & Connect and Rechargeable features of the keyboard.

3. OPERATING INSTRUCTIONS

3.1 Power On/Off

Locate the power switch on the keyboard, typically on the side or back. Slide it to the 'ON' position to power on the keyboard and 'OFF' to power it down.

3.2 Backlight Control

The EWEADN X7S keyboard features a single white backlight with adjustable settings.

- **Adjust Brightness:** Press **Fn + PU** to increase brightness (5 levels). Press **Fn + PD** to decrease brightness (5 levels).
- **Toggle Backlight Mode:** Press **Fn + SL** to switch between 'always on' and 'breathing light' modes.
- **Adjust Breathing Speed:** In breathing light mode, use specific key combinations (refer to quick guide if available) to adjust the speed of the breathing effect.

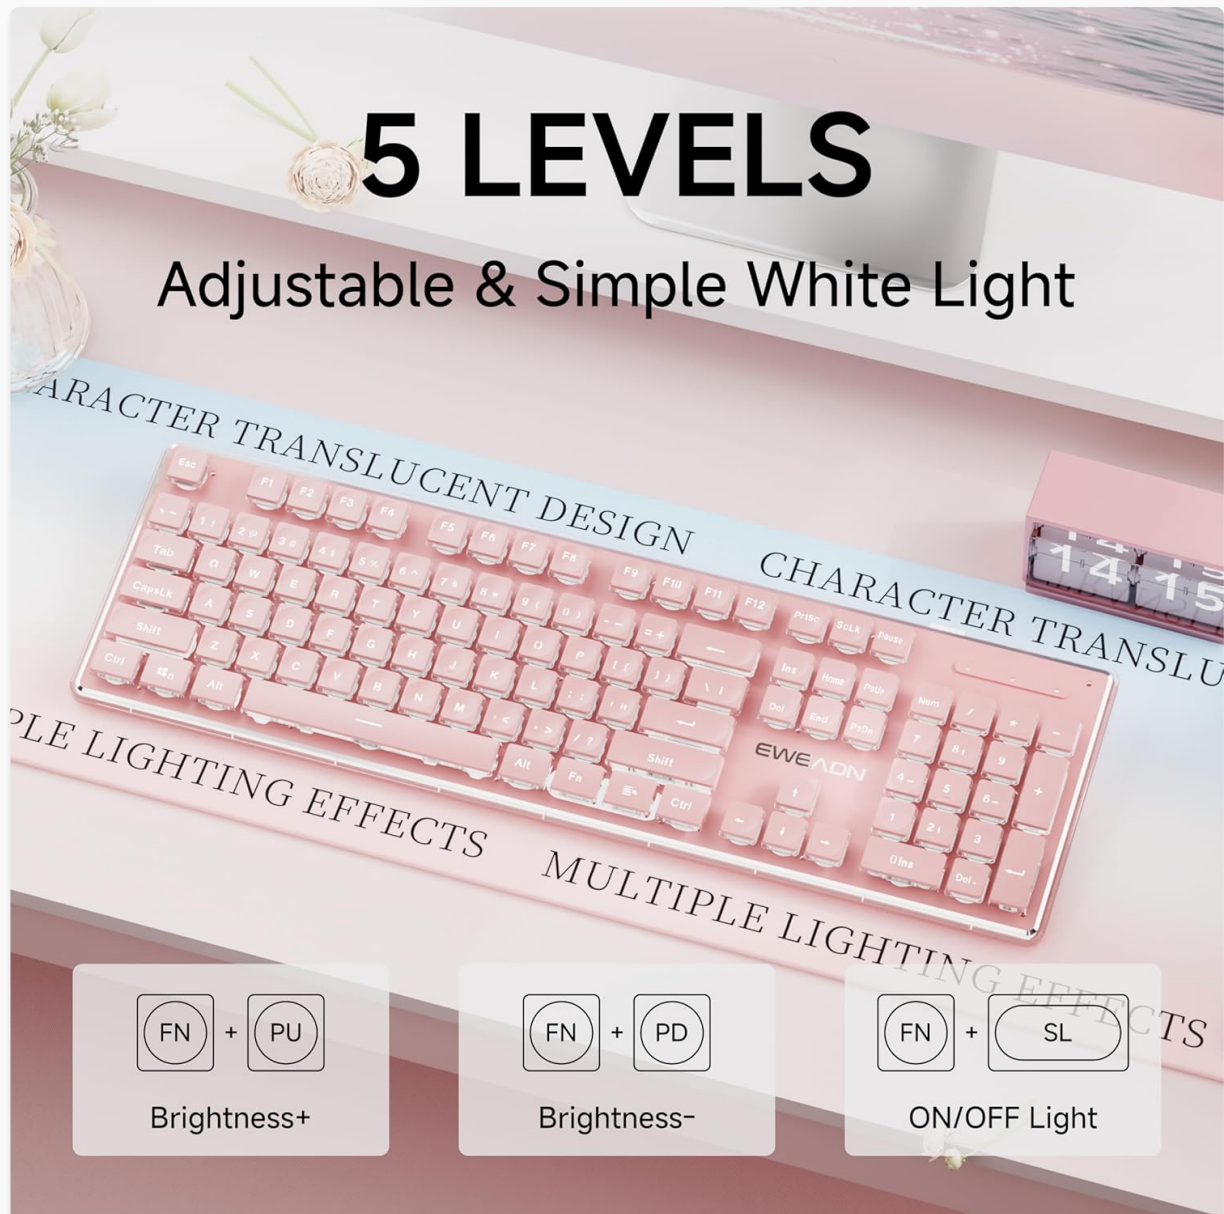


Image: The keyboard's white backlight illuminating the keys, highlighting the character translucency.

Video: Demonstration of the white backlit keyboard, ideal for night work. This video shows the keyboard's illumination in a low-light setting.

Video: A close-up view of the bright white backlight on the silent wireless keyboard, showcasing its illumination.


3.3 Ergonomic Design and Typing Experience

The keyboard is designed for comfortable and fatigue-free typing.

- **Adjustable Feet:** Two adjustable feet on the base allow you to tilt the keyboard to a comfortable 7° angle. Four non-slip pads ensure stability.
- **Water Drop Keycaps:** The concave and convex design of the keycaps conforms to your fingertips, providing a smooth typing experience.
- **Quiet Typing:** The membrane structure and keycap design contribute to a significantly quieter typing experience.

Excellent Water Drop Pudding Keycaps

Fits fingers well, typing more comfortable & smoother

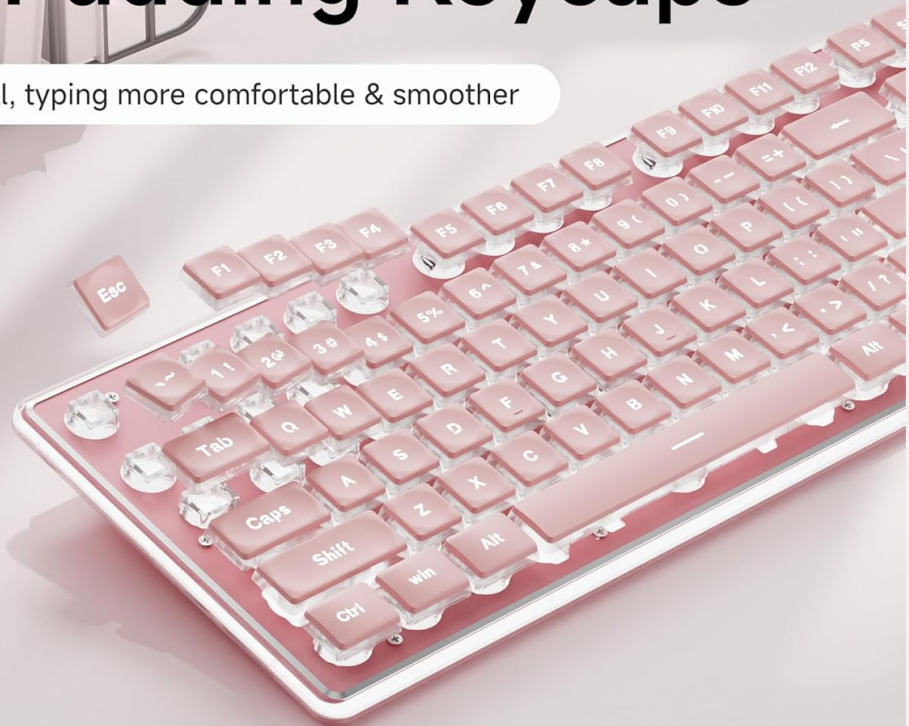

Noise-99%

(37db-48db) Silent Membrane Keyboard

Translucency +100%

Pudding Structure Transparent

Image: Detailed view of the water drop pudding keycaps, emphasizing their comfortable fit and quiet operation.

Video: An immersive demonstration of the typing sound produced by the X7S wireless keyboard, highlighting its quiet operation.

3.4 26-Key Anti-Ghosting

The 26-key anti-ghosting technology ensures that multiple simultaneous keystrokes are registered accurately without conflicts, which is beneficial for fast typing and gaming.

26-key Anti-ghosting & No Lag

No conflict between simultaneous keystrokes



Image: A visual representation of the 26-key anti-ghosting feature, showing multiple keys being pressed without conflict.

3.5 Universal Compatibility

The keyboard is compatible with a wide range of operating systems and devices, including PC, desktop, laptop, and notebook computers running Windows, Linux, Chrome OS, and Mac.

4. MAINTENANCE

4.1 Cleaning

To maintain the keyboard's appearance and functionality:

- Turn off the keyboard before cleaning.
- Use a soft, lint-free cloth slightly dampened with water or a mild cleaning solution to wipe the surface.
- For dust and debris between keys, use compressed air or a small brush.
- Avoid using harsh chemicals or abrasive materials that could damage the finish or keycap legends.

4.2 Battery Care

To prolong battery life:

- Avoid fully discharging the battery frequently.
- Store the keyboard in a cool, dry place when not in use for extended periods.
- Charge the keyboard regularly, even if not used daily, to prevent deep discharge.

5. TROUBLESHOOTING

If you encounter issues with your EWEADN X7S Wireless Keyboard, please refer to the following common solutions:

Problem	Possible Cause	Solution
Keyboard not responding	Low battery, disconnected receiver, keyboard off.	Charge the keyboard. Ensure the power switch is ON. Re-insert the USB receiver. Re-pair the keyboard (ESC + +/-).
Backlight not working	Backlight off, low brightness, low battery.	Press Fn + SL to toggle backlight. Increase brightness with Fn + PU. Charge the keyboard.
Intermittent connection	Interference, receiver too far, low battery.	Move closer to the receiver. Ensure no large metal objects are between keyboard and receiver. Charge the keyboard. Re-pair.
Keys not registering	Connection issue, debris under key.	Check connection and battery. Clean under the affected key with compressed air.

6. SPECIFICATIONS

Feature	Detail
Brand	SEUNKWANG
Model Name	X7S
Model Number	EWEADN-X7S-A2
Connectivity Technology	2.4G Wireless (USB-A receiver)
Keyboard Description	Membrane
Number of Keys	104
Special Features	Backlit, Ergonomic, Rechargeable, Silent
Color	Pink
Material	Metal, Plastic
Compatible Devices	Laptop, PC, Smartphone, Tablet
Manufacturer	EWEADN

7. WARRANTY & SUPPORT

The SEUNKWANG EWEADN X7S Wireless Keyboard comes with a 2-year warranty from the

manufacturer, EWEADN. Additionally, 24-month brand support is provided.

For any product-related inquiries, technical assistance, or warranty claims, please contact the seller or manufacturer's customer support. Refer to your purchase documentation for specific contact details.

© 2026 SEUNKWANG. All rights reserved.