

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [JIEHOME](#) /

› [JIEHOME X5 Golf Rangefinder User Manual](#)

## JIEHOME X5

# JIEHOME X5 Golf Rangefinder User Manual

Model: X5 | Brand: JIEHOME

## 1. INTRODUCTION

Thank you for choosing the JIEHOME X5 Golf Rangefinder. This device is designed to provide accurate distance measurements for golfing, hunting, and other outdoor activities. Featuring advanced modes like slope compensation and triangulation, 7x magnification, and a rechargeable battery, the X5 is a versatile tool to enhance your precision and game.

## 2. PRODUCT OVERVIEW & KEY FEATURES

- **Advanced Coach Mode (Triangulation):** Master the course with innovative Coach Mode, powered by advanced triangulation. Instantly calculate the distance between any two points—perfect for blind shots, doglegs, and complex layouts where the pin is out of sight. A strategic tool for smarter course management and lower scores.
- **1200 Yards Range & 7x Magnification:** Experience tournament-grade precision with a  $\pm 1$  yard accuracy. Featuring 7x magnification and fully multi-coated lenses for a bright, sharp view, reducing glare and enhancing contrast.
- **Golf Rangefinder with Slope Switch:** Switch from practice to competition in one click. The external slope switch lets you easily toggle slope compensation on/off. Get elevation-adjusted distances for training, then disable it for full USGA & R&A tournament compliance.
- **7 Professional Modes:** Includes Scan Mode, Flag Locking Mode, Flag Locking + Slope Compensation Mode, Coach Mode, Coach + Slope Compensation Mode, Vertical/Horizontal Measuring Mode, and Speed Mode.
- **Magnetic & Rechargeable:** Built-in strong magnet attaches securely to your cart for hands-free convenience. A rechargeable 750mAh battery supports up to 20,000 measurements on a single charge.
- **Laser Class 1:** This rangefinder is Laser Class 1 with an output power of less than 5mW.

# SLOPE SWITCH

For both golf course and  
golf tournament

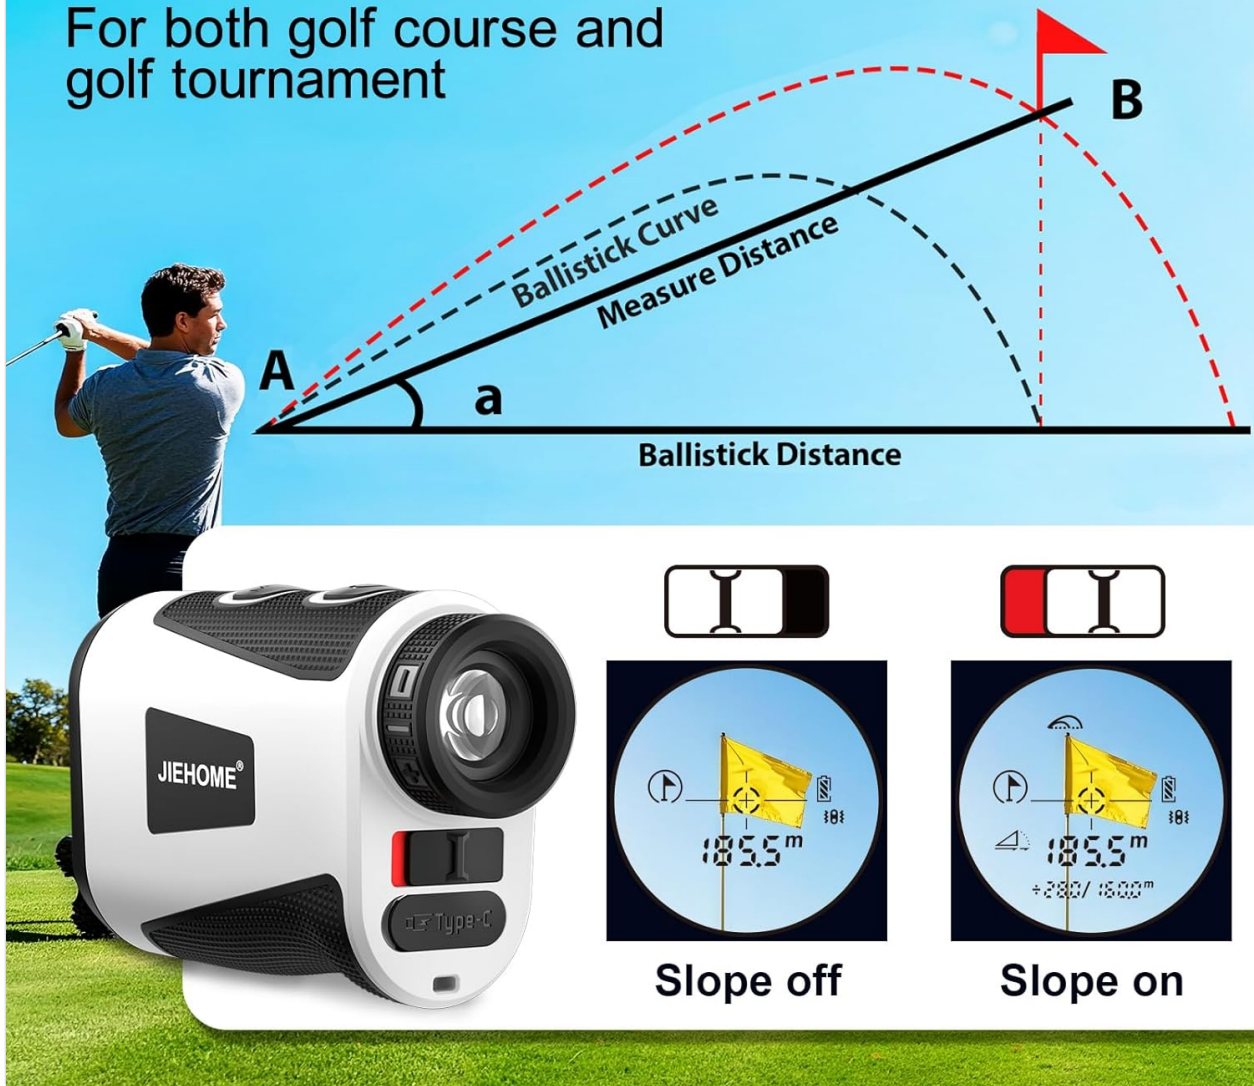


Image: JIEHOME X5 Rangefinder illustrating the Slope Switch function. The diagram shows how the device calculates ballistic distance with slope compensation (Slope On) versus measured distance (Slope Off), making it suitable for both practice and tournament play. The device itself is shown with a red switch indicating 'Slope On' and a black switch indicating 'Slope Off'.

# COACH MODE (TRIANGULATION FEATURE)

Measuring without approaching the ball


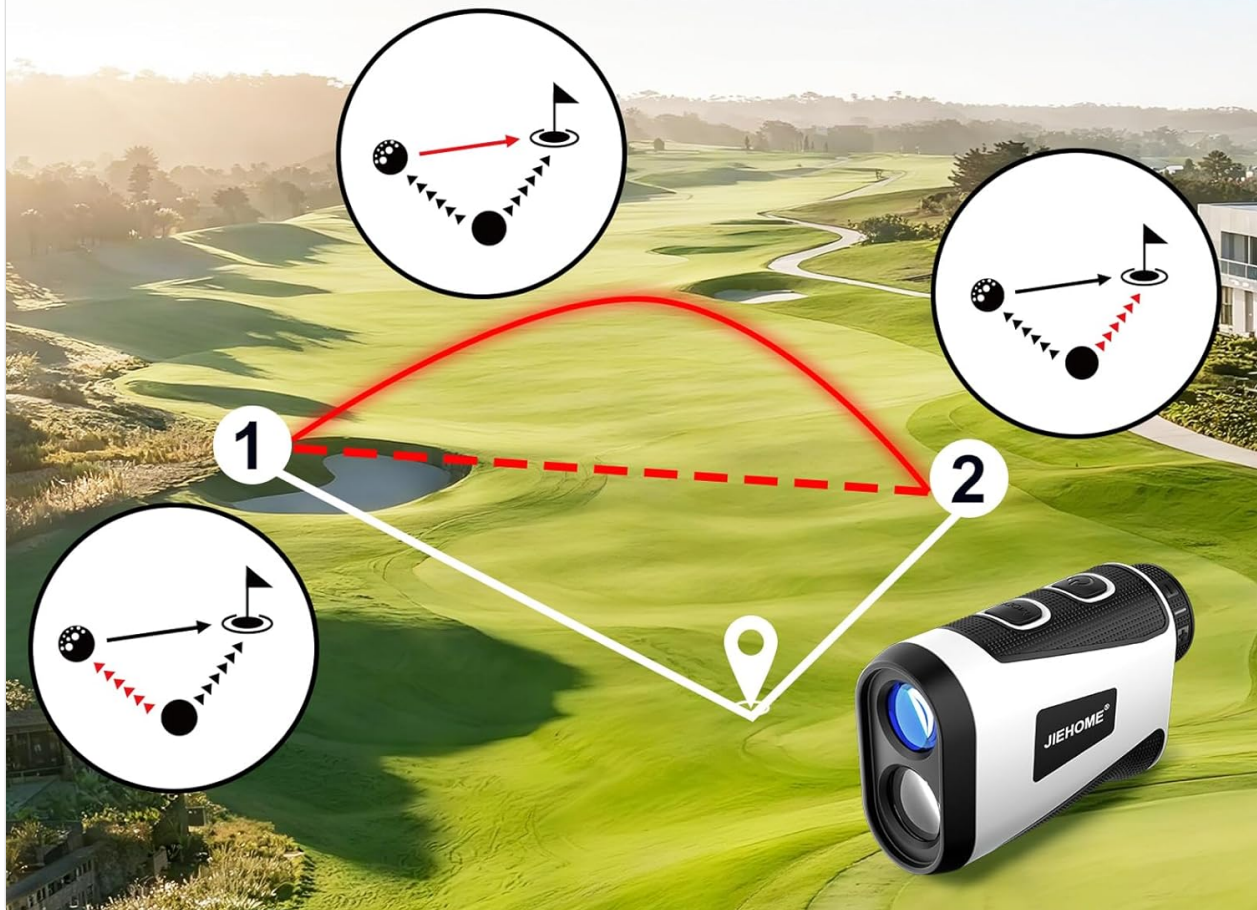


Image: JIEHOME X5 Rangefinder demonstrating the Coach Mode with Triangulation Feature. The diagram shows how the rangefinder can measure distances between two points (1 and 2) without needing to approach the ball, useful for complex course layouts or blind shots.

## 3. PACKAGE CONTENTS

Upon unboxing your JIEHOME X5 Golf Rangefinder, please ensure all the following items are included:

- 1 x JIEHOME X5 Golf Rangefinder
- 1 x Carry Case
- 1 x USB-C Charging Cable
- 1 x Carabiner
- 1 x Hand Strip
- 1 x User Manual
- 1 x Lens Cleaning Cloth

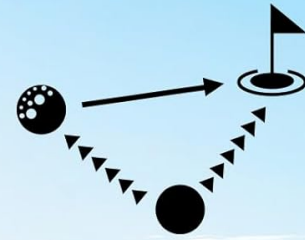

## PACKAGE LIST

- |                         |                  |
|-------------------------|------------------|
| ① Golf Range Finder     | ⑤ Carabiner      |
| ② Carry Case            | ⑥ Cleaning Cloth |
| ③ Hand Strip            | ⑦ User Manual    |
| ④ Type-C Charging Cable |                  |

Image: A flat lay of all items included in the JIEHOME X5 Rangefinder package. This includes the rangefinder, its carry case, USB-C charging cable, carabiner, hand strap, user manual, and lens cleaning cloth.

## 4. SETUP

1. **Initial Charge:** Before first use, fully charge the rangefinder using the provided USB-C cable. The charging port is located on the side of the device.
2. **Power On:** Press the power button (usually located on the top or side) to turn on the device.
3. **Adjust Focus:** Look through the eyepiece and rotate the diopter adjustment ring (located around the eyepiece) until the display and target appear clear and sharp.
4. **Attach Accessories:** Secure the hand strip to prevent accidental drops. Use the carabiner to attach the carry case to your golf bag or belt.

## 5. OPERATING MODES

The JIEHOME X5 offers 7 distinct modes for various measurement needs:

- **Scan Mode:** Press and hold the power button while sweeping across multiple targets to get continuous

distance readings.

- **Flag Locking Mode:** Aim at the flag, press the power button. The device will lock onto the closest target (the flag) and provide a vibration confirmation.
- **Flag Locking + Slope Compensation Mode:** Similar to Flag Locking, but with slope compensation activated. The device will provide both the actual distance and the slope-adjusted distance.
- **Coach Mode (Triangulation):** Allows measurement between two points. Follow on-screen prompts to mark two points, and the device will calculate the distance between them.
- **Coach + Slope Compensation Mode:** Combines triangulation with slope compensation for advanced course management.
- **Vertical/Horizontal Measuring Mode:** Measures vertical and horizontal distances to a target.
- **Speed Mode:** Measures the speed of a moving object. Aim at the object and follow the instructions in the display.

To switch between modes, short press the 'Mode' button (usually located next to the power button) until the desired mode is displayed in the eyepiece.

## 6. CHARGING

---

The JIEHOME X5 Golf Rangefinder is equipped with a 750mAh rechargeable Lithium-Ion battery, providing power for up to 20,000 measurements on a full charge. To charge the device:

1. Locate the USB-C charging port on the side of the rangefinder.
2. Connect the provided USB-C charging cable to the port.
3. Plug the other end of the cable into a compatible USB power source (e.g., wall adapter, computer, power bank).
4. An indicator light will show the charging status (e.g., red for charging, green for fully charged).
5. The device features a 20-second auto-off function to conserve battery when not in use.



Image: JIEHOME X5 Rangefinder connected to a USB-C charging cable, highlighting its 750mAh internal battery, USB-C charging port, and capacity for 20,000 measurements. It also indicates a 20-second auto-off feature for power saving.

## 7. MAINTENANCE

- **Cleaning Lenses:** Use the provided lens cleaning cloth to gently wipe the lenses. Avoid using abrasive materials or harsh chemicals that could scratch the lens coating.
- **Storage:** Store the rangefinder in its protective carry case when not in use to prevent dust and damage. Keep it in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery Care:** For optimal battery life, avoid fully discharging the battery frequently. Charge it regularly, even if not used for extended periods.

## 8. TROUBLESHOOTING

- **No Power:** Ensure the battery is charged. Connect the USB-C cable and allow it to charge for at least 30 minutes before attempting to power on again.
- **Inaccurate Readings:** Check if the lenses are clean. Ensure you are holding the device steady and targeting correctly. In slope mode, verify the slope switch is in the desired position.

- **Display Unclear:** Adjust the diopter ring around the eyepiece to sharpen the focus.
- **Device Not Responding:** Try resetting the device by holding down the power button for 10-15 seconds. If the issue persists, contact customer support.

## 9. SPECIFICATIONS

Feature	Detail
Brand	JIEHOME
Model Name	X5 Rangefinder
Color	X5 White
Material	Plastic
Sport	Archery, Golf, Hunting
Item Weight	144 Grams
Battery Type	Lithium-Ion (750mAh)
Magnification	7X
Range	Up to 1200 Yards
Accuracy	±1 Yard
Charging Port	USB-C

## 10. WARRANTY AND SUPPORT

JIEHOME provides a 1-year warranty for this product. VIP customers are eligible for a 2-year warranty. For any questions, concerns, or support needs regarding your JIEHOME X5 Golf Rangefinder, please contact JIEHOME customer service. Our service team is ready to help you.