

[Manuals.plus](#) /

› [BENLYDESIGN](#) /

› BENLY C-0PO Retro Vintage LED Digital Watch User Manual

BENLYDESIGN A0322

BENLY C-0PO Retro Vintage LED Digital Watch User Manual

Model: A0322

INTRODUCTION

Welcome to your BENLY C-0PO Retro Vintage LED Digital Watch. This manual provides detailed instructions for setting up, operating, and maintaining your watch. Please read it carefully to ensure proper use and longevity of your timepiece.

PRODUCT OVERVIEW

Watch Components

The BENLY C-0PO watch features a classic 1970s design with modern digital functionality.



This image displays the BENLY C-0PO watch face, highlighting the digital display for hours, minutes, and seconds, along with indicators for HRS (hours) and MIN (minutes) settings. The watch features a brushed stainless steel case and strap.

Controls and Display

- **Digital Display:** Shows time, day, date, alarm, stopwatch, and countdown.
- **Side Buttons:** Used for mode selection, setting adjustments, and function activation. (Typically located on the left and right sides of the watch case.)

SETUP

Setting Time and Date

1. Press the **Mode Button** (typically bottom left) until the time setting mode is activated. The hours digit will likely flash.
2. Use the **Adjust Button** (typically top left or right) to change the hours.
3. Press the **Mode Button** again to move to minutes, then seconds, month, day, and year.
4. Use the **Adjust Button** to set each value.
5. Once all settings are correct, press the **Mode Button** to exit the setting mode.

OPERATING INSTRUCTIONS

Using Watch Functions

Navigate through the watch's various modes using the **Mode Button**.

Alarm Function

1. Press the **Mode Button** until the alarm display appears.
2. Use the **Adjust Button** to set the desired alarm time.
3. Press the **Mode Button** to confirm and activate/deactivate the alarm. An alarm icon will typically appear when active.

Stopwatch Function

1. Press the **Mode Button** until the stopwatch display appears (usually showing 00:00:00).
2. Press the **Start/Stop Button** (often the Adjust Button in this mode) to begin timing.
3. Press the **Start/Stop Button** again to pause/resume.
4. Press the **Reset Button** (often the Mode Button in this mode, or a dedicated button) to clear the stopwatch.

Countdown Timer

1. Press the **Mode Button** until the countdown timer display appears.
2. Use the **Adjust Button** to set the desired countdown duration.
3. Press the **Start/Stop Button** to begin the countdown.
4. An audible alert will sound when the countdown reaches zero.

Dual Time

1. Press the **Mode Button** until the Dual Time display appears.
2. Use the **Adjust Button** to set the second time zone.
3. This feature is useful for tracking time in two different locations simultaneously.

Hourly Chime

The hourly chime can typically be activated or deactivated within the time setting or alarm setting mode. Refer to the specific watch interface for the chime icon or indicator.

MAINTENANCE

Care and Cleaning

- **Cleaning:** Wipe the watch case and strap with a soft, damp cloth. Avoid harsh chemicals or abrasive materials.
- **Water Resistance:** The watch is water-resistant up to 30 meters. It is suitable for hand washing, splashes, and rain. Do not press buttons underwater. Not suitable for swimming or diving.
- **Battery Replacement:** The watch uses 1 C battery (included). Battery replacement should ideally be performed by a qualified watch technician to ensure water resistance is maintained.
- **Storage:** Store your watch in a cool, dry place away from direct sunlight and extreme temperatures.

TROUBLESHOOTING

Common Issues and Solutions

Problem	Solution
Display is blank or dim.	The battery may be low or depleted. Replace the battery.
Time is incorrect.	Re-set the time following the "Setting Time and Date" instructions.
Buttons are unresponsive.	Ensure the watch is not in a locked mode. If the issue persists, a battery reset or professional inspection may be required.
Water appears inside the watch.	Immediately take the watch to a professional for inspection and repair to prevent further damage.

SPECIFICATIONS

Technical Details

- **Model Number:** A0322
- **ASIN:** B0FT3JHFNG
- **Brand:** BENLYDESIGN
- **Movement:** Digital
- **Water Resistance:** 30 meters (3 ATM)
- **Battery Type:** 1 C battery (included)
- **Wrist Circumference:** 100–205mm (3.9–8.0 in)
- **Parcel Dimensions:** 10.31 x 10.01 x 7.9 cm
- **Weight:** 300 g

WARRANTY AND SUPPORT

Product Warranty and Customer Service

This BENLY C-0PO watch comes with a **1-year warranty** for quality assurance. For warranty claims, technical support, or any inquiries regarding your watch, please contact BENLYDESIGN customer service through your purchase platform or the official BENLYDESIGN website. Please retain your proof of purchase for warranty validation.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question