

[Manuals.plus](#) /

› [Candy](#) /

› Candy BR 26SSB6G-S Slim Front-Load Washing Machine User Manual

Candy BR 26SSB6G-S

Candy BR 26SSB6G-S Slim Front-Load Washing Machine User Manual

Model: BR 26SSB6G-S

1. INTRODUCTION

This manual provides essential information for the safe and efficient use of your Candy BR 26SSB6G-S slim front-load washing machine. Please read these instructions carefully before installation and operation, and keep them for future reference. This appliance is designed for domestic use only.

The Candy BR 26SSB6G-S is a free-standing, front-load washing machine with a 6 kg capacity, featuring Inverter Technology, a maximum spin speed of 1200 RPM, and an energy efficiency class A rating. It includes Wi-Fi and Bluetooth connectivity for remote control via the hOn app.

2. SAFETY INFORMATION

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, or injury.

- Ensure the appliance is properly grounded.
- Do not allow children to play with or operate the washing machine.
- Never touch the appliance with wet hands or feet.
- Do not open the detergent drawer or door during a wash cycle, especially when the water level is high or temperature is hot.
- Unplug the appliance before cleaning or maintenance.
- Keep packaging materials out of reach of children.

3. INSTALLATION

3.1 Unpacking

Remove all packaging materials, including the polystyrene base and any inserts in the drum. Retain the packaging for future transport.

3.2 Removing Transit Bolts

Before using the appliance, remove the transit bolts located at the rear of the machine. These bolts secure the drum during transport. Failure to remove them will cause severe vibration and damage.

3.3 Placement

The Candy BR 26SSB6G-S is a free-standing appliance. Place it on a firm, level floor. Ensure there is adequate space around the machine for ventilation and access. The appliance dimensions are: Width 600 mm, Depth 420 mm, Height 850 mm.



Image 1: Front view of the Candy BR 26SSB6G-S washing machine with the door open, revealing the stainless steel drum. This view highlights the compact design and the anthracite finish.

3.4 Leveling

Adjust the feet at the bottom of the machine to ensure it is perfectly level. A level machine reduces vibration and noise during operation.

3.5 Water Connection

Connect the water inlet hose to a cold water tap with a 3/4" thread. Ensure all connections are tight to prevent leaks. Position the drain hose into a standpipe or over the edge of a sink, ensuring it is securely fixed and not kinked.

3.6 Electrical Connection

Plug the appliance into a grounded electrical outlet. Ensure the voltage and frequency match the specifications on the rating plate. Do not use extension cords or multiple adapters.

4. OPERATING INSTRUCTIONS

4.1 Control Panel Overview

The washing machine features a control panel with buttons, a program selection knob, and a digital display for easy operation.



Image 2: Close-up view of the control panel and the upper part of the door on the Candy BR 26SSB6G-S washing machine. The program selection knob and digital display are clearly visible.

4.2 Loading Laundry

Open the door and load the laundry into the drum. Do not overload the machine; the maximum capacity is 6 kg. Close the door firmly.

4.3 Adding Detergent

Pull out the detergent drawer. Add the appropriate amount of detergent and fabric softener to the designated compartments. Refer to the detergent packaging for dosage recommendations.



Image 3: The detergent drawer of the Candy BR 26SSB6G-S washing machine is shown pulled open, revealing compartments for detergent and fabric softener. This illustrates where to add washing agents.

4.4 Selecting a Program

Turn the program selection knob to choose the desired wash program. The display will show the default settings for the selected program.

4.5 Adjusting Options

Use the control buttons to adjust options such as:

- **Temperature:** Adjust the wash temperature.
- **Spin Speed:** Modify the spin speed (max 1200 RPM).
- **Delayed Start:** Set a delay for the program to start (up to 24 hours).
- **Rinse Function:** Add an extra rinse cycle.

4.6 Starting a Cycle

Press the Start/Pause button to begin the wash cycle. The remaining time indicator will show the estimated time until completion.

4.7 Using the hOn App (Wi-Fi/Bluetooth)

Download the hOn app on your smartphone to connect to your washing machine via Wi-Fi or Bluetooth. The app allows for remote control, remote monitoring, remote diagnostics, and remote start functions.

5. WASH PROGRAMS

The Candy BR 26SSB6G-S offers 16 wash programs to suit various fabric types and soil levels:

- **Cotton:** For durable cotton items.
- **Cotton 20 °C:** Energy-saving wash for lightly soiled cottons.
- **Daily Care:** A quick and efficient program for everyday laundry.
- **Delicates/Silk:** Gentle wash for delicate fabrics and silk.
- **Eco 40-60°C:** Standard program for normally soiled cotton laundry, washable at 40°C or 60°C, together in the same cycle.
- **Hand/Wool:** Specific program for hand-washable items and wool.
- **Hygiene/Allergy Care:** High-temperature wash for enhanced hygiene.
- **Jeans/Denim:** Program optimized for denim fabrics.
- **Prewash:** An additional pre-wash cycle for heavily soiled items.
- **Rinse:** An extra rinse cycle.
- **Silent:** Reduced noise program.
- **Smart AI:** Intelligent program that adapts to the load.
- **Spin/Drain:** For spinning and draining water from laundry.
- **Steam:** Program utilizing steam for refreshing or easier ironing.
- **Synthetics:** For synthetic and mixed fabrics.
- **Whites:** For white cottons and linens.

6. MAINTENANCE

6.1 Cleaning the Detergent Drawer

Regularly clean the detergent drawer to prevent residue buildup. Remove the drawer, rinse it under running water, and clean any stubborn deposits with a brush. Reinsert the drawer.

6.2 Cleaning the Filter

The machine has a filter that collects lint and small objects. Clean it periodically to ensure proper drainage. Refer to the full manual for specific instructions on accessing and cleaning the filter.

6.3 Autoclean Function

Utilize the self-cleaning function (if available as a program) to maintain the drum's hygiene and prevent odors.

6.4 Exterior Cleaning

Wipe the exterior of the washing machine with a soft, damp cloth. Do not use abrasive cleaners or solvents.

7. TROUBLESHOOTING

If you encounter issues with your washing machine, consult the following common problems:

- **Machine does not start:** Check if the power cord is plugged in, the door is closed properly, and the Start/Pause button has been pressed.
- **Water not filling:** Ensure the water tap is open and the inlet hose is not kinked.
- **Water not draining:** Check the drain hose for kinks or blockages, and ensure the filter is clean.
- **Excessive vibration/noise:** Verify that the transit bolts have been removed and the machine is level.
- **Error codes:** If an error code appears on the display, refer to the hOn app's remote diagnostics feature or the full product manual for specific solutions.

For further assistance, use the remote diagnostics feature via the hOn app or contact customer support.

8. SPECIFICATIONS

Feature	Specification
Model Name	BR 26SSB6G-S
Appliance Placement	Free-standing
Loading Type	Front-load
Color	Anthracite
Built-in Display	Yes
Control Type	Buttons, Knob
Door Hinge	Left
Inverter Technology	Yes
Drum Material	Stainless steel
Drum Volume	39 L
Capacity	6 kg
Max Spin Speed	1200 RPM
Spin-drying Efficiency Class	B
Number of Wash Programs	16
Noise Emission Class	A
Noise Level (Spin)	72 dB
Delayed Start	Yes (up to 24 h)
Load Balancing System	Yes
Foam Control System	Yes
Adjustable Spin Speed	Yes
Adjustable Temperature	Yes
Remote Smartphone Support	Yes
Wi-Fi Controlled	Yes

Feature	Specification
Bluetooth	Yes
Supported Control App	hOn
Child Protection	Yes
Self-cleaning	Yes
Remaining Time Indicator	Yes
Energy Efficiency Class	A (Scale A to G)
Energy Consumption (100 cycles)	38 kWh
Water Consumption (per cycle)	35 L
Width	600 mm
Depth	420 mm
Height	850 mm
Weight	54 kg



Image 4: Energy efficiency label indicating the appliance's Class A rating, from a scale of A to G.

9. WARRANTY AND SUPPORT

Your Candy BR 26SSB6G-S washing machine comes with a manufacturer's warranty. Please refer to the warranty card included with your appliance for specific terms and conditions, including the duration and coverage.

For technical support, spare parts, or service requests, please contact Candy customer service. You can find contact information on the official Candy website or in the documentation provided with your product. Remember to have your model number (BR 26SSB6G-S) and serial number ready when contacting support.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0FT3JKHZW>

More documents and user manuals: <https://manuals.plus/>