

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [FLAMA](#) /

› [FLAMA 1892FL 26L Digital Microwave Air Fryer & Oven Instruction Manual](#)

FLAMA 1892FL

FLAMA 1892FL 26L Digital Microwave Air Fryer & Oven Instruction Manual

Model: 1892FL | Brand: FLAMA

Introduction	Product Overview	Setup	Operating Instructions Warranty & Support	Maintenance	Troubleshooting
		Specifications			

1. INTRODUCTION

This manual provides comprehensive instructions for the safe and efficient operation of your FLAMA 1892FL 26L Digital Microwave Air Fryer & Oven. Please read all instructions carefully before use and retain this manual for future reference.

Important Safety Information

- Always ensure the appliance is properly grounded.
- Do not operate the microwave if the door is damaged or if the seals are compromised.
- Never heat sealed containers, as they may explode.
- Use only microwave-safe cookware.
- Supervise children when the appliance is in use.
- Do not attempt to service or repair the appliance yourself. Contact qualified service personnel.

2. PRODUCT OVERVIEW

The FLAMA 1892FL is a versatile 3-in-1 appliance combining microwave, air fryer, and oven functions. It features SuperSlim Convection Technology for even cooking and a digital touch panel for easy operation.

Components

- Main Unit (Microwave, Air Fryer, Oven)
- Glass Turntable
- Turntable Ring
- Air Fryer Basket

- Baking Tray

Visual Guide



Figure 2.1: Front view of the FLAMA 1892FL Digital Microwave Air Fryer & Oven. This image shows the sleek black and silver design with the digital control panel on the right.



Figure 2.2: The appliance with its door open, revealing the interior cavity. The door opens to the left, showing the internal structure.



Figure 2.3: Close-up of the microwave interior, featuring the glass turntable and its support ring. The interior is illuminated, showing the heating elements.



Figure 2.4: The interior of the appliance with the air fryer basket placed on top of the baking tray, demonstrating accessory usage for air frying or baking.

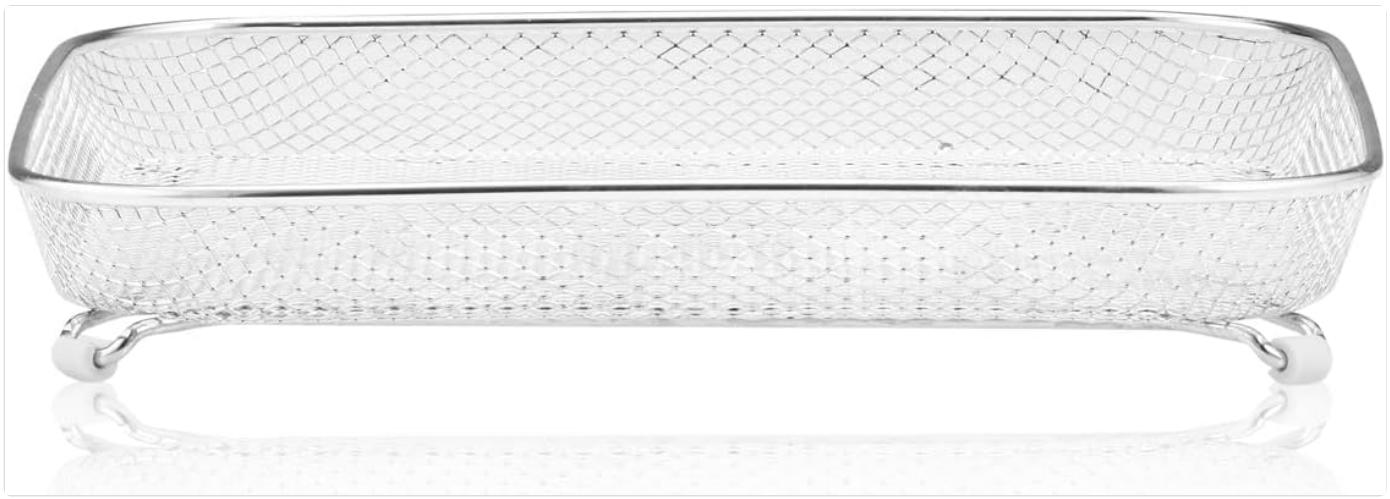


Figure 2.5: A standalone image of the air fryer basket, designed for optimal air circulation during air frying.



Figure 2.6: A standalone image of the baking tray, suitable for various baking and roasting tasks.



Figure 2.7: An internal component, possibly a filter or protective cover, for the appliance.

3. SETUP

Unpacking and Placement

1. Remove all packaging materials and accessories. Inspect the appliance for any damage.
2. Place the microwave on a flat, stable surface that can support its weight and the heaviest food item likely to be cooked in it.
3. Ensure adequate ventilation: leave at least 20 cm of space above the oven, 10 cm at the rear, and 5 cm on both sides.
4. Do not block air vents.
5. Keep the appliance away from heat sources and strong magnetic fields.

Electrical Connection

- Plug the power cord into a grounded electrical outlet. Ensure the voltage matches the rating label on the appliance.

Initial Use

- Before first use, wipe the interior and exterior with a damp cloth.
- Place the turntable ring and glass turntable inside the cavity.

4. OPERATING INSTRUCTIONS

Your FLAMA 1892FL offers multiple cooking modes. Familiarize yourself with the digital control panel and its functions.

Control Panel Overview

The digital touch panel allows selection of various functions, power levels, time, and pre-programmed settings. The central dial is used for adjusting time and weight.

Microwave Function

1. Place food in a microwave-safe container on the glass turntable.
2. Close the door securely.
3. Press the **POWER** button to select the desired microwave power level (e.g., 100% for full power).
4. Turn the dial to set the cooking time (up to 95 minutes).
5. Press **START/+30s** to begin cooking.

Air Fryer Function

Use the air fryer basket and baking tray for best results.

1. Place food in the air fryer basket, then place the basket on the baking tray. Insert into the appliance.
2. Press the **AIR FRY** button.
3. Turn the dial to select the desired cooking time and temperature (up to 230°C).
4. Press **START/+30s** to begin.
5. For even cooking, shake or turn food halfway through the cooking cycle.

Oven Function

This mode utilizes the convection heating for baking and roasting.

1. Place food on the baking tray or in an oven-safe dish.
2. Press the **OVEN** button.
3. Turn the dial to set the desired temperature and cooking time.
4. Press **START/+30s** to begin.

Grill Function

Ideal for browning and toasting.

1. Place food on the grill rack (if included) or directly on the glass turntable.
2. Press the **GRILL** button (or **COMBI** if combined with microwave).
3. Set the cooking time using the dial.
4. Press **START/+30s** to begin.

Defrost Function

The appliance features an automatic defrost function.

1. Place frozen food on the glass turntable.
2. Press the **DEFROST** button.
3. Turn the dial to select the food type or weight as indicated on the display.
4. Press **START/+30s** to begin.

Pre-programmed Functions

The FLAMA 1892FL comes with 23 pre-programmed settings for common dishes. Refer to the appliance's internal label or the full manual for a complete list.

1. Press the **MENU** button repeatedly or turn the dial to select the desired program.
2. Adjust weight or quantity if prompted.
3. Press **START/+30s** to begin.

Child Lock

To activate the child lock, press and hold the **LOCK/ON/OFF** button for 3 seconds. The lock indicator will appear. To deactivate, repeat the process.

5. MAINTENANCE AND CLEANING

Regular cleaning and maintenance will ensure the longevity and optimal performance of your appliance.

Cleaning the Interior

- Always unplug the appliance before cleaning.
- Wipe the interior cavity with a damp cloth after each use to prevent food residue buildup.
- For stubborn stains, use a mild detergent and a soft cloth. Avoid abrasive cleaners or scouring pads.
- The glass turntable and turntable ring can be washed in warm soapy water or in a dishwasher.
- Ensure the interior is completely dry before plugging the appliance back in.

Cleaning the Exterior

- Wipe the exterior surfaces with a soft, damp cloth.
- Do not use harsh chemicals or abrasive materials that could damage the finish.
- Clean the door seals and surrounding areas regularly to ensure proper closure.

6. TROUBLESHOOTING

If you encounter any issues, refer to the table below for common problems and their solutions.

Problem	Possible Cause	Solution
Appliance does not start.	Power cord not plugged in; circuit breaker tripped; door not closed properly.	Check power connection; reset circuit breaker; ensure door is fully closed.
Food not cooking evenly.	Incorrect power level or cooking time; food not stirred or turned.	Adjust settings; stir or turn food during cooking.

Problem	Possible Cause	Solution
Unusual noise during operation.	Turntable not correctly placed; foreign object in cavity.	Re-position turntable; remove any obstructions.
Smoke or burning smell.	Food residue; improper cookware.	Immediately stop operation, unplug, and clean interior. Use appropriate cookware.

If the problem persists after trying these solutions, please contact customer support.

7. SPECIFICATIONS

Feature	Detail
Brand	FLAMA
Model Number	1892FL
Capacity	26 Liters
Power (Max)	1500W
Dimensions (D x W x H)	45 x 52 x 30 cm
Control Type	Touch
Pre-programs	23
Adjustable Temperature	Up to 230°C
Timer	Up to 95 minutes
Included Components	Turntable Ring (and implicitly Glass Turntable, Air Fryer Basket, Baking Tray based on description)

8. WARRANTY AND SUPPORT

For warranty information, please refer to the warranty card included with your purchase or visit the official FLAMA website. If you require technical support or have questions not covered in this manual, please contact FLAMA customer service.

Contact information can typically be found on the manufacturer's website or on your product packaging.